


SORCERER SOFTWARE MANUAL

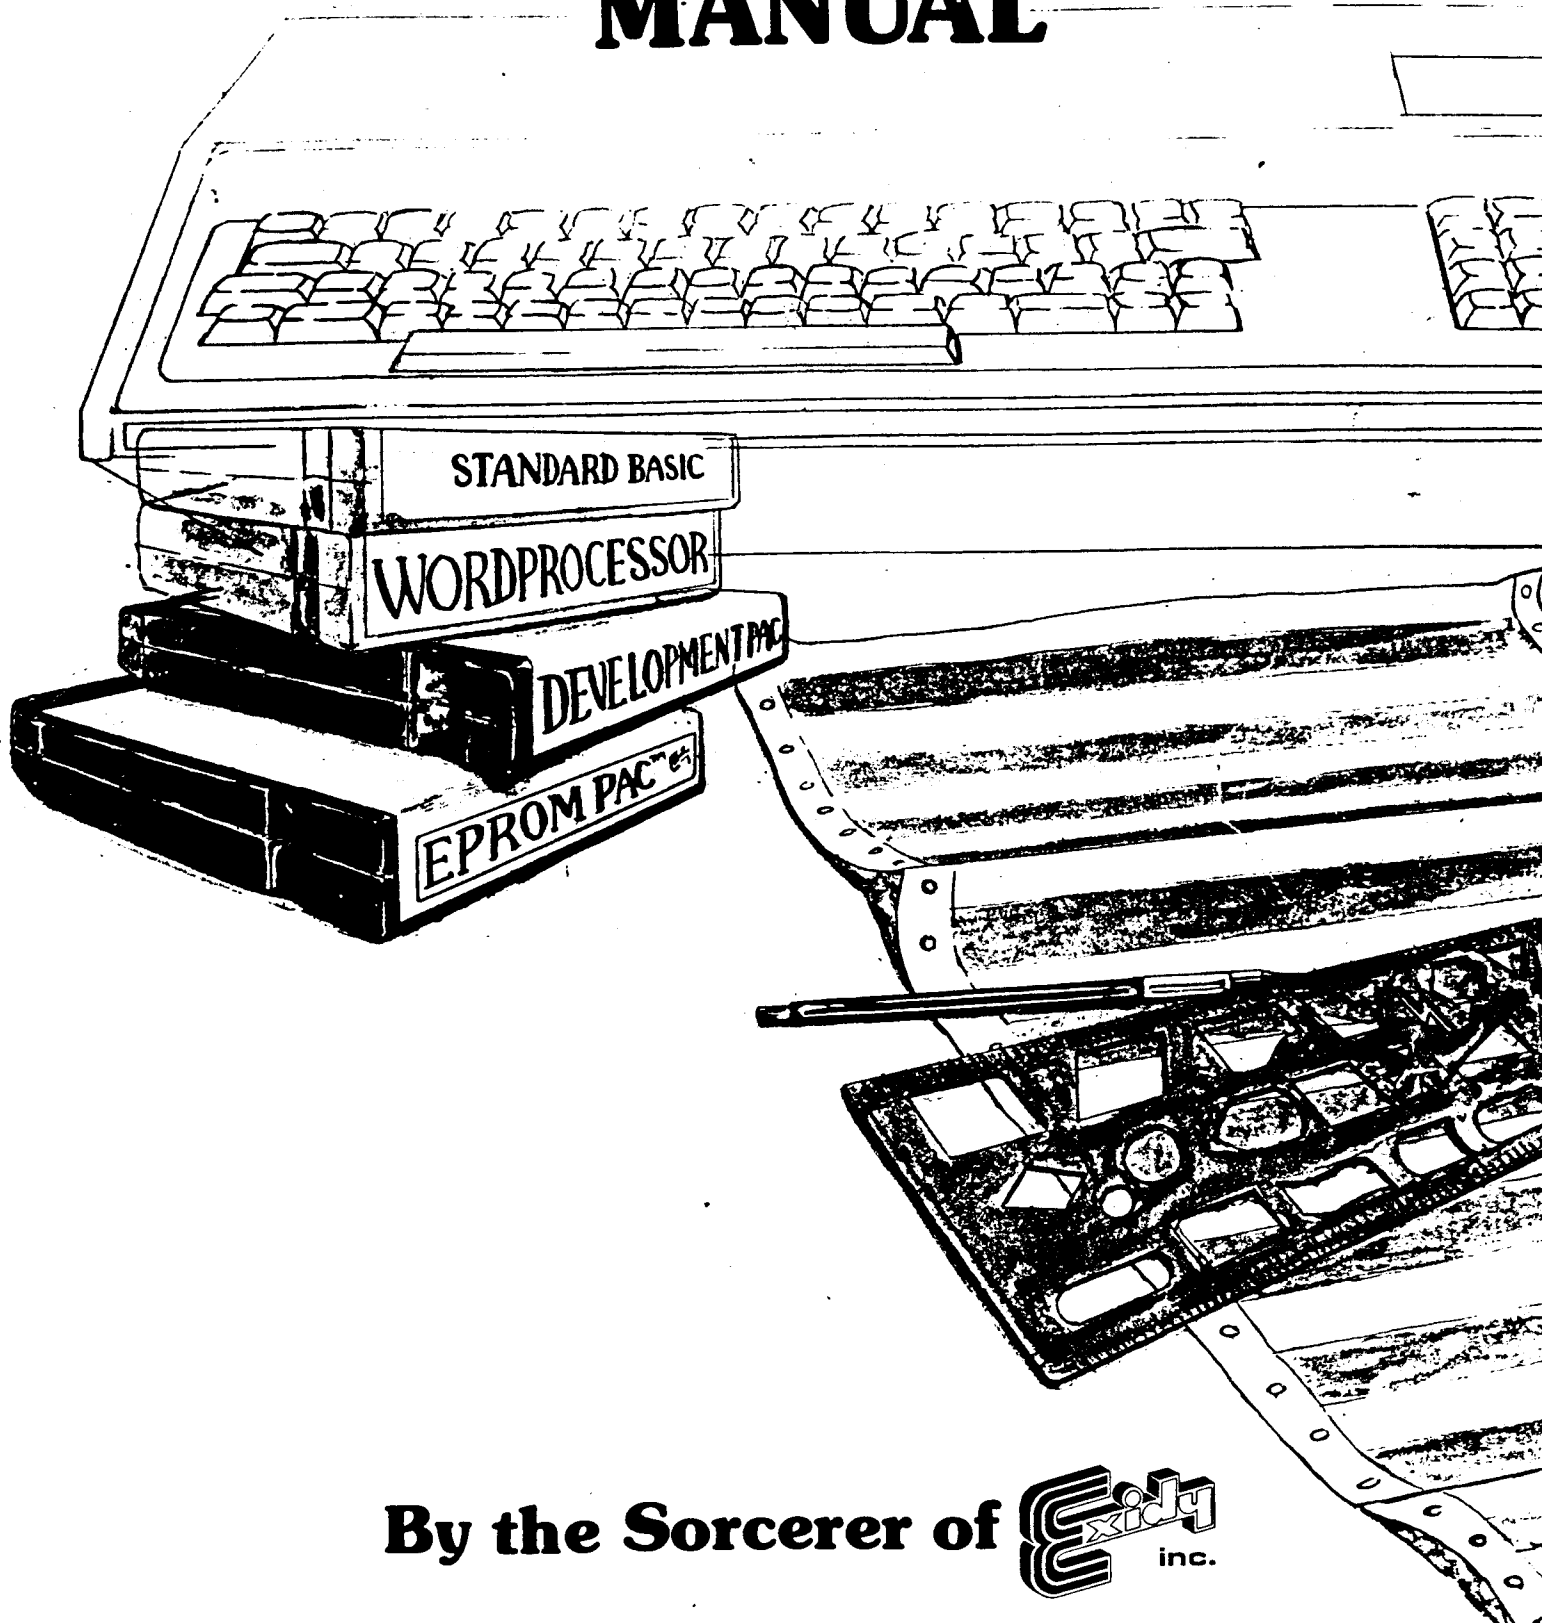

By the Sorcerer of **Exidy** inc.

SORCERER SOFTWARE MANUAL

TABLE OF CONTENTS

PREFACE	3
INTRODUCTION TO THE Z80 MICROCOMPUTER	4
Introduction to the Z80	5
Hex, Binary, and Decimal	5
Bits, Bytes, Addresses and "K"	5
RAM versus ROM	6
Static versus Dynamic	6
Z80 Architecture	6
EXIDY SORCERER COMPUTER ARCHITECTURE	7
Exidy Devices and Ports	8
Exidy Serial Port	8
Exidy Parallel Port	8
Cassette Tape File Format	9
Tips on Loading and Saving Files on Tape	9
Cassette Tape Error Checking	9
Programmable Graphics Character Set	10
Exidy Keyboard Architecture	11
Performing Keyboard Input	12
Cursor Positioning	12
EXIDY STANDARD BASIC	14
BASIC Floating Point Format	15
BASIC Control Area	16
Format of BASIC String Variables and Arrays	17
Format of BASIC Program Statements	17
Format of BASIC Floating Point Variables and Arrays	17
BASIC to Z80 Assembly Language Interface	18
EXIDY POWER-ON MONITOR	19
Monitor Workarea	20
Exidy Monitor Memory Map	20
Monitor Subroutines	22
MONITOR LISTINGS	23
SUMMARY	64

SORCERER SOFTWARE MANUAL

TABLES

Table 1	Z80 Registers	6
Table 2	Sorcerer I/O Port Assignment	8
Table 3	Cassette Tape File Format	9
Table 4	Character Codes	10
Table 5	BASIC Control Area	16
Table 6	Monitor Memory Map	20
Table 7	Monitor Workarea	21
Table 8	Monitor Subroutines	22

INTRODUCTION TO THE Z80

Before you can understand how the Exidy really works, a few fundamentals have to be covered about the architecture of the Z80 MPU (MicroProcessing Unit). First of all, let's discuss the concept of "hex."

Hex, Binary, and Decimal

"Hex" is short for hexadecimal. This is a number system based on sixteen, not 10 as we are used to (decimal). In decimal, we have ten possible digits, 0, 1, 2, . . . , 8, and 9. In hex, we have sixteen. Of course the first ten are 0 through 9 as with decimal. But there are six more, A, B, C, D, E, and F. "A" means 10, "B" means 11, "C" 12, "D" 13, "E" 14, and "F" 15. So a number like 1CB3 makes sense in hex. In decimal numbers each digit represents a "power" of 10, namely "ones," "tens," "hundreds," and "thousands." For example, the decimal number 1895 means 1 thousands plus 8 hundreds plus 9 tens plus 5 ones, or

$$1895 = 1 \times 1000 + 8 \times 100 + 9 \times 10 + 5 \\ = 1000 + 800 + 90 + 5$$

In hex however, each digit (0 through F) represents a power of 16, "ones," "sixteens," "two hundred fifty sixes," and "four thousand ninety sixes." For example, the hex number 1895 can be written as in the example above

$$1895 = 1 \times 4096 + 8 \times 256 + 9 \times 16 + 5 \\ = 4096 + 2048 + 144 + 5 \\ = 6293 \quad (\text{decimal})$$

Another hex number 3CF1 can be seen as

$$3CF1 = 3 \times 4096 + 12 \times 256 + 15 \times 16 + 1 \\ = 12288 + 3072 + 240 + 1 \\ = 15601 \quad (\text{decimal})$$

The reason why understanding the hex number system is so important is because the majority of computers today, big, mini, and micro, are based entirely on hex. This includes the Z80 MPU, which is the basis of the Exidy Sorcerer. Its machine language instructions are in hex; its arithmetic is done in hex; characters typed on the keyboard, displayed on the screen, placed on cassette tape and printed on a printer are all in hex.

If you understand hex, then "binary" (the number system based on 2) should present no problems. There are only 2 digits possible to make any binary number, 0 and 1. These binary digits are called "bits." A bit can be 0 or 1. Each of these digits represents a power of 2 (1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, and 32768). So a number in binary like 0011110011110001 is

$$0011110011110001 = 0 \times 32768 + 0 \times 16384 + 1 \times 8192 + 1 \times 4096 + \\ 1 \times 2048 + 1 \times 1024 + 0 \times 512 + 0 \times 256 + \\ 1 \times 128 + 1 \times 64 + 1 \times 32 + 1 \times 16 + \\ 0 \times 8 + 0 \times 4 + 0 \times 2 + 1 \\ = 8192 + 4096 + 2048 + 1024 + \\ 128 + 64 + 32 + 16 + 1 \\ = 15601 \quad (\text{decimal})$$

But that means, according to the previous example, that since 15601 decimal is also 3CF1 hex, then

$$0011110011110001 \text{ (binary)} = 3CF1 \text{ (hex)}.$$

This is no mere coincidence. Let's see why. If we look at a "4-bit binary number" (i.e., a number in binary made up of only four digits of 0's and 1's), then the smallest it could be is 0000 (0 decimal), and the largest it could be is 1111 (15 decimal or F hex). Thus every digit in hex, 0-F, can be expressed exactly as a 4-bit binary number:

Binary	Decimal	Hex
0000	0	0
0001	1	1
0010	2	2
0011	3	3
0100	4	4
0101	5	5
0110	6	6
0111	7	7
1000	8	8
1001	9	9
1010	10	A
1011	11	B
1100	12	C
1101	13	D
1110	14	E
1111	15	F

In other words, a hex digit is really just another way of writing 4 bits, or, every 4 bits of a binary number can be grouped as 1 hex digit. Let's see how that works with the numbers we just did. 001110011110001 can be broken into groups of 4 bits (right to left) as follows:

$$0011 \quad 1100 \quad 1111 \quad 0001$$

If each 4-bit group is viewed individually, they calculate to

$$0011 = 3 \text{ decimal (3 hex)} \\ 1100 = 12 \text{ decimal (C hex)} \\ 1111 = 15 \text{ decimal (F hex)} \\ 0001 = 1 \text{ decimal (1 hex)}$$

So it can be written

$$\begin{array}{cccccc} 0011 & 1100 & 1111 & 0001 & & \text{binary} \\ 3 & C & F & 1 & & \text{hex} \end{array}$$

So hex and binary are actually the same thing, with different groupings. Another example, to write 0F8D hex in binary

$$\begin{array}{cccccc} 0 & F & 8 & D & & \text{hex} \\ 0000 & 1111 & 1000 & 1101 & & \text{binary} \end{array}$$

which, when pieced back together, becomes

$$0000111110001101 = 0F8D.$$

Bits, Bytes, Addresses, and "K"

Enough about decimal, hex, and binary. We now know how numbers are written on the Z80. Let us take a look at how memory is organized.

The smallest unit of information that can be placed in the memory of just about any computer made, including the Z80, is a bit, the same bit we saw earlier. This only holds a 0 or a 1 however, and is too small for normal numerical use. So a larger unit was created, called a "byte." A byte is just eight bits or two hex digits grouped together.

So a byte can contain a number from 00000000 binary (00 hex, 0 decimal) to 11111111 binary (FF hex, 255 decimal). Each unique byte in the Exidy's memory space is assigned a four-hex digit (two-byte) number called an "address." This address identifies the particular byte and its contents. Addresses start at 0000 hex and end at FFFF hex (65535). Thus, the Exidy (Z80) can have up to 65536 bytes of memory. Another way programmers like to put this is to use the term "K." A "K" is just another way of saying the number 1024 decimal (400 hex). So 65536 boils down to 64K (64x1024 = 65536).

RAM versus ROM

Since we are on the subject of memory, there are two types. In one type the contents can never be changed. Information can only be "read" from it. This is called **Read Only Memory** or **ROM** (computerists love abbreviations or acronyms). ROM is usually used to contain programs or data which is to be present in the same state all the time. For example, the Exidy Monitor program is in ROM (starting at memory byte address E000) and Exidy BASIC is in ROM (the ROM-PAC starting at address C000). ROM can have its contents "burned in" permanently at the factory, or can be burned in once by the programmer (called **PROM** or **Programmable ROM**), or can be erased by strong ultraviolet light and burned in over and over again (called **EPROM** or **Eraseable PROM**).

However, for programmers to write and run programs, we need memory which we can change or modify the contents. This is called **Random Access Memory** or **RAM**. When the size of an Exidy's memory is given (e.g., 8K, 16K, 32K), this number applies only to RAM, or user-modifiable memory. All Exidys have the same ROM area potential. So a 16K Exidy has 16x1024 or 16384 bytes of RAM.

Static versus Dynamic

The above two terms are usually only applied to RAM. Static RAM has the ability to hold its contents indefinitely as long as electrical power is applied. Dynamic RAM, on the other hand (in milliseconds usually), loses or leaks its contents, and the data must be re-written or refreshed to the RAM often enough to keep the data from disappearing altogether. Typically static RAM requires more power, is more expensive, but is faster. The Exidy and many other Z80 based systems use dynamic RAM because of power and cost considerations, and also because the Z80 MPU is well-suited to interface to dynamic RAM (e.g., it can be made to do the RAM refreshing).

Z80 ARCHITECTURE

The Z80 microprocessor is an 8-bit based machine. In other words, its data flow and arithmetic is usually on a 1-byte basis. It can address up to 64K bytes of memory. On the Exidy, a maximum of 32K bytes of this can be placed onboard (in the keyboard unit), while another 16K can be located as ROM for the Monitor and various ROM cartridges.

In addition to having 64K of possible memory, the Z80 has twenty-two registers. These are special high speed memories which reside on the MPU chip, and are used for arithmetic and program logic functions. These are all 1 byte in size unless otherwise noted:

Table 1. Z80 Registers

A	— the accumulator. This is the central register
F	— the flags register. Each bit represents a CPU status; e.g., the "Z" bit is on if the A register contains 0; the "S" bit is on if A is negative
B	— general use register
C	— general use register
D	— general use register
E	— general use register
H	— general use register
L	— general use register
SP	— 2-byte register containing the current stack address
PC	— 2-byte program counter containing the address of the next instruction to be executed.
IX	— 2-byte index register. Usually will contain an address to be used with a constant offset or displacement.
IY	— 2-byte index register with the same type of use as IX.
I	— register used to allow processing of external interrupts to the Z80 from the S-100 bus
R	— refresh register which can be used to provide dynamic RAM refreshing operations.

Registers A, F, B, C, D, E, H, and L have an alternate register called A', F', B', C', D', E', H', and L'. Only one set can be used at a time, while the other set allows space to save important program information. The EXX and EX Z80 instructions are used to flip back and forth between them. Also some registers can be connected together to create 2-byte, 16-bit register pairs. These are AF, BC, DE, and HL.

For more detailed information on the Z80 MPU the reader is referred to the Zilog publication "Z80 CPU, Z80A CPU Technical Manual," product number 03-0029-01.

EXIDY SORCERER COMPUTER ARCHITECTURE

Exidy Devices and Ports

The Sorcerer has the following I/O devices or ports. Listed also is the Monitor command(s) to activate each:

Table 2. Sorcerer I/O Port Assignment

a. the keyboard	SET I=K
b. the video screen	SET O=V
c. cassette tape #1	SET I=S, SET O=S
d. cassette tape #2	SET I=S, SET O=S
e. serial RS-232 interface	SET I=S, SET O=S
f. parallel interface	SET I=P, SET O=P
g. Centronics printer interface	SET O=L

Note that these are onboard ports. This list does not include any devices added to the Exidy via the S-100 bus expansion facility.

The keyboard is implemented as part of the Z80 I/O port number FE hex (254), input bits 0-4, output bits 0-3. The video screen needs no port but uses the 1920-byte RAM area at address F080 as a 64 by 30 screen. There is a port FE bit (input 5) indirectly related to video processing which signals when vertical retrace is in progress on the TV screen. The two cassette interfaces are part of the serial interface and provide an audio translation of the digital data suitable for recording on tape quite reliably.

Exidy Serial Port

The serial port allows data transfer to occur between the Exidy and external devices (such as printers, modems, cassette tape, and the like). Data travels one bit at a time in a predefined conventional sequence called asynchronous transmission protocol.

The protocol defines how the data is to look, and the speeds at which it is to travel. For example, each 8-bit byte of data is actually sent as a 10- or 11-bit stream, sometimes even longer. The 8 bits must be preceded by a bit called a start bit, and must be followed by one or usually two or more stop bits. These bits also must be sent and received at a particular speed, predetermined by the sender and receiver. The speed is given in bits per second, or commonly called "baud" (derived from Baudot, the name of one of the forerunners of terminal communications). Thus, 300 baud means 300 bits per second. Since it takes about 10-11 bits to transmit a byte or character, this means about 30 characters per second. The Exidy serial interface "speaks" this common language, and operates at one of the two speeds, either 1200 baud (120 cps) or 300 baud (30 cps).

The serial port is actually two devices, an RS-232C interface and the dual cassette interface. RS-232C is the name given to a widely accepted standard of signal voltage and logic levels and the pinouts of the 25-pin plug or connector used for cabling between the sender and receiver. The asynchronous protocols signals are usually sent via this RS-232C standard. Another part of Z80 port FE (output bit 7) determines whether the serial port is RS-232C (bit on) or dual cassette (bit off). Cassette is the default. Output bit 6 controls the baud rate (1 = 1200, default, 0 = 300). Port status is placed on port FD while data transfer occurs on FC. For example, to connect a 300

or 1200 baud RS-232C serial printer to the Exidy, follow instructions given with the printer and from Exidy. However, the following guidelines may be used:

1. Connect pin 7 of the serial DB25 connector to printer ground pin 7.
2. Connect pin 3 to printer pin 2.
3. Connect pin 2 to printer pin 3.

Reset the Exidy, enter the Monitor (BYE in BASIC), enter the command SET O=S, and all output which would have gone to the screen will go to the printer, until Reset or SET O=x is entered (x is usually V to return to video). There is also software available from Exidy providing a serial driver, and the ability to use the serial interface to turn the Sorcerer into a dumb terminal connected to another computer. Typically a modem and possibly an acoustic coupler may be required here. Reverse pins 2 and 3 in the above guidelines for this use.

The cassette interfaces may also be used with motor control. Pins 12 and 24, 13 and 25 can be used to turn cassette number 1 and 2 off and on for SAVEs, LOADs, FILEs and BATCHs commands. Pins 15, 5 and 20, 16, 18, and 21 are the mike input, auxiliary input, and earphone output connections. Note that cassette number 1 has these mike and ear connections duplicated as RCA plugs on the back of the Sorcerer.

Exidy Parallel Port

The parallel port differs from the serial port mainly in that data is transferred an entire byte at a time. This is ideal for fast printers and sometimes even some floppy disk units. The Sorcerer also provides an interface to the popular Centronics printer. The same parallel port is used, but unique software "handshaking" is done by the Monitor I/O driver. An example of the handshaking which occurs between the Sorcerer and printer might be the following "electronic conversation" over port FE, the parallel interface status port:

Printer: "Wait, I'm still busy, send no data."

"OK, now you can send."

Exidy: "Here it is, let me know when I can send more."

The 8-bit (and at times status) rides on port FF.

To successfully hook up a Centronics or Centronics-like printer to the parallel port, again follow the printer's and Exidy's instructions. Here are some additional guidelines:

1. Connect parallel pins (DB25 connectors again) 5-7 and 16-19 (data bits 0-6) to the printer's data lines 0-6 (see printer's pinouts).
2. Connect pin 4 (data output bit 7) to the printer's input strobe line, a negative (true is low, false is high) pulse indicating data is ready to be transmitted.
3. Connect pin 1 to the printer ground.
4. Connect pin 25 (input data bit 7) to the printer busy line, indicating the printer is not ready to accept any data (probably still printing previous data).
5. Pins 2 and 3 (output accepted and available) and others may also be required depending on the printer model.

Once this is done, Reset the Exidy, enter the Monitor, type in the command SET O=L, and from that point on all output will be routed to the screen and the printer, until Reset occurs or until another SET O=x command is entered.


CASSETTE TAPE FILE FORMAT

When a SAVE, LOAD, or FILES command is done from the Monitor, or when a CSAVE or CLOAD is done from BASIC, files are processed from the cassette tape device on the serial interface. This applies to both cassette #1 and #2. Cassette tape motor-on routine can be found at E024 (-8156), motor-off at E027 (-8153), cassette save at E02A (-8151), and cassette load at E02D (-8148).

Cassette files on the Exidy have the following appearance, whether at 300 or 1200 baud:

1. Inter-file tone
 - a. a high frequency tone always output by the cassette interface when data is not present.
2. 101-byte leader
 - a. 100 bytes of 00 (nulls)
 - b. 1 byte of 01 (control-A or SOH, Start-Of-Header).
3. 16-byte file header (see description in MWA above).
4. CRC for header
 - a. 1 byte CRC for error checking. Details later.
5. Up to 256 bytes of data.
6. CRC for above data block (1 byte again).
7. Repeat 5 and 6 until data exhausted. The last data block may be short (less than 256 bytes). CRC still follows.
8. Inter-file tone (same as before the file).

This format is used by both BASIC and machine language files. It is depicted pictorially as follows:

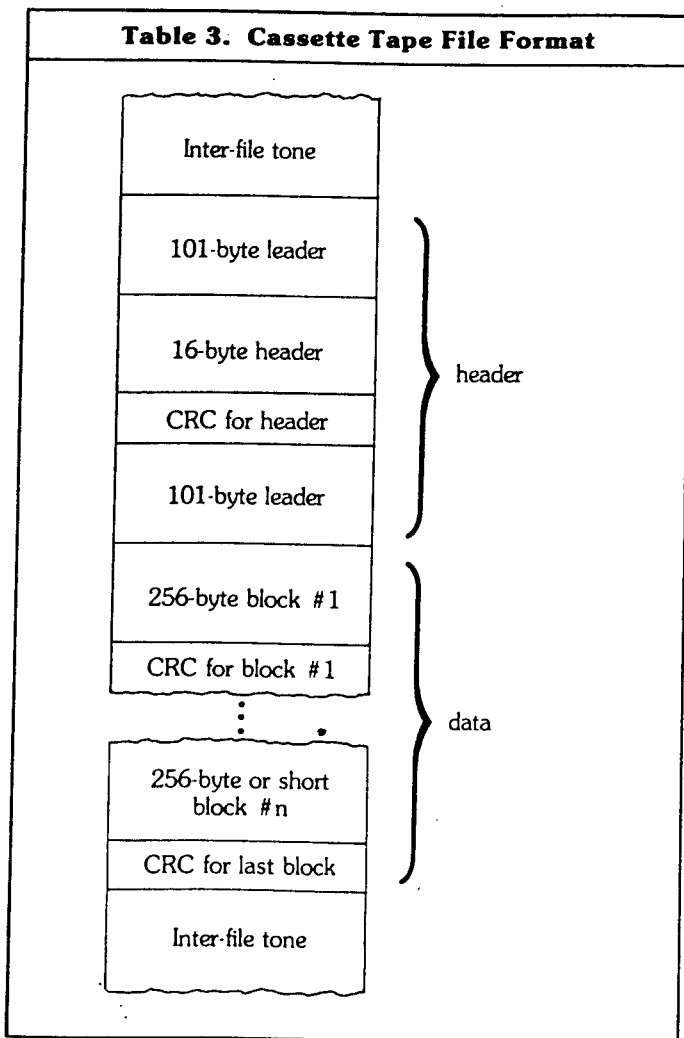

To LOAD or CLOAD a file, or to perform a FILES command, the Monitor scans the tape (whichever is on) for the leader. Then the header is read into the MWA and the "FOUND . . ." message is sent to the current SEND device. The data portion is then either skipped (wrong file, or FILES command) or loaded. All CRCs are always validity checked for any of these commands. Thus, to check all the bits on an entire tape for errors, it is sufficient to perform a FILES command.

Note that the default tape transfer rate is 1200 baud. A much more reliable method of saving data is to use 300 baud. However it will take four times longer to SAVE and LOAD, and use a lot more tape. This is accomplished with the SET T=1 command.

Still, even at 1200 baud, the Sorcerer tape system is the best I've come across. It is the most reliable, and with its file headers, it is the easiest to use. The user does not even need a recorder with a tape digital counter to find files with these headers. The cleverness of the tape system makes the Exidy basic offering (just cassette, no expansion to S-100 capability, diskette, etc.) a very attractive low-priced system.

Tips on Loading and Saving Files on Tape

The following hints can be used to minimize problems with cassette recording of files:

To Load:

1. Use a relatively inexpensive cassette recorder (\$30-\$60) with ALC (Automatic Level Control). This means you have no control over the volume or tone of the recordings. All are made exactly the same way. Strangely enough, experience shows that expensive recorders work worse.
2. Connect the MIC wire to the microphone input. Do *not* use the auxiliary input on most recorders. The signal will be too weak.
3. Connect the EAR wire to the earphone or monitor jack.

To Play:

1. You must find the correct volume and tone for your recorder. As a first guess, set volume and tone to 7-8 out of 10, or 3/4 high.
2. Listen to the tape play through the speaker. The intra-file tone should be louder than normal listening volume, maybe even as loud as possible without distortion and noise. The data should sound high-pitched and clear, like static.
3. Try loading a file. Tinker with volume and tone until at least a file header is read without a CRC error ("FOUND . . ." message appears). Now you are close enough to the correct settings.
4. Once found, the correct settings should be able to be used for all tapes recorded on that recorder.

Cassette Tape Error Checking

The CRC (Cyclic Redundancy Check) method is used to detect bit transmission errors in cassette data recordings. The CRC is stored at MWA + 46. CRC checking is done with this algorithm: When the file is first written to tape (i.e., when the 101-byte leader is written), the CRC is 0'd. For every data byte, in program or header, the current CRC is subtracted from the data (data-CRC), and the ones complement of this is used as the next CRC for the next byte (i.e., FF - (data - CRC), or all the bits are flipped - 0's become 1's, and 1's 0's). When the file or block is completely written, the current CRC is written as the final byte. Note: this is why BASIC programs grow by one byte every time they are loaded and re-saved. When the file is loaded again, the CRC is calculated again as above, and is compared to the last byte of the block (the CRC written). A match means no errors (almost always), while a mismatch means an error. This is identical in BASIC files as in machine language files, since the same Monitor routines are used to write/read tapes.

Programmable Graphics Character Set

Each byte in memory can contain exactly one character which can be input from the keyboard, displayed on the video, printed, etc. Thus, there are 256 possible combinations of these characters (00-FF, 0-255). These codes can be mapped as follows on the Exidy. Again, codes are given in both hex and decimal.

Table 4. Character Codes

Code	Description	Code	Description
00-7F	0-127	128 standard ASCII characters:	
00-1F	0-31	32 ASCII control characters (e.g., CR, LF, etc.).	
20	32	ASCII blank	
21-2F	33-47	ASCII punctuation	
30-39	48-57	ASCII numbers 0-9	
3A-40	58-64	ASCII punctuation	
41-5A	65-90	ASCII upper case A-Z	
5B-60	91-96	ASCII punctuation	
61-7A	97-122	ASCII lower case a-z	
7B-7F	123-127	ASCII punctuation and "delete" character (7F)	
80-BF	128-191	64 standard Exidy keyboard graphics. These are obtained by depressing the GRAPHICS key	
CO-FF	192-255	64 programmable graphics characters. These are obtained by depressing SHIFT and GRAPHICS keys:	
C0	192	GRAPHIC SHIFT 1	
C1	193	2	
C2	194	3	
C3	195	4	
C4	196	5	
C5	197	6	
C6	198	7	
C7	199	8	
C8	200	9	
C9	201	0	
CA	202	:	
CB	203	- (hyphen)	
CC	204	<	
CD	205	(tab)	
CE	206	Q	
CF	207	W	
D0	208	E	
D1	209	R	
D2	210	T	
D3	211	Y	
D4	212	U	
D5	213	I	
D6	214	O	
D7	215	151	— S
D8	216	152	Q SEAT
D9	217	153	O HEART
DA	218	154	P
DB	219	155	P
DC	220	156	L
DD	221	157	L
DE	222	158	▲
DF	223	159	▲
E0	224	160	Y
E1	225	161	F
E2	226	62	15
E3	227	63	◆ DIAMOND
E4	228	64	◆ CLUB
E5	229	165	◆
E6	230	66	◆
E7	231	67	◆
E8	232	68	◆
E9	233	69	◆
EA	234	70	◆
EB	235	71	/
EC	236	72	/
ED	237	73	+
EE	238	74	—
EF	239	175	—
F0	240	76	—
F1	241	77	—
F2	242	78	—
F3	243	79	—
F4	244	180	—
F5	245	181	—
F6	246	82	—
F7	247	83	—
F8	248	84	—
F9	249	185	—
FA	250	86	—
FB	251	87	—
FC	252	88	—
FD	253	89	—
FE	254	190	—
FF	255	191	—
			P
			[
] A
			S
			D
			F
			G
			H
			J
			K
			L
			:
			@
			— (underscore)
			Z
			X
			C
			V
			B
			N
			M
			. (comma)
			. (period)
			/ (slash)
			— (on numeric pad)
			7 (on numeric pad)
			8 (on numeric pad)
			9 (on numeric pad)
			+ (on numeric pad)
			4 (on numeric pad)
			6 (on numeric pad)
			x (on numeric pad)
			1 (on numeric pad)
			2 (on numeric pad)
			3 (on numeric pad)
			+ (on numeric pad)
			0 (on numeric pad)
			. (on numeric pad)
			= (on numeric pad)

Each of the preceding 64 characters can be defined to be any design or shape desired. Each consists of 8 bytes in memory, or 64 bits. These sets of 8 bytes (64 of them) start at address FE00 (-512). On the screen each character consists of 8 lines of 8 dots, or 64 dots. Thus, each of the 8 bytes defining the character in memory corresponds to one of the 8 lines of the character in the display, and each of the 8 bits in that byte is a dot in that line. If the bit is on (1), then the dot is white. If the bit is off (0), then the dot is black. For example, a circle with a dot in the middle could be defined as a character. It would require defining each of the 64 (8x8) dots as 64 (8x8) bits in memory. So

.....	00000000	binary	00	hex	0	decimal
••xxx•••	00111000		38		56	
•x•••x••	01000100		44		68	
x•••••x•	10000010		82		130	
x•x•••x•	10010010		92		146	
x•••••x•	10000010		82		130	
•x•••x••	01000100		44		68	
••xxx•••	00111000		38		56	

The first 128 characters (00-7F, ASCII) are not under user control. The information required to display these characters is located in PROM at F800-FBFF (1K). The next 64 characters (80-BF, Exidy Graphics) can be programmed if desired, but they are already programmed to be standard keyboard graphics. The 64x8 (512) bytes for these are located at FC00-FDFF. This RAM can be changed at any time by the programmer to redefine these characters. However, the Monitor refreshes this area from its ROM every time a RESET

occurs, or whenever the video screen is cleared (e.g., when CLEAR is pressed, or when a Form Feed ASCII control is displayed). This will clobber any such modifications.

The last 64 characters (C0-FF) are completely under programmer control. They are always displayed as nonsense until they are "defined" by turning on and off the bits of the 8 bytes associated with the character. These bytes are in RAM from FE00 to FFFF (-512 to -1). For example, the character C0 (192) is a FE00-FE07 (-512 to -505), C1 (193) at FE08-FE0F (-504 to -497), C2 at FE10-FE17, and so on, until FF (255) is at FFF8-FFFF (-8 to -1). The formula to calculate where the 8 bytes in RAM begin for any of these 128 characters which can be programmed (80-FF) is (assume "c" is the character code of the character to be programmed):

$FC00 + (8 * (c - 80))$ hex, or
 $(8 * (c - 128)) - 1024$ BASIC decimal

where "c" ranges from 80-FF (128-255).

For example, to print a "blot" (all dots on, a white square) on the screen followed by the above circle with the dot in the middle, the following BASIC program can be written. The blot will be made from the first programmable graphic 192, and the circle/dot will be 193:

```
10 FOR I=0 TO 7: REM 8 BYTES AT FE00 (-512) FOR BLOT
20 POKE -512+I,255: NEXT: REM TURN ON ALL BITS/DOTS
30 FOR I=0 TO 7: REM 8 BYTES AT FE08 (-504) FOR CHR #193
40 READ J: REM GET A BYTE VALUE FROM THE TABLE AS ABOVE
50 POKE -504+I,J: NEXT: REM TURN ON CORRECT DOTS
60 PRINT CHR$(192);CHR$(193): REM PRINT THE 2 NEW CHRS
70 DATA 0,56,68,130,146,130,68,56: REM DATA CHR #193
80 END
```

EXIDY KEYBOARD ARCHITECTURE

The keyboard on the Exidy has a clever physical (hardware) and logical (software) architecture.

It actually resides on small parts of input and output ports FE (254). It is composed of a potential 80 keys, organized as sixteen rows of five columns each. For each one of the sixteen rows of possible keys (0-F, 0-15, output port FE bits 0, 1, 2, and 3) any one of the five columns of possible keys can be depressed (0-4, input FE bits 0, 1, 2, 3; and 4).

For example, row 0 column 0 is ESC, row 9 column 3 is a P, and row 15 column 4 is the = key on the numeric pad. Not all 80 possibilities are in use (about three are meaningless). Each of the valid possibilities can assume any one of five states:

1. When SHIFT is depressed — upper case, punctuation; no numerics or graphics; cursor, arrow keys operative.
2. When LOCK is depressed — this is a CAPS LOCK, so upper case letters, numerics, and punctuation are valid, but no graphics or cursor movement keys.

3. When CONTROL is pressed — this produces ASCII control characters, some numerics, and cursor movement; no graphics.
4. When GRAPHICS is pressed — this is standard Exidy keyboard graphics (codes 80-BF). If SHIFT is also pressed simultaneously, the programmable graphics codes C0-FF are used.
5. If none of the above are pressed — standard lower case and numerics and punctuation are used; no graphics or cursor movement.

The Monitor ROM area EC1E-EDFD contains the tables necessary to allow the keyboard input routine to translate the row/column of the key pressed into a 1-byte character codes, depending on which of the five states the keyboard is in. These tables are actually broken down into six tables total: the first is a what-to-do table to calculate the state etc., and the last five are the character codes for the five states.

Performing Keyboard Input

To get keyboard input from the user from BASIC or Z80 Assembly Language without INPUT statements, a very useful subroutine can be used. In fact, this can be done such that the program sees each character as it is typed without having to wait (or ever get) a carriage return (RETURN). For example, a program can react and respond immediately to input commands as they are typed.

From BASIC, characters can be input with the following example assembly routines. Place this simple and relocatable Monitor keyboard routine driver interface at, say, location F0 (240). It can go anywhere, but F0 is a good start.

```
F0: CD15E0 SCAN: CALL QCKCHK ;Control-C pressed?
F3: C2FADF JPNZ BASIC ;Yes, back to BASIC (warm)
F6: CD09E0 CALL RECEIVE ;No, get input character
F9: 28F5 JRZ SCAN ;Nothing yet, continue
FB: 32FF00 LD (CHR),A ;Got it, save at loc FF
FE: C9 RET ;Return after USR call
FF: 00 CHR: NOP ;Where byte stored for BASIC
```

The routine first checks to see if CTL-C, ESC, or RUN/STOP have been entered, meaning the user wants to quit. If so (Not Zero) back to READY level. If not, the current RECEIVE device (usually keyboard) is scanned for a character. If none (Zero), scanning continues. If found, the character is put at location FF (255). Control is then return to BASIC after the USR call. The following example BASIC program can use this routine:

```
10 PRINT "ENTER CHARACTER"
20 POKE 260,240: POKE 261,0: REM LOC 00F0 IS 240,0
30 Z=USR(Z): REM CALL SCAN
40 REM IF WE GET HERE LOC FF HAS A CHARACTER
50 A$=CHR$(PEEK(255))
60 IF A$="S" THEN STOP: REM STOP IF S ENTERED
70 PRINT A$: REM ECHO THE CHARACTER
80 GOTO 20: REM LOOP TILL S ENTERED
```

These are both simple routines that can be modified to be as fancy as possible.

From Z80 machine language there is no need to necessarily store the character in RAM. It is returned in the accumulator by the RECEIVE routine.

The above programs accept their input from the current RECEIVE device. To set this device the SET I=x command is used.

Cursor Positioning

Cursor positioning is the process of moving the cursor (that underscore character) on the screen to locations other than where it usually is when standard BASIC or Monitor video output is done (e.g., PRINT, DUMP, etc.). This is very useful especially when data is to be placed on the screen but not in a line by line fashion. For example, if a graphic diagram is displayed and certain segments are to be labelled, the cursor can be moved directly to each one and the output generated in a random fashion on the screen. Also many times the usual output statements will destructively erase what is already on the screen. For example, if something is to be printed in the middle of a line but there is information already in the beginning of that line, an output statement will erase it. Cursor positioning to the middle will not.

To perform cursor positioning from Assembly Language or BASIC is quite simple:

1. Decide what line the cursor is to be on. There are 30 numbered 0-29. Call this "l".
2. Decide what column of that line the cursor is to be on. There are 64 numbered 0-63 on each line. Call this "c".
3. Calculate $64 \times l$. This is the offset from the beginning of the screen to the first column (0) of line l. This is easy in BASIC ($Q=64 \times L$). In machine language, just shift 1 left six times, or, assuming 1 were in register E: *

```
LD D,0 ;DE=01
LD B,6 ;TIMES TO SHIFT
X: SLA E ;SHIFT E
RL D ;SHIFT D
DJNZ X ;6 TIMES, DE=64x1
```

Or if 1 were in register pair HL, just execute the ADD HL,HL instruction six times in a row to double 1 six times, or multiply by 64.

4. Find the MWA. This is described in detail earlier. For the examples below, assume register IY points to the MWA for Assembly, and AD for BASIC.
5. At offset 68 hex (IY + 68 or AD + 104) is 2 bytes where $64 \times l$ is to be stored:

```
LD (IY+68),E
LD (IY+69),D
```

or in BASIC, POKE the low part (low byte) of the number $64 \times l$ ($64 \times l \text{ MOD } 256$) into AD + 104, and POKE the high part (byte) of $64 \times l$ ($\text{INT}(64 \times l / 256)$) at AD + 105. Now, $64 \times l \text{ MOD } 256$ is just the remainder when $64 \times l$ is divided by 256, and this can be calculated as follows in BASIC:

```
905 L2=64*L
910 MD=L2 - INT(L2/256)*256
```

To do the POKEs, assuming AD is already pointing to the MWA:

```
915 POKE AD+104,MD
916 POKE AD+105,INT(L2/256)
```

6. At offset 6A in the MWA (IY + 6A, AD + 106) is 2 bytes where "c" is to be stored. If it were in register A:

```
LD (IY+6A),A
LD (IY+6B),O
```

or in BASIC

```
930 POKE AD+106,C
940 POKE AD+107,O
```

BASIC also requires you to put c at location 1BE (398) in the BCA:

```
950 POKE 398,C
```

7. Call the Monitor cursor move routine. This will replace the current cursor with the character which was at that spot ("undemeth" it), move the cursor to the requested spot and save the character there. From Z80:

```
CALL E9CC
```

From BASIC the USR technique must be used:

```
960 POKE 260,204: REM HEX CC
965 POKE 261,233: REM HEX E9
970 X=USR(X): REM CALL E9CC
```

8. Now a standard output statement like PRINT can be done and the output will begin at this new cursor location.

With this new technique, horizontal and vertical tabbing can also be done.

Horizontal tabbing may also be done in Basic directly with the use of the TAB(n) function.

Vertical tabbing may be done with Control-Z (down arrow) characters. For example, to tab to line 15 (0-29), home the cursor with a Control-Q — hex 11 — 17 decimal — and Control-Z fifteen times (Control-Z is hex 1A, decimal 16):

```
2220 PRINT CHR$(17); : REM HOME
2240 FOR I=1 TO 15
2260 PRINT CHR$(26); : REM DOWN ONE LINE
2280 NEXT
```

PRINT TAB(n) can then be used to tab horizontally on that line.

**EXIDY
STANDARD
BASIC**

BASIC Floating Point Format

Numbers in BASIC are not integers. Fractions are allowed. Thus, the decimal point can move. For example, the decimal point "floats" when 13.25 is divided by 10 — 1.325. It is from this idea that the term "floating point" was derived.


These numbers are stored by BASIC in four bytes of memory. Each number has three parts:

1. the sign (+ or -);
2. the "mantissa" (the actual number, but with the point shifted to the left of the leftmost 1 bit of the number). So the number 127 decimal (7F, 01111111) is a mantissa if it is thought of as .1111111;
3. the "exponent," which is how much the point had to be shifted in the number to produce the mantissa with the point at the left.

This all sounds very complex, but it actually is not. Let's take an example, say 13.5 decimal. In hex this would be equal to D.8 (13 + 8 * 1/16). Remembering that hex is just groups of four bits, the binary equivalent of 13.5 would be 1101.1000. To create a mantissa from this, we must shift the point (in this case, the "binary point," not the decimal point) to the left four places, producing .11011000. The exponent can now be calculated. It is always **positive** if the mantissa shift was to the **left**, **negative** if to the **right**, and **zero** if **no shift** was necessary. Thus, the exponent in this example would be +4 (four to the left). However, we are not quite done. Rather than worrying about how to express a negative number exponent, 128 decimal (hex 80) is always added to the exponent to produce the final result. Thus, the final exponent is 84 (132). Now we come to the sign. Since the digit to the far left of the mantissa is always 1 (because we shifted until that was the case), then the sign can be stored in this bit without losing any information. If the number is positive or zero, then the sign bit will be 0. If negative, then the sign bit will be a 1. So the mantissa for 13.85 .11011000 changes to .01011000. To assemble this number, first we put the exponent 84 then the mantissa filled out to the right to fill out the four bytes:

10000100 .01011000 00000000 00000000

Now if we ignore the point, since it is always in the same place, and convert to hex, we have:

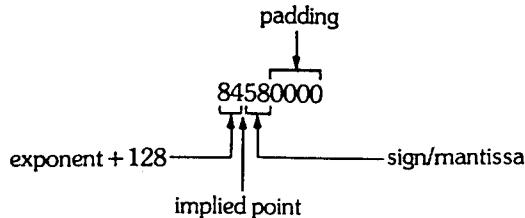

If the original number were -13.5 instead, then nothing would change except the sign. That is the mantissa would change from .01011000 to .11011000, so the new number would be

84D80000

In the reverse direction, to convert floating point back to decimal, let's use 88FF4000 as an example:

1. Examine the exponent (88) and subtract hex 80 (128). In this example 88 - 80 = 08. But this may produce a negative number.
2. Examine the mantissa with the implied point (.FF4000).
3. If the left bit (high order, the one next to the point) is on (it is), then the number is negative. Otherwise it is positive.
4. In either case, turn that bit on.
5. Shift the point according to the exponent from step 1 (08 here). If plus, shift right, if minus, left, if zero, no shift. Since we have +8, shift the point right 8 bits.

.111111110100000000000000

6. The number is now FF.4000, and with the sign, -FF.4000, or -255.25 decimal.

The only special case is the number 0. Here the exponent is 00. Other examples are:

1815	=	hex 717	=	8B62E000
1		1	=	81000000
-1		-1	=	81800000
-5		-8	=	80800000
0		0	=	0061000

The last idea that must be mentioned is that the number is actually stored in memory in **reverse**, so the number eemmnpp is stored pppnmnee. For example, decimal 1815 in the above example:

00E628B

BASIC CONTROL AREA

This is a discussion of the workarea in RAM used by BASIC, called the BASIC Control Area, or BCA. The BCA begins at address 100 (256), and has an overall appearance like

Table 5. BASIC Control Area

100	BASIC Control Information
1D5	BASIC Program Source
a	BASIC Program Variables <i>PVF</i>
b	BASIC Program Arrays <i>PPA</i>
c	FREE SPACE
d	STACK
e	BASIC String Space <i>SSP</i>
	Monitor Stack
	MWA

In detail, RAM locations 100-14E (256-334) are copied from the BASIC ROM (address C258) when a BASIC Cold Start occurs (i.e., after Reset or a PP X command is entered). The BCA described below includes only those areas which are of direct use to the programmer. It is intentionally sketchy, especially due to the great number of fields.

ROUTINES
 C7D0 *USR argument for 16 bit = in CE*
 CF1A *complementary routine*

Address	Description
100/256	Three-byte JUMP instruction to C06B (Warm Start). Done when PP command is entered without operands.
103/259	Three-byte JUMP to C7E5 default (displays "FC ERROR" message). This is the USR function hook. See BASIC Assembly interface section later for details.
145/325	Two-byte address of top of string space (letter "e" above) or the beginning of the BASIC stack. This is set by the BASIC CLEAR n command. <i>SSP</i>
147/327	BASIC line input buffer and Direct Mode execution line. <i>70</i>
18E/398	Current line column number.
1B1/433	Two-byte address of instruction in the BASIC program about to be executed when Control-C break is entered. This could be in the middle of a line of multiple statements separated by colons.
1B3/435	Two-byte BASIC line number of current line.
1B5/437	Two-byte address of the next <i>full</i> line to execute from the link pointer of the current line (see below).
1B7/439	Two-byte address of the end of the program and the beginning of the BASIC Program Variable Area (letter "a" above). <i>PVA</i>
1B9/441	Two-byte address of the end of the Variable Area and the start of the BASIC Program Array Area (letter "b" above). Whenever changes are made to the BASIC program (adding, deleting, updating lines) the above two addresses are used to define a new Variable and Array area below the new BASIC program. Thus, a program cannot be continued with old variable/array values once a change has been made. <i>PPA</i>
1BB/443	Two-byte address of the end of the Array Area and the pointer to free space (room for expansion — letter "C"). <i>FS</i>
1BD/445	Two-byte address of the last used data operand of a DATA statement so that the next READ will find the appropriate item. This is reset by a RESTORE command.
1BF/447	Four-byte input parameter (usually floating point format) to the USR function, and output parameter from the USR function. If USR (3.5) is called, 3.5 is passed to the subroutine in floating point. See a later section for BASIC/Assembly interfacing details.
1D5/469	Beginning of all BASIC programs.

Format of BASIC String Variables and Arrays

A BASIC string variable is similar to a floating point variable. It is also six bytes long. It looks like:

Offset	Description
+0	Two-byte variable name. The high order bit is always 1.
+2	One-byte current length of the variable length string value.
+3	00
+4	Two-byte address of the string itself. It resides either in the string space or in the program statement itself (e.g., 1005 A\$ = "HF").

A string array is identical to a numeric array except for two very important features:

1. The high order bit of the array name is always 1.
2. The four byte value is not floating point format but the length/00/stringaddress fields described above. All dimensioning remains the same.

Format of BASIC Program Statements

The first line of every BASIC program begins at location 1D5. All BASIC lines have the following variable length format:

Offset	Description
+0	Two-byte link pointer address of the next sequential full line in the program. This is independent of multiple statements on one line (separated by colons). The last line of the program points to location 0000 to indicate the end.
+2	Two-byte BASIC line number of the line in integer binary (a number between 0000 and FFF9, 0-65529).
+4	The BASIC statement(s), variable in length. Let us say they are "n" bytes long. Each BASIC "reserved word" such as GOTO, IF, END, DIM, PRINT, etc. is encoded here to a one-byte character not belonging to the ASCII character set (i.e., hex codes greater than 7F). This speeds up processing and saves program memory space. When the program is LISTed, these special bytes are decoded back into their corresponding reserved words.
+4+n	Byte of 00 indication the end of this line and beginning of the next.

Format of BASIC Floating Point Variables and Arrays

A BASIC floating point variable resides in the BASIC Program Variable Area. Each one takes a constant six bytes:

Offset	Description
+0	Two-byte ASCII variable name. The high order bit is always 0. The letters are also reversed as usual.
+2	Four-byte floating point value currently held by this variable. See the format description earlier.

BASIC arrays all reside together after the variables in the BASIC Program Array Area. A floating point array is variable in length. It takes a minimum of seven bytes and looks like this: (Note: an array in Exidy BASIC can have any number of dimensions; call that number "n". Each can have any number of elements).

Offset	Description
+0	Two-byte array name. The high order bit is always 0. The letters are reversed.
+2	Two-byte total array length minus four (i.e., the length of the array starting after these two bytes). This is used to find the next array in the area quickly.
+4	One-byte number of dimensions (we called it n).
+5	Two-byte size (number of elements) in the first dimension.
+7	Two-bytes size of the second dimension (if any).
.	.
.	.
.	.
+5+2(n-1)	Two-byte size of the nth dimension.
+5+2n	Beginning of a list of contiguous four-byte floating point array elements. These are in Row order.

BASIC to Z80 Assembly Language Interface

To call Z80 Assembly Language subroutines from Exidy BASIC, certain general conventions and procedures must be followed:

1. The machine language program must reside either in the first 256 bytes of memory (00-FF, 0-255 — usually a bad idea) or in the BASIC free space area described earlier. Either BASIC control, program, variables, arrays or strings, or Monitor/video control resides in the rest of memory. This is the only way a BASIC and machine language hybrid can coexist without complicated machinations such as putting the machine language routine right after the BASIC program and fooling BASIC into thinking that it is part of the program. The BASIC free space is the best and easiest choice. However there are some potential problems:

- a. Free space is dynamic. As the program changes, as variables/arrays are added or change size, the start of the free space moves. A machine language program placed too close to the end of the Array Area can get walked on. The end of the free space changes too, since the BASIC stack (or string space) will grow and shrink, especially with the CLEAR command. Since this change is usually not as radical as that of the start of the free space, I recommend putting the program close to the end of the free space. But there are now other considerations.
- b. The free space ends near HIMEM of the machine (where the BASIC stack is). This changes with each different Exidy size. So a generalized subroutine designed to run on any machine (probably with several BASIC programs) would either have to be relocatable (able to be moved without affecting anything), or there would have to be different versions of the program to run on different size machines. This of course would allow the BASIC program to use the maximum amount of free space. A subroutine designed for a particular BASIC program could be placed at the top of the free space as long as the BASIC program does not grow too much.
- c. If the program is placed at the end of the free space an excessive CLEAR n BASIC statement could kill it.
- d. Thus, no matter where the program is placed, certain restrictions have to be made to coexist with BASIC.

2. Assume a good location is found, and the Z80 program is written and relocated to that address in RAM. Assume this address to be 312A hex (12586). To call this subroutine from BASIC, it must already be in memory, and the USR function must be used. When BASIC executes it, it converts the argument to floating point and places this number in the four-byte USR parameter area at 1BF-1C2 (447-450). It then calls the subroutine at location 103 (259). For example, when the statement

```
2030 X = USR(25.7)
```

is executed, 25.7 is placed at 1BF and a CALL is made to 103.

3. Now, by default 103 contains the following Z80 instruction

```
JP C7E5
```

or in machine language — hex C3E5C7. This unconditional JUMP to the instruction at address C7E5 in BASIC ROM. This default subroutine prints the error message "FC ERROR" (function call invalid) and stops the program. To call your subroutine, you must change the JUMP instruction address to the address of the beginning of your program. Again the instruction after a BASIC Cold Start looks like

Address	Contents	Description
103/259	C3	JUMP Z80 operation code
104/260	E5	Low part of address
105/261	C7	High part of address

Leave the C3 JUMP, but change the address. If your program was at 312A as we said, you must make the jump to 312A, or

```
JP 312A
```

or in machine language — hex C32A31. It is a good idea to change the two address bytes every time the subroutine is to be called. Use the BASIC POKE statement for this (which requires decimal operands). Put 2A (42) at location 104 (260), and put 31 (49) at location 105 (261):

```
10000 POKE 260,42
10010 POKE 261,49
10020 XX = USR(Y)
```

When the USR function is executed in line 10020, your routine at 312A will be called. It could use the value in variable Y placed at 1BF as input. It could also put another value back as output. This value will be returned to the BASIC statement as the "result" of the USR function. In the above example, the value returned will be placed in variable XX. Note that the short BASIC routine shown above can easily be made into a GOSUB subroutine by adding the statement

```
10030 RETURN
```

Thus, to call your routine you need only say

```
GOSUB 10000
```

4. To terminate your subroutine, one of four things can be done:
 - a. Return directly to the Monitor and exit BASIC altogether, e.g., for catastrophic errors. For Monitor Warm Start jump to address E003. For Cold Start use E000. The user will be shown the Monitor prompt (">").
 - b. For lesser errors detected, give an FC ERROR message, stop the program, and return to BASIC READY level. This is simply done by jumping to C7E5.
 - c. If errors are detected and your routines have displayed the error message(s), you can stop the program and exit directly to BASIC READY level. For a BASIC Warm Start jump to DFFA, for a Cold Start DFFD.
 - d. Of course you can return normally to BASIC so it will continue the program where it left off after the USR statement. This is simply done by the RET instruction. Fill in the parameter at 1BF first, if necessary.

Note that all the Monitor subroutines are available to the Z80 subroutine, including turning the tape on, reading a file, and turning it off; or getting input from the keyboard. See the section on Monitor Subroutines later.

Debugging of the Z80 routine is a little more difficult than debugging BASIC programs. BASIC loses control of the situation and of what you are doing while your routine is running, and can't "keep an eye out" for potential errors as it can within a BASIC program. Great care, desk checking, and modular programming are a must.

An assembly language routine can also use as input and output actual BASIC variables and arrays. Using the pointers in the BCA described earlier, the program can find the variable/array lists and scan for the one(s) with the correct name(s). The using the floating point or string formats, the values can be examined or changed.

**EXIDY
POWER-ON
MONITOR**

Monitor Workarea

This is a detailed description of the area of memory shown above at locations 1F91, 3F91, or 7F91, depending on the size of the machine.

The Monitor Workarea, hereafter called MWA, is the area in RAM used by the Exidy Monitor program to save important information needed for its successful operation. This area is always located right next to the Monitor Stack, and is always placed at the very top of available RAM space. For an 8K machine, the top of RAM is at 1FFF (8191), for 16K 3FFF (16383), and for 32K 7FFF (32767). This number, Himem, is placed by the Monitor in the two bytes at address F000-F001 (-4096 to -4095) in the video driver RAM space. Remember as with most micros, the two bytes are *reversed* in storage. For example, for a 16K Exidy, F000-F001 contains FF3F, not 3FFF. The address of the MWA can be obtained from this HIMEM address so that you don't have to worry about what size machine your programming is running on. To do this, you must get the HIMEM value at F000-F001 and subtract 6E (110) or add FF92 (-110). For example, in Z80 Assembly Language:

```
LD HL,(F000) ;GET HIMEM
LD BC,FF92 ;GET -110
ADD HL,BC ;HL POINTS TO THE MWA
```

Or in BASIC:

```
100 AD=256*PEEK(-4095)+PEEK(-4096)
110 IF AD>32767 THEN AD=AD-65536
120 AD=AD-110
```

There is also a Monitor subroutine designed to do this calculation for you. It is at address E1A2 (-7774). When CALLED, it puts the MWA address in Z80 register IY. Example:

```
CALL E1A2 ;IY POINTS TO THE MWA
```

A detailed map of the contents of the MWA will now be given. This will be in the same fashion as the overall memory map listed above, except that the addresses will be shown in a different form. First the offset in hex from the beginning of the MWA will be given. This can be used in Z80 Assembly Language as a displacement away from an index register such as IY, which points to the MWA. For example, if the displacement is listed as +41 to a particular field, then that field can be addressed in Z80 by (IY+41) or by 41(IY). The second part of the address is given as an absolute address of the field in RAM. Since the whole MWA moves dependent on the size of the machine, the first two hex digits of these addresses can change. The last two digits are always the same. So only these last two digits are listed. The first two will either be 1F (8K), 3F (16K), or 7F (32K). Note: if the user coldstarts the Sorcerer (Resets) with a size other than the above sizes (such as 21239 bytes, not even a whole multiple of a K) then the above addressing scheme is not applicable and only the displacement from the index register scheme may be used.

Exidy Monitor Memory Map

To get an overall picture of how the Exidy utilizes the 64K of (possible) memory, a "memory map" is given.

Memory is cut up into pieces and each piece is used for a different purpose. In the map below the address of the first byte of each piece is listed along with the use of that area. The address is given in both hex and a form of decimal that is usable directly in BASIC with the PEEK and POKE commands. Note that some of these decimal numbers are negative. If the address exceeds 32767 (hex 7FFF), then BASIC requires that the "twos-complement" form of the number be used, or the negative form. For numbers greater than 7FFF, 65536 is subtracted from the number.

Be aware also that this is an *overall* wide angle view of memory. Detailed maps of certain areas (such as the Monitor Workarea and the BASIC Control Area) are included.

Address	Description
0000	0 256-byte Z80 Restart space (RAM)
0100	256 User RAM start, begin BASIC Control Area (RAM)
1F00	7936 8K Monitor Stack end (8K machines) (RAM)
3F00	16128 16K
7F00	32512 32K
1F90	8080 8K Monitor Stack start (8K machines) (RAM)
3F90	16272 16K
7F90	32656 32K
1F91	8081 8K Monitor Workarea start (8K machines) (RAM)
3F91	16273 16K
7F91	32657 32K
1FFF	8191 8K End User RAM (8K machines) (RAM)
3FFF	16383 16K
7FFF	32767 32K
C000	-16384 Begin 8K ROM PAC (e.g., begin BASIC) (ROM)
E000	-8192 Begin 4K Monitor Program (ROM)
F000	-4096 128-byte video driver space (RAM)
F080	-3968 1920-byte video screen (64x30) (RAM)
F800	-2048 1K standard Exidy ASCII alphanumerics (00-7F) (PROM)
FC00	-1024 512-byte Exidy keyboard standard graphics character set, accessed by depressing GRAPHICS key, character codes hex 80-BF (128-191) (RAM)
FE00	-512 512-byte User Programmable graphics character set, accessed by depressing SHIFT and GRAPHICS keys, codes hex CO-FF (192-255) (RAM)
FFFF	-1 End Exidy address space (64K)

Table 7. Monitor Workarea

Address	Description	Address	Description
+00 91 -110	60-byte Monitor command input buffer. Any command entered from the current RECEIVE device (SET I=x) such as the keyboard, serial or parallel ports is placed in this area. It is left-justified, and terminated by an ASCII carriage return character (hex code 0D, 13 decimal, hereafter called a CR). The Monitor subroutine at E13A (-7878) builds this buffer from the input.	+47 D8 71 -39	Beginning of the 16-byte tape output file header area. The first 5 bytes here contain the 5-character ASCII file name as entered on the SAVE or CSAVE command. It is left justified and padded to the right with ASCII blanks (code 20, 32 decimal).
+3C CD 63 -50	Port FE interface status.	+4C DD 76 -34	File header id, usually hex 55.
+3D CE 61 -49	Serial interface and dual cassette interface baud rate save area. 1200 baud is indicated by hex 40, 300 baud by the value 00. Serial port or cassette baud rates are set to the default of 1200 baud (hex 40) by the Monitor COLD Reset routine (at E000, -8192) and by the Monitor USER Reset entry point (at E003, -8189). Such a coldstart is done, for example, when the RESET keys are depressed. This byte is also set by the SET T=0 and SET T=1 commands (at Monitor routines at E5A2, -6750).	+4D DE 77 -33	File type. Usually C2 (194) for a BASIC save file. If the high order bit (80, 128 decimal) is on, the file cannot be automatically executed with the LOADG command. This is set by the SET F=xx command.
-3E CF 62 -48	SEND delay time. This value is used to delay before a SEND (to video, serial, or parallel) is done. The actual delay is about 1500 times this value machine cycles. This delay can therefore range from 0 to approximately 400000 cycles. The value is set by the SET S=n command.	+4E DF 78 -32	2-byte length of the file in bytes.
+3F D0 65 -47	Current SEND routine address. The default address set by COLD starts is the video routine at E9F0 (-5648). It can be changed by the SET O=x command.	+50 E1 80 -30	2-byte program loading address. For BASIC files, this is always 01D5 (469) because BASIC programs always start at that address. See the BASIC Control Area description following. For other programs such as those in machine language, this address is the "ssss" of the command "SAVE name ssss eeee."
+41 D2 65 -45	Current RECEIVE routine address. The default is set by COLD starts to be the keyboard routine at EB1C, -5348. It can be changed by the SET I=x command.	+52 E3 82 -28	2-byte program "go-address" for auto execution files. The Monitor will automatically begin execution of the program at this address with the LOADG command. This address is set by the SET X=nnnn command.
+43 D4 67 -43	Batch mode status. 00=normal input, nonzero=batch mode. This byte is used by the Monitor command input routine (E142) to determine whether commands are to be gotten from the RECEIVE device or from the batch tape serial port. The OVER command turns this off and the BATCH command turns this on.	+54 E5 84 -26	3 bytes of reserved space, ending the output tape header.
+44 D5 68 -42	Monitor output prompt character. The default is the character ">" or ASCII code 3E (62) set by COLD starts. It can be changed by the PROMPT x command. It is output to the SEND device every time a Monitor input command is being requested (at EOED, -7955).	+57 E8 87 -23	16-byte tape input header area. The format is identical to that of the area at +47. This area is filled in from reading the tape for commands such as CLOAD, LOAD, FILES, and so on.
+45 D6 69 -41	Tape status, baud rate, motor control save area. This is zeroed when the tape(s) is turned off, and otherwise remembers the status of the tape baud rates (00=300, 40=1200) and motor controls (10=motor #1 on, 20=motor #2 on).	+67 F8 103 -7	Character under the cursor. Since the cursor is an underscore character (ASCII code 5F, 95 decimal), it actually replaces the character at the cursor location. This hidden character is saved to be put back when the cursor is moved. The save is done by E9CC (-5684), and it is replaced by E9E8 (-5656).
+46 D7 70 -40	Tape input and output CRC (Cyclic Redundancy Check). The CRC is used to check whether the data has been transmitted successfully to/from the tape. This technique is described in detail in a subsequent section.	+68 F9 104 -6	2-byte line number where the cursor is times 64. This ranges from 0x64 (0) to 29x64 (1856), and is the offset from the beginning of the screen to the cursor line start.
		+6A FB 106 -4	2-byte cursor column number (0-63). When added to +68 the actual cursor offset into the screen is found.
		+6C FD 108 -2	Last character entered from the keyboard. This is used for the processing of the REPT (repeat) key logic. This character is entered to the keyboard input routine about every 30000 machine cycles as long as the REPT key is depressed. It is always the last key entered, and is saved and used by the keyboard processing routine at EB1C (-5348).
		+6D FE 109 -1	Two bytes of reserved space. This brings us to the end of the MWA, and in fact the end of user RAM.

Monitor Subroutines

The Exidy ROM Monitor is just packed with very well-written and useful subroutines which can be called from BASIC and assembly language. All are resident in the 4K ROM between locations E000 and EFFF. This is a brief description of all the useful routines, and how to interface them. Here the address will be given in hex of course, but will also be given as a two-part decimal number in the order necessary to POKE into the USR JUMP vector at locations 260-261.

Table 8. Monitor Subroutines

Address	Description	Address	Description
E000	0,224 Monitor Cold Start (on RESET).	E1A2	162,225 Will find MWA and put the address in IY without causing screen flicker (only does so during vertical retrace on the TV to avoid DMA conflicts).
E003	3,224 Monitor Warm Start (on BYE command).	E1BA	186,225 SENDLINE: sends an entire line to the SEND device. HL points to the line, which must end in a 00. LFs are always sent when CRs are found.
E006	6,224 Monitor User Cold Start — similar to E000 except HL is input containing what the user wants to use as HIMEM.	E1C9	201,225 ERROR: sends "ERROR" followed by the diagnostic message (which is pointed to by HL).
E009	9,224 RECEIVE: returns NZ and a character from the current RECEIVE device in the accumulator (A), or Z if no character yet.	E1D4	212,225 OVER command processor (CP). Handles all work necessary for the OVER command.
E00C	12,224 SEND: sends character in A to the current SEND device.	E1E8	232,225 Sends 4-byte ASCII equivalent of the 2-byte integer in DE. If DE = 3F29, then "3F29" is sent.
E00F	15,224 SERIAL IN: reads a character into A from the serial input device or from cassette tape.	E1ED	237,225 Send 2-byte ASCII of byte in A.
E012	18,224 SERIAL OUT: writes character from A to serial/tape.	E205	5,226 Send a CR followed by a LF, CRLF.
E015	21,224 QCKCHK: returns NZ if Control-C or ESC (RUN/STOP) is depressed, otherwise it returns Z.	E23D	61,226 Convert a 1-4 byte ASCII hex number (pointed to by HL) into DE. If HL points to A93 followed by a "Monitor Delimiter" (e.g., blank, CR, etc.), then DE will contain 0A93. This is the reverse process of the routine at E1E8.
E018	24,224 KEYBOARD: the RECEIVE routine if SET I=K (default) See E009.	E2D2	210,226 Send as many blanks as the number in B.
E01B	27,224 VIDEO: the SEND routine if SET O=V (default). See E00C.	E4D3	211,228 DUMP CP
E01E	30,224 PARALLEL IN: the RECEIVE routine if SET I=P.	E538	56,229 ENTER CP
E021	33,224 PARALLEL OUT: the SEND routine if SET O=P.	E562	98,229 MOVE CP
E993	147,233 CENTRONICS OUT: the SEND routine for SET O=L.	E597	151,229 GO CP
E024	36,224 CASSETTE MOTOR CONTROL ON: will turn motor on and set the baud rate of the requested cassette. MWA + 3D must contain the baud rate (00 = 300, 40 = 1200) and reg B must contain the cassette number (1 or 2).	E5A2	162,229 SET CP
E027	39,224 CASSETTE OFF: turns off both tapes.	E638	56,230 SAVE CP
E02A	42,224 TAPE SAVE: Save memory onto tape. MWA + 50, MWA + 51 must contain the memory address where SAVEing is to start. It must also be pushed on the stack. DE must contain the ending address. HL must point to a byte containing a CR (hex 0D). MWA + 47 through MWA + 4B must contain the ASCII file name; MWA + 4D must contain the file type; MWA + 52, MWA + 53 the GO address, if any.	E6B9	185,230 FILES CP
E02D	45,224 TAPE LOAD: load a file into memory from tape. MWA + 47 through MWA + 4B must contain the file name to load. If a LOADG is to be done, a Z flag must be on the stack, otherwise an NZ flag. Then if the program name is specified, put NZ in the flags, otherwise Z (i.e., load the next file on the tape).	E78A	138,231 LOAD CP
E13A	58,225 MONITOR INPUT: will put the command in the command input buffer at MWA + 0. IY must point to the MWA. MWA + 43 must contain 0 (not Batch).	E845	69,232 PROMPT CP
		E858	88,232 BATCH CP
		E85C	92,232 CREATE CP
		E884	132,232 LIST CP
		E8A1	161,232 TEST CP
		E98A	138,233 PP CP
		E9B1	177,233 Clear the video screen and refresh/rewrite the graphics character set at FC00.
		E9CC	204,233 Move the cursor to line/column specified in the MWA. See cursor positioning described previously.
		E9D6	214,233 Find the cursor. HL is set to the screen address (which starts at F080) and DE is set to the column number.
		EB10	16,235 Refresh character set at FC00.
		EC1E	30,236 Keyboard input tables (to EDFD). See keyboard section.
		EDFE	254,237 Character set for the 64 standard graphics 80-BF to be copied to FC00.

MONITOR LISTINGS

```
0000          0002 ;
0000          0003 ;
0000          0004 ;
0000          0005 ; *****
0000          0006 ; *
0000          0007 ; *   EXIDY STANDARD MONITOR   *
0000          0008 ; *
0000          0009 ; *****
0000          0010 ;
0000          0011 ;
0000          0012 ;
0000          0013 ;
0000          0014 ;
0000          0015 ;
0000          0016 ;   DEVELOPED FOR EXIDY INC.
0000          0017 ;
0000          0018 ;   BY   JOHN K. BORDERS JR.
0000          0019 ;
0000          0020 ;
0000          0021 ;
0000          0022 ; Z80 BASED MONITOR SOFTWARE
0000          0023 ; WITH FULL CASSETTE AND VIDEO
0000          0024 ; DRIVER ROUTINES. SELF-SEEKING
0000          0025 ; RAM STORAGE AND STACK ROUTINES.
0000          0026 ;
0000          0027 ;
0000          0028 ;
0000          0029 ;
0000          0030 ;
0000          0031 ; VERSION 1.0   DATED:  7/26/78
0000          0032 ;
0000          0033 ;
0000          0034 ;
0000          0035 ;
0000          0036 ;
```

```

0000      0038 ;
0000      0039 ;
0000      0040 ;      EQUATE TABLE
0000      0041 ;
0000      0042 ;
0000      0043 ;*****
0000      0044 ;
0000      0045 ; ASCII EQUATES
0000      0046 ;
          000D      0047 CR:      EQU      0DH      ;CARRIAGE RETURN
          000A      0048 LF:      EQU      0AH      ;LINE FEED
          001B      0049 ESC:     EQU      1BH      ;ESCAPE
          0001      0050 CNTRLA: EQU      'A'-40H
          0003      0051 CNTRLC: EQU      'C'-40H
          0008      0052 CNTRLH: EQU      'H'-40H
          0011      0053 CNTRLQ: EQU      'Q'-40H
          0013      0054 CNTRLS: EQU      'S'-40H
          0017      0055 CNTRLW: EQU      'W'-40H
          001A      0056 CNTRLZ: EQU      'Z'-40H
          007F      0057 RUBOUT: EQU      7FH      ;RUB OUT
          0020      0058 SPACE:  EQU      20H      ;SPACE
0000      0059 ;
0000      0060 ; RAM POINTERS
0000      0061 ;
          F000      0062 RAMTOP: EQU      0F000H   ;POINTER STORE
          0000      0063 RAM:     EQU      0000H   ;START OF RAM
          0000      0064 BUFFER: EQU      0       ;INPUT BUFFER
          003C      0065 LINELN: EQU      BUFFER+60 ;LINE LENGTH
          003D      0066 TAPES:  EQU      LINELN+1 ;TAPE RATE
          003E      0067 SPEEDS: EQU      TAPES+1  ;DISPLAY SPEED
          003F      0068 OUTADD: EQU      SPEEDS+1  ;OUTPUT ADDRESS
          0041      0069 INADD:  EQU      OUTADD+2  ;INPUT ADDRESS
          0043      0070 BATCHF: EQU      INADD+2   ;BATCH FLAG
          0044      0071 PROMPT: EQU      BATCHF+1  ;PROMPT CHARACTER
          0045      0072 CMTRFG: EQU      PROMPT+1  ;CASSETTE MOTOR FLAG
          0046      0073 CRCBYT: EQU      CMTRFG+1  ;CRC BYTE
          0047      0074 CHEAD:  EQU      CRCBYT+1  ;COMMAND HEADER
          0057      0075 THEAD:  EQU      CHEAD+16  ;TAPE HEADER
0000      0076 ; VIDEO SCREEN EQUATES
          00F8      0077 TOPHRG: EQU      0F8H
          F000      0078 SCREEN: EQU      0F000H
          F080      0079 VID:    EQU      SCREEN+128
          F800      0080 TOP:    EQU      SCREEN+2048
          0067      0081 VDHL D: EQU      THEAD+16  ;CHAR HOLD
          0068      0082 LINE:   EQU      VDHL D+1  ;LINE #
          006A      0083 CHR:    EQU      LINE+2    ;CHAR #
          006C      0084 LSTKEY: EQU      CHR+2    ;LAST KEY PRESSED
          0010      0085 HEADLN: EQU      16      ;HEADER LENGTH
          006E      0086 STORE:  EQU      LSTKEY+2  ;END OF EQU TABLE
0000      0087 ;
0000      0088 ; CASSETTE HEADER EQUATES
0000      0089 ;
          0000      0090 HNAME:  EQU      0
          0006      0091 HTYPE:  EQU      6
          0007      0092 HSIZE:  EQU      7
          0009      0093 HADDR:  EQU      9
          000B      0094 HXEQ:   EQU      11

```

```

0000          0096 ;
0000          0097 ;
0000          0098 ;
0000          0099 ;
0000          0100 ;
0000          0101          ORG    0E000H
E000          0102 ;
E000          0103 ;
E000          0104 ;
E000          0105 ;          JUMP TABLE INTO MONITOR
E000          0106 ;
E000          0107 ;
E000          0108 ;
E000  C3 62 E0 0109 COLD:  JP    INITC    ;COLD START
E003  C3 E8 E0 0110 WARM:  JP    INITW    ;WARM START
E006  C3 77 E0 0111 USER:  JP    INITU    ;USER START
E009  C3 30 E0 0112 RECEVE: JP    CHRIN    ;INPUT CHARACTER
E00C  C3 45 E0 0113 SEND:  JP    CHROUT   ;OUTPUT CHARACTER
E00F  C3 DA E2 0114 INTAPE: JP    TAPEIN   ;TAPE INPUT
E012  C3 EE E2 0115 OUTAPE: JP    TAPOUT   ;TAPE OUTPUT
E015  C3 D1 EA 0116 QUIKCK: JP    QUIK     ;CNTRLC CHECK
E018  C3 1C EB 0117 KEYBRD: JP    CHRIN1   ;KEYBOARD INPUT
E01B  C3 F0 E9 0118 VIDEO:  JP    CHROT1  ;VIDEO OUTPUT
E01E  C3 76 E7 0119 PARLIN: JP    FARIN    ;PARALLEL INPUT
E021  C3 7F E7 0120 PARLOT: JP    FAROUT   ;PARALLEL OUTPUT
E024  C3 8A E2 0121 CMOTON: JP    MOTRON   ;TURN CASSETTE MOTOR ON
E027  C3 AF E2 0122 CMOTOF: JP    MTROFF  ;TURN CASSETTE MOTOR OFF
E02A  C3 5A E6 0123 BASSAV: JP    SAVBAS   ;ENTRY FOR BASIC CSAVE
E02D  C3 99 E7 0124 BASLOD: JP    LODBAS   ;ENTRY FOR BASIC CLOAD
E030          0125 ;
E030  FD E5    0126 CHRIN:  PUSH  IY          ;WE DESTROY THESE
E032  E5      0127          PUSH  HL
E033  CD A2 E1 0128          CALL  GETIY
E036  21 41 E0 0129          LD    HL,CHRINR ;FOR RETURN
E039  E5      0130          PUSH  HL
E03A  FD 6E 41 0131          LD    L,(IY+INADD);GET ADDRESS
E03D  FD 66 42 0132          LD    H,(IY+INADD+1)
E040  E9      0133          JP    (HL)      ;GO DO IT
E041  E1      0134 CHRINR: FOP  HL          ;RESTORE
E042  FD E1    0135          FOP  IY
E044  C9      0136          RET
E045          0137 ;
E045  FD E5    0138 CHROUT: PUSH  IY          ;WE DESTROY THESE
E047  E5      0139          PUSH  HL
E048  F5      0140          PUSH  AF
E049  CD A2 E1 0141          CALL  GETIY
E04C  FD 66 3E 0142          LD    H,(IY+SPEEDS);GET DISPLAY SPEED
E04F  2E 01    0143          LD    L,1      ;FINISH OFF
E051  2B      0144 OUTDLY: DEC  HL          ;DELAY
E052  7C      0145          LD    A,H      ;ARE WE THROUGH?
E053  B5      0146          OR   L
E054  20 FB    0147          JR   NZ,OUTDLY ;NOPE-
E056  F1      0148          POP  AF      ;GET 'EM BACK
E057  21 41 E0 0149          LD    HL,CHRINR
E05A  E5      0150          PUSH  HL
E05B  FD 6E 3F 0151          LD    L,(IY+OUTADD)
E05E  FD 66 40 0152          LD    H,(IY+OUTADD+1)
E061  E9      0153          JP    (HL)

```



```

E062          0154 ;
E062          0155 ;
E062          0156 ;
E062          0157 ;   ..INITIALIZE ROUTINES,
E062          0158 ;
E062          0159 ;
E062          0160 ;
E062          0161 ;
E062          0162 ;
E062          0163 ;
E062          0164 ;   . INITC = COLD START - FINIS
E062          0165 ;   TOP OF RAM AND SETS
E062          0166 ;   STACK AND STORAGE THERE
E062          0167 ;   INITW = WARM START - USES
E062          0168 ;   STACK FROM INITC
E062          0169 ;   INITU = USER START - USES
E062          0170 ;   HL FROM USER AS TOP OF
E062          0171 ;   RAM LIKE INITC
E062          0172 ;
E062          0173 ;
E062          0174 ;
E062          0175 INITC: EQU $
E062 3E FF          0176          LD      A,OFFH      ;INITIALIZE CASSETTE
E064 D3 FD          0177          ?OUT    OFDH,A
E066 16 00          0178          LD      D,0
E068 21 00 00      0179          LD      HL,RAM      ;POINT BEG RAM
E06B 7E            0180 INITC2: LD      A,(HL)      ;GET IT
E06C 46            0181          LD      B,(HL)      ;TWICE
E06D 2F            0182          CPL                ;TURN AROUND
E06E 77            0183          LD      (HL),A      ;PUT BACK
E06F BE            0184          CP      (HL)        ;& CHK IT
E070 70            0185          LD      (HL),B      ;PUT REAL BACK
E071 23            0186          INC     HL          ;POINT NEXT
E072 28 F7        0187          JR      Z,INITC2    ;LOOP IF GOOD
E074 2B            0188          DEC     HL          ;ADJUST
E075 2B            0189          DEC     HL          ; H & L
E076 01            0190          DB      1          ;LXI B
E077            0191 ;
E077            0192 ;   USER START ENTRY POINT
E077            0193 ;
E077            0194 INITU: EQU $
E077 16 01          0195          LD      D,1
E079            0196 INITU1: EQU $
E079 22 00 F0      0197          LD      (RAMTOP),HL;USER IS HERE
E07C FD 2A 00 F0  0198          LD      IY,(RAMTOP)
E080 01 92 FF      0199          LD      BC,0-STORE
E083 FD 09          0200          ADD     IY,BC      ;DO IT
E085 FD F9          0201          LD      SP,IY      ;GET A STACK
E087 CD D1 EA      0202          CALL   QUIK        ;SEE IF WARM RESET
E08A C2 FA DF      0203          JP      NZ,PWARM   ;YES-GO DO IT
E08D 7D            0204          LD      A,L        ;CLEAR RAM!
E08E FD E5          0205          PUSH   IY
E090 E1            0206          POP    HL          ;GET BEGINNING
E091 36 00          0207 INITU2: LD      (HL),0      ;MAKE ZERO
E093 23            0208          INC     HL          ;NEXT
E094 BD            0209          CP      L          ;THRU?
E095 20 FA          0210          JR      NZ,INITU2  ;NO-KEEP GOIN'
E097 FD 36 44 3E   0211          LD      (IY+PROMPT),'>' ;INIT PROMPT

```

```

E09E FD 36 3D 40      0212      LD      (IY+TAPES),40H;SET FOR 1200 BAUD
E09F D5              0213      PUSH   DE          ;WE DESTROY
EOA0 CD B1 E9        0214      CALL  VIDINT      ;INIT VIDEO BOARD
EOA3 D1              0215      POP    DE          ;GET BACK
EOA4 21 1C EB        0216      LD     HL,CHRIN1 ;POINT KEYBOARD
EOA7 FD 75 41        0217      LD     (IY+INADD),L
EOAA FD 74 42        0218      LD     (IY+INADD+1),H;PUT AWAY
EOAD 21 F0 E9        0219      LD     HL,CHROT1 ;POINT VIDEO
EOB0 FD 75 3F        0220      LD     (IY+OUTADD),L
EOB3 FD 74 40        0221      LD     (IY+OUTADD+1),H
EOB6 3A FD DF        0222      LD     A,(PCOLD) ;SEE IF PROM PACK IS IN
EOB9 FE C3           0223      CP     0C3H       ;IS THE "JUMP" THERE?
EOBB 20 0B           0224      JR     NZ,INITU3 ;NO-
EOBD 3A FA DF        0225      LD     A,(PWARM) ;HOW ABOUT THIS ONE?
EOC0 FE C3           0226      CP     0C3H
EOC2 20 04           0227      JR     NZ,INITU3
EOC4 15              0228      DEC   D
EOC5 C3 8D E9        0229      JF     PROMP1
EOC8 21 62 E3        0230 INITU3: LD     HL,HEDING ;POINT MSG
EOCB CD BA E1        0231      CALL  MSGOUT
EOCE ED 5B 00 F0     0232      LD     DE,(RAMTOP)
EOD2 CD E8 E1        0233      CALL  ADDOUT      ;PRINT RAM TOP
EOD5 21 BC E3        0234      LD     HL,HEAD2
EOD8 CD BA E1        0235      CALL  MSGOUT      ;FINISH
EODB FD E5           0236      PUSH  IY          ;PUT STACK
EODD D1              0237      POP   DE          ; IN DE
EODE 1B              0238      DEC   DE          ;ADJUST
EODF CD E8 E1        0239      CALL  ADDOUT      ;PRINT IT
EOE2 21 D5 E3        0240      LD     HL,HEAD3 ;LAST ONE
EOE5 CD BA E1        0241      CALL  MSGOUT
EOE8                  0242 ;
EOE8                  0243 ;      WARM START ENTRY POINT
EOE8                  0244 ;
EOE8 E0E8           0245 INITW: EQU   $
EOE8 CD A2 E1        0246      CALL  GETIY       ;GO GET A VALID IY FROM R4
    
```

```

EOEB          0248 ;
EOEB          0249 ;
EOEB          0250 ;
EOEB          0251 ;   BEGINNING OF MAIN PROGRAM
EOEB          0252 ;
EOEB          0253 ;
EOEB          0254 ;
EOEB          0255 ;
EOEB          0256 ;
EOEB          0257 START: EQU   $           ;START MAINLINE
EOEB  FD F9    0258          LD    SP,IY     ;REDO STACK
EOED  CD 05 E2 0259          CALL  CRLF    ;FRESH LINE
EOFO  FD 7E 44 0260          LD    A,(IY+PROMPT);LOAD PROMPT
EOF3  CD 45 E0 0261          CALL  CHROUT  ;& OUT
EOF6  CD 3A E1 0262          CALL  LINEIN  ;GET A LINE
EOF9  FD E5    0263          PUSH  IY     ;MOVE IY
EOFB  E1       0264          POP   HL     ; TO HL
EOFC  CD 25 E2 0265          CALL  SCAN   ;SKIP DELIMS
EOFF  CA 34 E1 0266          JP    Z,ERRCMD ;UH-OH NONE!
E102  DD 21 12 E3 0267          LD    IX,TABLE ;POINT CMD TBL
E106  E5       0268 MAIN1:  PUSH  HL     ;SAVE'EM
E107  DD E5    0269          PUSH  IX
E109  06 02    0270          LD    B,2     ;CHECK 2 CHRS
E10B  DD 7E 00 0271 MAIN2:  LD    A,(IX)   ;LOAD FRM TABLE
E10E  BE       0272          CP    (HL)   ;COMPARE?
E10F  20 12    0273          JR    NZ,MAIN4 ;NO-TRY NEXT
E111  23       0274          INC   HL     ;CHECK NEXT CHR
E112  DD 23    0275          INC   IX
E114  10 F5    0276          DJNZ  MAIN2  ;LOOP FOR 2
E116  D1       0277          POP   DE     ;CLEAR STACK
E117  D1       0278          POP   DE     ;I/O PNTR
E118  01 EB E0 0279          LD    BC,START ;PUSH RETURN
E11B  C5       0280          PUSH  BC
E11C  DD 6E 00 0281 MAIN3:  LD    L,(IX)   ;LOAD
E11F  DD 66 01 0282          LD    H,(IX+1) ; JUMP
E122  E9       0283          JP    (HL)   ; ADDRESS
E123  DD E1    0284 MAIN4:  POP   IX     ;RESET
E125  E1       0285          POP   HL     ; POINTERS
E126  DD 23    0286          INC   IX     ;NEXT ENTRY
E128  DD 23    0287          INC   IX     ; IN
E12A  DD 23    0288          INC   IX     ; TABLE
E12C  DD 23    0289          INC   IX
E12E  DD 7E 00 0290          LD    A,(IX)   ;IS IT
E131  B7       0291          OR    A     ; THE END?
E132  20 D2    0292          JR    NZ,MAIN1 ;NO-CONTINUE
E134  21 E6 E3 0293 ERRCMD: LD    HL,IVCMMSG
E137  C3 C9 E1 0294          JP    WHAT

```

```

E13A      0296 ;
E13A      0297 ;
E13A      0298 ;
E13A      0299 ;   LINE INPUT ROUTINE
E13A      0300 ;
E13A      0301 ;
E13A      0302 ;
E13A      0303 ;
E13A      0304 ;   THE FOLLOWING ARE COMMAND CHRS:
E13A      0305 ;           <CR> = END LINE
E13A      0306 ;           RUB  = BACKSPACE
E13A      0307 ;           @   = START OVER
E13A      0308 ;   ALL OTHER CHARS SIMPLY INPUT
E13A      0309 ;
E13A      0310 ;
E13A      0311 ;
E13A      E13A 0312 LINEIN: EQU   $
E13A      FD E5 0313          PUSH  IY           ;MOVE IY
E13C      E1    0314          POP    HL           ; TO HL
E13D      3E 3C 0315          LD     A,LINELN   ;SET LINE
E13F      85    0316          ADD   L           ; LENGTH AND
E140      4F    0317          LD     C,A       ; START IN
E141      45    0318          LD     B,L       ; IN BC
E142      FD 7E 43 0319          LD     A,(IY+BATCHF);GET BATCH FLAG
E145      B7    0320          OR    A           ;TEST IT
E146      20 39 0321          JR    NZ,LINE3   ;GO BATCH IT
E148      CD 30 E0 0322 LINE1: CALL  CHRIN      ;GET
E148      28 FB 0323          JR    Z,LINE1
E14D      CB 7F 0324          BIT   7,A
E14F      20 1D 0325          JR    NZ,LINE2A
E151      FE 0D 0326          CP    CR
E153      28 12 0327          JR    Z,LINE2
E155      FE 20 0328          CP    SPACE      ;CONTROL CHR?
E157      38 15 0329          JR    C,LINE2A   ;YES!
E159      FE 7F 0330          CP    RUBOUT     ;RUB?
E15B      28 18 0331          JR    Z,BKSPC    ;YES!
E15D      FE 40 0332          CP    '@'        ;NEW LINE?
E15F      20 06 0333          JR    NZ,LINE2   ;NO-GO ON
E161      CD 05 E2 0334          CALL  CRLF       ;NEXT LINE
E164      C3 3A E1 0335          JP    LINEIN     ;OVER
E167      77    0336 LINE2: LD     (HL),A      ;PUT AWAY
E168      23    0337          INC   HL         ;POINT NEXT
E169      FE 0D 0338          CP    CR         ;CAR RET?
E16B      CA 05 E2 0339          JP    Z,CRLF     ;YES-DO IT & RET
E16E      CD 45 E0 0340 LINE2A: CALL  CHROUT    ;PRINT IT
E171      79    0341          LD     A,C       ;TOO MANY
E172      BD    0342          CP    L         ; CHARS?
E173      20 D3 0343          JR    NZ,LINE1  ;NO-CONTINUE
E175      0344 ;
E175      0345 ;   BACKSPACE ROUTINE
E175      0346 ;
E175      78    0347 BKSPC: LD     A,B           ;ARE YOU
E176      BD    0348          CP    L         ; AT BEG?
E177      28 CF 0349          JR    Z,LINE1   ;YES-IGNORE
E179      3E 08 0350          LD     A,CNTRLH
E17B      CD 45 E0 0351          CALL  CHROUT
E17E      2B    0352          DEC   HL        ;DELETE CHR
E17F      18 C7 0353          JR    LINE1     ;CONTINUE

```

```

E181      .      0354 ;
E181      .      0355 ;
E181      .      0356 ;
E181 06 01      0357 LINE3: LD      B,1
E183 E5          0358      PUSH   HL      ;SAVE BEGINNING
E184 CD 8A E2    0359      CALL   MOTRON
E187 CD 59 E7    0360      CALL   TAPWT      ;WAIT FOR NULLS
E18A CD DA E2    0361 LINE4: CALL   TAPEIN      ;GET
E18D CA D4 E1    0362      JP      Z,FINISH
E190 77          0363      LD      (HL),A      ;PUT
E191 23          0364      INC     HL      ;NEXT
E192 FE 0D      0365      CP      CR      ;IS IT?
E194 20 F4      0366      JR      NZ,LINE4
E196 CD 4E E7    0367      CALL   CKCRC
E199 CD AF E2    0368      CALL   MTROFF      ;TURN OFF
E19C 36 00      0369      LD      (HL),0
E19E E1          0370      POP    HL
E19F C3 BA E1    0371      JP      MSGOUT
E1A2      .      0372 ;
E1A2      .      0373 ;
E1A2      .      0374 ;
E1A2      .      0375 ;      CREATES A IY FROM RAMTOP IN F000
E1A2      .      0376 ;
E1A2      .      0377 ;
E1A2      .      0378 GETIY: EQU    $
E1A2 C5          0379      PUSH   BC      ;I NEED
E1A3 F5          0380      PUSH   AF
E1A4 DB FE      0381 SEEIFR: IN    A,0FEH      ;SEE IF SCREEN IS READY
E1A6 CB 6F      0382      BIT    5,A
E1A8 28 FA      0383      JR      Z,SEEIFR
E1AA F1          0384      POP    AF
E1AB 06 08      0385      LD      B,WINPK5      ;LOAD WAIT CONSTANT
E1AD 10 FE      0386 WFBTZ: DJNZ  WFBTZ      ;WAIT FOR B TO ZERO
E1AF FD 2A 00 F0 0387      LD      IY,(RAMTOP)
E1B3 01 92 FF    0388      LD      BC,0-STORE;OFFSET
E1B6 FD 09      0389      ADD    IY,BC      ;SET UP IY
E1B8 C1          0390      POP    BC
E1B9 C9          0391      RET
E1BA      .      0392 ;
E1BA 0008      0393 WINPK5: EQU    8      ;DELAY FOR 15KC SIGNAL

```

```

E1BA      0395 ;
E1BA      0396 ;
E1BA      0397 ;
E1BA      0398 ;      UTILITY ROUTINES
E1BA      0399 ;
E1BA      0400 ;
E1BA      0401 ;
E1BA      0402 ; -----
E1BA      0403 ;
E1BA      0404 ;
E1BA      0405 ;
E1BA      0406 ;      MESSAGE OUTPUT ROUTINE
E1BA      0407 ;
E1BA      0408 ;      SCANS ASCII TEXT FOR:
E1BA      0409 ;          0 = RETURN
E1BA      0410 ;          CR = CRLF
E1BA      0411 ;      ALL OTHERS OUTPUT
E1BA      0412 ;
E1BA      0413 ;
E1BA      0414 MSGOUT: EQU    $
E1BA      0415      LD    A,(HL)    ;GET CHR
E1BA      0416      OR    A          ;IS IT END?
E1BA      0417      RET   Z          ;YES- RETURN
E1BA      0418      INC   HL         ;NEXT
E1BA      0419 MSGOT2: CALL  CHROUT   ;PRINT IT
E1BA      0420      CP    CR         ;NEED CRLF?
E1BA      0421      JR    NZ,MSGOUT  ;NO
E1BA      0422      LD    A,LF       ;DO LF PART
E1BA      0423      JR    MSGOT2
E1BA      0424 ;
E1BA      0425 ; -----
E1BA      0426 ;
E1BA      0427 ;
E1BA      0428 ;      "WHAT" ERROR ROUTINE
E1BA      0429 ;
E1BA      0430 ;
E1BA      0431 WHAT:  EQU    $
E1BA      0432      PUSH HL          ;SAVE MSG ADDRESS
E1BA      0433      LD    HL,ERRMSG  ;POINT "ERROR - "
E1BA      0434 WHAT1: CALL  MSGOUT
E1BA      0435      POP   HL         ;GET BACK ERROR ADDRESS
E1BA      0436      CALL  MSGOUT     ;PRINT IT
E1BA      0437 FINISH: LD    (IY+BATCHF),0 ;CLEAR BATCH MODE
E1BA      0438      CALL  MTROF1     ;TURN OFF TAPE
E1BA      0439      JP    START     ;REDO STACK
E1BA      0440 ;
E1BA      0441 ;      ERROR ROUTINES
E1BA      0442 ;
E1BA      0443 ERRPAR: LD    HL,IVPMSG ;POINT "INVALID PARAMETER"
E1BA      0444      JR    WHAT
E1BA      0445 ERRCRC: LD    HL,CRCMSG  ;POINT "TAPE CRC ERROR"
E1BA      0446      JR    WHAT

```

```

E1E8      0448 ;
E1E8      0449 ;
E1E8      0450 ;
E1E8      0451 ;
E1E8      0452 ;
E1E8      0453 ;   HEXADECIMAL OUTPUT ROUTINES
E1E8      0454 ;
E1E8      0455 ;
E1E8      0456 ;
E1E8      0457 ;   ENTRIES:
E1E8      0458 ;
E1E8      0459 ;   ADDOUT = OUTPUT ADDRESS IN DE
E1E8      0460 ;   HCHOUT = OUTPUT BYTE IN A
E1E8      0461 ;
E1E8      0462 ;
E1E8      0463 ;
E1E8      0464 ADDOUT: EQU   $
E1E8      7A      0465      LD      A,D
E1E9      CD ED E1 0466      CALL   HCHOUT   ;PRINT MSB
E1EC      7B      0467      LD      A,E      ;PRINT LSB
E1ED      E1ED      0468 HCHOUT: EQU   $
E1ED      F5      0469      PUSH  AF      ;SAVE
E1EE      E6 F0    0470      AND   OF0H   ;ONLY LEFT HALF
E1F0      0F      0471      RRCA      ;MOVE RIGHT
E1F1      0F      0472      RRCA
E1F2      0F      0473      RRCA
E1F3      0F      0474      RRCA
E1F4      CD FA E1 0475      CALL   HCHOT2   ;FORM ASCII
E1F7      F1      0476      POP   AF      ;GET BACK CHAR
E1F8      E6 0F    0477      AND   OFH    ;ONLY RIGHT HALF
E1FA      FE 0A    0478 HCHOT2: CF   0AH    ;NEED LETTER?
E1FC      38 02    0479      JR    C,HCHOT3 ;NO
E1FE      C6 07    0480      ADD   'A'-3AH  ;ADJUST FOR A-F
E200      C6 30    0481 HCHOT3: ADD   30H    ;MAKE ASCII
E202      C3 45 E0 0482      JF    CHROUT   ;RETURN THERE

```

```

E205          0484 ;
E205          0485 ;
E205          0486 ;
E205          0487 ; CARRIAGE RETURN / LINE FEED
E205          0488 ;
E205          0489 ; ISSUES A <CR>,<LF> TO TERMINAL
E205          0490 ;
E205          0491 ;
E205          0492 ;
E205          0493 CRLF: EQU $
E205 3E 0D    0494          LD A,CR
E207 CD 45 E0 0495          CALL CHROUT
E20A 3E 0A    0496          LD A,LF
E20C C3 45 E0 0497          JP CHROUT ;RETURN THERE
E20F          0498 ;
E20F          0499 ; -----
E20F          0500 ;
E20F          0501 ;
E20F          0502 ;
E20F          0503 ; ADDRESS AND COLON OUTPUT
E20F          0504 ;
E20F          0505 ; PRINTS ADDRESS IN DE FROM
E20F          0506 ; ADDOUT THEN PRINTS COLON
E20F          0507 ; AND A SPACE.
E20F          0508 ;
E20F          0509 ;
E20F          0510 ;
E20F          0511 ADDCOL: EQU $
E20F CD E8 E1 0512          CALL ADDOUT ;PRINT ADDRESS
E212 3E 3A    0513          LD A,':' ;FORM COLON
E214 CD 45 E0 0514          CALL CHROUT ;AND SEND IT
E217 3E 20    0515          LD A, ' ' ;FORM SPACE
E219 C3 45 E0 0516          JP CHROUT ;SEND AND RETURN
E21C          0517 ;
E21C          0518 ; -----
E21C          0519 ;
E21C          0520 ;
E21C          0521 ;
E21C          0522 ; PRINT SPACE AND HEX BYTE
E21C          0523 ;
E21C          0524 ; PRINTS A SPACE AND THEN
E21C          0525 ; THE CHARACTER IN THE A
E21C          0526 ; REGISTER IN HEX.
E21C          0527 ;
E21C          0528 ;
E21C          0529 ;
E21C          0530 HEXSPC: EQU $
E21C F5      0531          PUSH AF ;SAVE CHR.
E21D 3E 20    0532          LD A, ' ' ;FORM SPACE
E21F CD 45 E0 0533          CALL CHROUT ;AND SEND IT
E222 F1      0534          POP AF ;GET CHAR BACK
E223 18 C8    0535          JR HCHOUT ;PRINT & RETURN

```



```

E225          0537 ;
E225          0538 ;
E225          0539 ;
E225          0540 ;   SCANNER ROUTINE
E225          0541 ;
E225          0542 ;
E225          0543 ;
E225          0544 ;   THIS ROUTINE SCANS THE
E225          0545 ;   INPUT BUFFER LOCATED IN
E225          0546 ;   THE STORAGE AREA AND SKIPS
E225          0547 ;   OVER EITHER:
E225          0548 ;           SCAN = DELIMITERS
E225          0549 ;           OR
E225          0550 ;           SCANLT = TEXT THEN SCAN
E225          0551 ;
E225          0552 ;   THIS ROUTINE USED FOR FINDING
E225          0553 ;   PARAMETERS IN I/O BUFFER
E225          0554 ;
E225          0555 ;
E225          0556 ;
E225          0557 SCAN: EQU $
E225 7E          0558 LD A,(HL) ;GET ASCII
E226 FE 0D       0559 CP CR ;CAR RET?
E228 C8          0560 RET Z ;YES THRU
E229 FE 2E       0561 CP ',' ;DELIM?
E22B D0          0562 RET NC ;YES - GO BACK
E22C 23          0563 INC HL ;NEXT
E22D 18 F6       0564 JR SCAN
E22F             0565 ;
E22F             0566 ;
E22F             0567 SCANHL: EQU $
E22F FD E5       0568 PUSH IY
E231 E1          0569 POP HL ;GET BUFF BEG
E232             0570 SCANLT: EQU $
E232 7E          0571 LD A,(HL) ;GET
E233 FE 0D       0572 CP CR
E235 C8          0573 RET Z ;THRU IF CR
E236 FE 30       0574 CP '0' ;< 0?
E238 38 EB       0575 JR C,SCAN ;YES-GO UP
E23A 23          0576 INC HL ;NEXT
E23B 18 F5       0577 JR SCANLT

```

```

E23D          0579 ;
E23D          0580 ;
E23D          0581 ;
E23D          0582 ;   CONVERSION ROUTINE
E23D          0583 ;
E23D          0584 ;
E23D          0585 ;   THIS ROUTINE SCANS THE ASCII
E23D          0586 ;   I/O BUFFER AND CONVERTS THE
E23D          0587 ;   ASCII HEX TEXT TO BINARY IN
E23D          0588 ;   THE DE REGISTER PAIR. VALUE
E23D          0589 ;   IS ROTATED IN THROUGH E, SO
E23D          0590 ;   IF ONLY ONE BYTE THEN USE E.
E23D          0591 ;
E23D          0592 ;   ERROR FOR INVALID ASCII ROUTES
E23D          0593 ;   TO WHAT ERROR ROUTINE.
E23D          0594 ;
E23D          0595 ;
E23D          0596 ;
E23D          E23D          0597 CONV:   EQU    $
E23D 11 00 00 0598          LD     DE,0      ;SET FOR NUMBER
E240 7E          0599 CONV1:  LD     A,(HL)   ;GET CHAR
E241 FE 30      0600          CP     '0'     ;DELIM?
E243 D8          0601          RET     C      ;YES-THRU
E244 23          0602          INC    HL     ;NEXT
E245 FE 47      0603          CP     'F'+1   ;IS IT TOO BIG?
E247 D2 DE E1   0604          JP     NC,ERRPAR ;YES
E24A FE 3A      0605          CP     '9'+1   ;IS IT A #?
E24C 38 07      0606          JR     C,NUMBER ;YES
E24E FE 41      0607          CP     'A'     ;IS IT A LETTER
E250 DA DE E1   0608          JP     C,ERRPAR ;NO!
E253 C6 09      0609          ADD    9      ;MAKE 10-15
E255 07          0610 NUMBER:  RLCA    ;SHIFT
E256 07          0611          RLCA    ; TO
E257 07          0612          RLCA    ; LEFT
E258 07          0613          RLCA
E259 06 04      0614          LD     B,4    ;COUNT
E25B 07          0615 CONV2:  RLCA    ;INTO CARRY
E25C CB 13      0616          RL     E     ;INTO E
E25E CB 12      0617          RL     D     ; AND D
E260 10 F9      0618          DJNZ  CONV2   ;TILL B=0
E262 18 DC      0619          JR     CONV1  ;TRY AGAIN

```

```

E264          0621 ;
E264          0622 ;
E264          0623 ;
E264          0624 ;   NAME FIND ROUTINE
E264          0625 ;
E264          0626 ;
E264          0627 ;   THIS ROUTINE FINDS THE ASCII
E264          0628 ;   NAME IN I/O BUFFER AND MOVES
E264          0629 ;   IT TO CHEAD FILLING WITH SPACES
E264          0630 ;   FOR 5 CHARACTERS.
E264          0631 ;
E264          0632 ;   EXIT:       Z SET = NO NAME
E264          0633 ;           C SET = BAD NAME
E264          0634 ;
E264          0635 ;
E264          0636 NAMFND: EQU    $
E264 CD 2F E2  0637          CALL  SCANHL    ;SKIP COMMAND
E267 CB       0638          RET    Z       ;FLAG SET IF CR
E268 FE 41    0639          CP    'A'     ;IS IT
E26A D8      0640          RET    C
E26B 6B FE 5B 0641          CP    'Z'+1   ;A LETTER?
E26D 3F      0642          CCF          ;SET CARRY
E26E D8      0643          RET    C       ; IF NOT
E26F E5      0644          PUSH   HL     ;SAVE PNTR
E270 FD E5   0645          PUSH   IY    ;MOVE INDEX
E272 D1      0646          POP    DE     ; TO DE
E273 21 47 00 0647          LD    HL,CHEAD ;HL-OFFSET
E276 19      0648          ADD    HL,DE  ;HL-ADDRESS
E277 D1      0649          POP    DE     ;RESTORE PNTR
E278 06 05   0650          LD    B,5    ;5 CHRS
E27A FE 30   0651 NAMEN1: CP    '0'     ;< 0?
E27C 13      0652          INC    DE     ;NEXT
E27D 30 03   0653          JR    NC,NAMEN2 ;NO-GO ON
E27F 1B      0654          DEC    DE     ;MOVE PNTR BACK
E280 3E 20   0655          LD    A,SPACE ;SPACE FILL
E282 77      0656 NAMEN2: LD    (HL),A  ;PUT AWAY
E283 23      0657          INC    HL     ;POINT NEXT
E284 1A      0658          LD    A,(DE)  ;GET NEXT
E285 10 F3   0659          DJNZ  NAMEN1  ;GO FOR 5
E287 B7      0660          OR    A       ;REDO FLAGS
E288 EB      0661          EX    DE,HL   ;RESTORE HL
E289 C9      0662          RET

```

```

E28A          0664 ;
E28A          0665 ;
E28A          0666 ;
E28A          0667 ;    CASSETTE MOTOR CONTROL ROUTINES
E28A          0668 ;
E28A          0669 ;
E28A          0670 ;
E28A          E28A    0671 MOTRON: EQU    $
E28A          FD E5    0672          PUSH  IY
E28C          CD A2 E1 0673          CALL  GETIY
E28F          FD 7E 3D 0674          LD    A,(IY+TAPES);GET SPEED
E292          05      0675          DEC   B
E293          28 02    0676          JR    Z,MOTR01 ;NO
E295          C6 10    0677          ADD   10H
E297          C6 10    0678 MOTR01: ADD   10H
E299          D3 FE    0679          OUT  OFEH,A
E29B          FD 77 45 0680          LD    (IY+CMTRFG),A;PUT AWAY
E29E          FD E1    0681          POP  IY
E2A0          06 04    0682 DELAY: LD    B,4          ;LOOP COUNT
E2A2          E5      0683 DELAY1: PUSH  HL          ;WE DESTROY
E2A3          21 00 00 0684 DELAY2: LD    HL,0          ;CLEAR IT
E2A6          2B      0685 DELAY3: DEC   HL
E2A7          7C      0686          LD    A,H
E2A8          B5      0687          OR   L
E2A9          20 FB    0688          JR    NZ,DELAY3 ;LOOP
E2AB          10 F6    0689          DJNZ DELAY2    ;SOME MORE
E2AD          E1      0690          POP  HL          ;RESTORE
E2AE          C9      0691          RET          ;WE'RE THRU
E2AF          0692 ;
E2AF          E2AF    0693 MTROFF: EQU    $
E2AF          06 01    0694          LD    B,1
E2B1          CD A2 E2 0695          CALL  DELAY1
E2B4          FD E5    0696 MTROF1: PUSH  IY
E2B6          CD A2 E1 0697          CALL  GETIY
E2B9          AF      0698          XOR  A
E2BA          D3 FE    0699          OUT  OFEH,A
E2BC          FD 77 45 0700          LD    (IY+CMTRFG),A;PUT AWAY
E2BF          FD E1    0701          POP  IY
E2C1          C9      0702          RET          ;GO BACK
E2C2          0703 ;
E2C2          0704 ;    UART EQUATES
E2C2          0705 ;
E2C2          00FD    0706 UARTS: EQU    OFDH
E2C2          00FC    0707 UARTD: EQU    OFCH
E2C2          0708 ;
E2C2          0709 ;
E2C2          0710 ;    NULL ROUTINE
E2C2          0711 ;
E2C2          0712 ;
E2C2          E2C2    0713 NULL: EQU    $
E2C2          06 64    0714          LD    B,100    ;SET B/#
E2C4          AF      0715 NULL1: XOR  A          ;FORM NULL
E2C5          CD EE E2 0716          CALL  TAPOUT    ;SEND IT
E2C8          10 FA    0717          DJNZ NULL1    ;IS B 0?
E2CA          3C      0718          INC  A
E2CB          CD EE E2 0719          CALL  TAPOUT
E2CE          FD 70 46 0720          LD    (IY+CRCBYT),B;CLEAR CRC
E2D1          C9      0721          RET

```

```

E2D2          0722 ;
E2D2          0723 ;
E2D2          0724 ;      SPACES ROUTINE
E2D2          0725 ;
E2D2          0726 ;
E2D2          E2D2      0727 SPACES: EQU    $
E2D2          3E 20      0728          LD      A,SPACE
E2D4          CD 45 E0    0729          CALL   CHR0UT
E2D7          10 F9      0730          DJNZ   SPACES      ;LOOP TINL B=0
E2D9          C9         0731          RET
E2DA          0732 ;
E2DA          0733 ;      CASSETTE TAPE INPUT / OUTPUT
E2DA          0734 ;
E2DA          0735 ;
E2DA          0736 ;      TAPE BYTE INPUT
E2DA          0737 ;
E2DA          E2DA      0738 TAPEIN: EQU    $
E2DA          FD E5      0739          PUSH   IY
E2DC          CD A2 E1    0740          CALL   GETIY      ;GO GET IY
E2DF          CD D1 EA    0741 TAPIN1: CALL   ESCCHK      ;USER?
E2E2          20 2B      0742          JR     NZ,TAPLVE ;HE WANTS US!
E2E4          DB FD      0743          IN     A,UARTS
E2E6          CB 4F      0744          BIT   1,A
E2E8          28 F5      0745          JR     Z,TAPIN1
E2EA          DB FC      0746          IN     A,UARTD
E2EC          18 0F      0747          JR     CRCOMP
E2EE          0748 ;
E2EE          0749 ;      TAPE BYTE OUTPUT
E2EE          0750 ;
E2EE          E2EE      0751 TAPOUT: EQU    $
E2EE          FD E5      0752          PUSH   IY
E2F0          CD A2 E1    0753          CALL   GETIY      ;GO GET IY
E2F3          F5         0754          PUSH   AF
E2F4          DB FD      0755 TAPOT1: IN     A,UARTS
E2F6          CB 47      0756          BIT   0,A
E2F8          28 FA      0757          JR     Z,TAPOT1
E2FA          F1         0758          POP   AF
E2FB          D3 FC      0759          OUT   UARTD,A
E2FD          0760 ;
E2FD          0761 ;      CRC COMPUTATION ROUTINE
E2FD          0762 ;
E2FD          CS        0763 CRCOMP: PUSH   BC      ;WE DESTROY
E2FE          F5         0764          PUSH   AF      ;ALSO
E2FF          FD 46 46    0765          LD     B,(IY+CRCBYT);GET CRC
E302          90         0766          SUB   B
E303          47         0767          LD     B,A
E304          A8         0768          XOR   B
E305          2F         0769          CPL
E306          90         0770          SUB   B
E307          FD 77 46    0771          LD     (IY+CRCBYT),A
E30A          F1         0772          POP   AF
E30B          C1         0773          POP   BC      ;RESTORE
E30C          FD E1      0774 TAPLV2: POP   IY      ;RESTORE
E30E          C9         0775          RET
E30F          0776 ;
E30F          0777 ;
E30F          AF        0778 TAPLVE: XOR   A
E310          18 FA      0779          JR     TAPLV2

```

```

E312          0780 ;
E312          0781 ;
E312          0782 ;
E312          0783 ;
E312          0784 ;      COMMAND TABLE
E312          0785 ;
E312          0786 ;      FORMATED AS FOLLOWS:
E312          0787 ;          2 BYTE ASCII COMMAND
E312          0788 ;          2 BYTE JUMP ADDRESS
E312          0789 ;          END BYTE IS 0
E312          0790 ;
E312          0791 ;
E312          0792 TABLE: EQU $
E312 44 55      0793      DB 'DU'
E314 D3 E4      0794      DW DUMP ;DUMP FROM MEMORY
E316 45 4E      0795      DB 'EN'
E318 38 E5      0796      DW ENTER ;ENTER TO MEMORY
E31A 53 41      0797      DB 'SA'
E31C 38 E6      0798      DW SAVE ;SAVE FILE ON CASSETTE
E31E 4C 4F      0799      DB 'LO'
E320 8A E7      0800      DW LOAD ;LOAD FILE FROM CASS.
E322 46 49      0801      DB 'FI'
E324 B9 E6      0802      DW FILES ;LIST CASSETTE FILES
E326 47 4F      0803      DB 'GO'
E328 97 E5      0804      DW GO ;GO TO PROGRAM
E32A 43 52      0805      DB 'CR'
E32C 5C E8      0806      DW CREAT ;CREAT BATCH FILE
E32E 53 45      0807      DB 'SE'
E330 A2 E5      0808      DW SET ;SET PARAMETERS
E332 4D 4F      0809      DB 'MO'
E334 62 E5      0810      DW MOVE ;MOVE BLOCK MEMORY
E336 54 45      0811      DB 'TE'
E338 A1 E8      0812      DW TEST ;TEST
E33A 42 41      0813      DB 'BA'
E33C 58 E8      0814      DW BATCH ;EXECUTE BATCH FILE
E33E 4C 49      0815      DB 'LI'
E340 84 E8      0816      DW LIST ;LIST BATCH FILE
E342 50 52      0817      DB 'PR'
E344 45 E8      0818      DW PRMPTC ;CHANGE PROMPT CHAR
E346 4F 56      0819      DB 'OV'
E348 D4 E1      0820      DW FINISH ;END BATCH MODE
E34A 50 50      0821      DB 'PP'
E34C 8A E9      0822      DW PROMPK ;BRANCH TO FROM PACK
E34E          0823 ENDTBL: EQU $
E34E 00         0824      DB 0

```

E34F		0826	;			
E34F		0827	;			
E34F		0828	;			
E34F		0829	;			
E34F		0830	;			
E34F		0831	;	SET COMMAND TABLE		
E34F		0832	;			
E34F		0833	;			
E34F		0834	;			
E34F		0835	;			
E34F		0836	;			
E34F	E34F	0837	SETTBL: EQU	\$		
E34F		0838	;			
E34F	54	0839	DB	'T'		
E350	DE E5	0840	DW	TAPE	;	SET TAPE RATE
E352	53	0841	DB	'S'		
E353	EA E5	0842	DW	SPEED	;	SET DISPLAY SPEED
E355	58	0843	DB	'X'		
E356	F2 E5	0844	DW	XEQSET	;	SET XEQ ADDRESS
E358	46	0845	DB	'F'		
E359	EE E5	0846	DW	SETFIL	;	SET FILE TYPE
E35B	4F	0847	DB	'O'		
E35C	F9 E5	0848	DW	SETOUT	;	SET OUTPUT
E35E	49	0849	DB	'I'		
E35F	1C E6	0850	DW	SETIN	;	SET INPUT
E361	00	0851	DB	0		

E362		0853 ;		
E362		0854 ;		
E362		0855 ;		
E362		0856 ;		
E362		0857 ;	MESSAGE TABLE	
E362		0858 ;		
E362		0859 ;		
E362		0860 ;		
E362		0861 ;		
E362	0D	0862	HEDING: DB	CR
E363	45 58 49 44	0863	DB	'EXIDY STANDARD MONITOR'
	59 20 53 54			
	41 4E 44 41			
	52 44 20 4D			
	4F 4E 49 54			
	4F 52			
E379	0D 0D	0864	DB	CR,CR
E37B	56 45 52 53	0865	DB	'VERSION 1.0'
	49 4F 4E 20			
	31 2E 30			
E386	0D	0866	DB	CR
E387	43 4F 50 59	0867	DB	'COPYRIGHT (C) 1978 BY '
	52 49 47 48			
	54 20 28 43			
	29 20 31 39			
	37 38 20 42			
	59 20			
E39D	45 58 49 44	0868	DB	'EXIDY INC.'
	59 20 49 4E			
	43 2E			
E3A7	0D 0D	0869	DB	CR,CR
E3A9	54 48 45 20	0870	DB	'THE TOP OF RAM IS '
	54 4F 50 20			
	4F 46 20 52			
	41 4D 20 49			
	53 20			
E3BB	00	0871	DB	0
E3BC	20 48 45 58	0872	HEAD2: DB	' HEX.'
	2E			
E3C1	0D	0873	DB	CR
E3C2	53 54 41 43	0874	DB	'STACK BEGINS FROM ',0
	4B 20 42 45			
	47 49 4E 53			
	20 46 52 4F			
	4D 20 00			
E3D5	20 48 45 58	0875	HEAD3: DB	' HEX.'
	2E			
E3DA	0D 0D 00	0876	DB	CR,CR,0
E3DD		0877 ;		
E3DD	45 52 52 4F	0878	ERRMSG: DB	'ERROR - ',0
	52 20 2D 20			
	00			
E3E6	49 4E 56 41	0879	IVCMMSG: DB	'INVALID COMMAND',0
	4C 49 44 20			
	43 4F 4D 4D			
	41 4E 44 00			
E3F6	49 4E 56 41	0880	IVPMSG: DB	'INVALID PARAMETER',0
	4C 49 44 20			

	50 41 52 41			
	40 45 54 45			
	52 00			
E408	54 41 50 45	0881	CRCMSG: DB	'TAPE CRC ERROR',0
	20 43 52 43			
	20 45 52 52			
	4F 52 00			
E417		0882	;	
E417	0D	0883	DHEAD: DB	CR
E418	41 44 44 52	0884	DB	'ADDR 0 1 2 3'
	20 20 20 30			
	20 20 31 20			
	20 32 20 20			
	33			
E429	20 20 20 34	0885	DB	' 4 5 6 7'
	20 20 35 20			
	20 36 20 20			
	37			
E436	20 20 20 38	0886	DB	' 8 9 A B'
	20 20 39 20			
	20 41 20 20			
	42			
E443	20 20 20 43	0887	DB	' C D E F'
	20 20 44 20			
	20 45 20 20			
	46			
E450	0D 0D 00	0888	DB	CR,CR,0
E453		0889	;	
E453	0D 0D	0890	FILHD: DB	CR,CR
E455	4E 41 4D 45	0891	DB	'NAME
	20 20 20			
E45C	46 49 4C 45	0892	DB	'FILE
	20			
E461	42 4C 43 4B	0893	DB	'BLCK ADDR
	20 41 44 44			
	52 20			
E46B	47 4F 41 44	0894	DB	'GOADDRS'
	44 52 53			
E472	0D 0D 00	0895	DB	CR,CR,0
E475		0896	;	
E475		0897	;	
E475	0D 41 44 44	0898	TESTHD: DB	CR,'ADDR BIT'
	52 20 20 20			
	42 49 54			
E480	20 30 20 20	0899	DB	' 0 1
	20 31 20 20			
	20			
E489	32 20 20 20	0900	DB	'2 3
	33 20 20 20			
E491	34 20 20 20	0901	DB	'4 5
	35 20 20 20			
E499	36 20 20 20	0902	DB	'6 7',CR,CR,0
	37 0D 0D 00			
E4A1	42 41 44 20	0903	BADMSG: DB	'BAD ',0
	00			
E4A6	4F 4B 20 20	0904	OKMSG: DB	'OK ',0
	00			
E4AB	20 20 50 41	0905	PSCMSG: DB	' PASS COMPLETED.',CR,CR,0

	53	53	20	43			
	4F	4D	50	4C			
	45	54	45	44			
	2E	0D	0D	00			
E4BF					0906	;	
E4BF	0D	4C	4F	41	0907	LDGMSG: DB	CR, 'LOADING -', 0
	44	49	4E	47			
	20	2D	00				
E4CA	46	4F	55	4E	0908	FNDMSG: DB	'FOUND - ', 0
	44	20	2D	20			
	00						

EXIDY STANDARD MONITOR SOFTWARE

00000000

```

E538          0967 ;
E538          0968 ;
E538          0969 ;
E538          0970 ;      ENTER COMMAND
E538          0971 ;
E538          0972 ;
E538          0973 ;
E538          0974 ENTER: EQU    $
E538 CD 05 E2  0975          CALL  CRLF      ;NEXT LINE
E538 CD 2F E2  0976          CALL  SCANHL   ;SKIP "EN"
E53E CA DE E1  0977          JP    Z,ERRFAR ;EOL?
E541 CD 3D E2  0978          CALL  CONV     ;GET ADDRESS
E544 CD 0F E2  0979 ENTER1: CALL  ADDCOL    ;PRINT ADDRESS
E547 D5        0980          PUSH  DE      ;SAVE IT
E548 CD 3A E1  0981          CALL  LINEIN  ;GET A LINE
E548 FD E5     0982          PUSH  IY     ;GET BUFFER
E54D E1        0983          POP   HL     ; INTO HL
E54E D1        0984          POP   DE     ; AND ADDRESS
E54F CD 25 E2  0985 ENTER2: CALL  SCAN     ;FIND PARAM
E552 CA 44 E5  0986          JP    Z,ENTER1 ;CR-LOOP
E555 FE 2F     0987          CP    '/'    ;END?
E557 C8        0988          RET   Z     ;YES
E558 D5        0989          PUSH DE     ;SAVE-CONV DESTROYS
E559 CD 3D E2  0990          CALL CONV   ;MAKE A #
E55C 7B        0991          LD   A,E    ; IN A
E55D D1        0992          POP  DE     ;RESTORE
E55E 12        0993          LD   (DE),A ; AND MEM
E55F 13        0994          INC  DE     ;NEXT
E560 18 ED     0995          JR   ENTER2 ;AGAIN
    
```

```

E562      *      0997 ;
E562      0998 ;
E562      0999 ;
E562      1000 ;      MOVE BLOCK ROUTINE
E562      1001 ;
E562      1002 ;
E562      1003 ;
E562      E562   1004 MOVE:  EQU    $
E562      CD 2F E2 1005      CALL  SCANHL  ;SKIP "MO"
E565      CA DE E1 1006      JP     Z,ERRPAR
E568      CD 3D E2 1007      CALL  CONV
E56B      D5      1008      PUSH  DE      ;SAVE "FROM"
E56C      CD 25 E2 1009      CALL  SCAN
E56F      CA DE E1 1010      JP     Z,ERRPAR
E572      CD 3D E2 1011      CALL  CONV
E575      D5      1012      PUSH  DE      ;SAVE "FROM END"
E576      CD 25 E2 1013      CALL  SCAN
E579      FE 53    1014      CP     'S'      ;SWATH?
E57B      28 11    1015      JR     Z,MOVE2   ;YES-ALL SET!
E57D      CD 3D E2 1016      CALL  CONV      ;GET SWATH
E580      37      1017      SCF
E581      3F      1018      CCF      ;CLEAR CARRY
E582      E1      1019      POP   HL      ;GET "FROM END"
E583      C1      1020      POP   BC      ;GET "FROM BEG"
E584      C5      1021      PUSH  BC      ;SAVE AGAIN
E585      ED 42    1022      SBC  HL,BC    ;MAKE SWATH
E587      E5      1023      PUSH  HL      ;MOVE HL
E588      C1      1024      POP   BC      ; TO BC
E589      E1      1025 MOVE1: POP   HL      ;GET "FROM"
E58A      03      1026      INC  BC      ;ADJUST
E58B      ED B0    1027      LDIR
E58D      C9      1028      RET
E58E      23      1029 MOVE2: INC  HL      ;SKIP "S"
E58F      CD 3D E2 1030      CALL  CONV      ;GET SWATH
E592      D5      1031      PUSH  DE      ;MOVE DE
E593      C1      1032      POP   BC      ; TO BC
E594      D1      1033      POP   DE      ;GET "TO"
E595      18 F2    1034      JR     MOVE1    ;CONTINUE UPSTAIRS

```

E597		1036 ;			
E597		1037 ;			
E597		1038 ;			
E597		1039 ;	GO COMMAND		
E597		1040 ;			
E597		1041 ;			
E597		1042 ;			
	E597	1043 GO:	EQU	\$	
E597	CD 2F E2	1044	CALL	SCANHL	;SKIP "GO"
E59A	CA DE E1	1045	JP	Z,ERRPAR	
E59D	CD 3D E2	1046	CALL	CONV	;GET ADDRESS
E5A0	EB	1047	EX	DE,HL	;PUT IN HL
E5A1	E9	1048	JP	(HL)	;GO TO IT!

```

E5A2      1050 ;
E5A2      1051 ;
E5A2      1052 ;
E5A2      1053 ;      SET COMMAND
E5A2      1054 ;
E5A2      1055 ;
E5A2      1056 ;
E5A2      E5A2
E5A2      CD 2F E2      1057 SET:      EQU      $
E5A5      CA DE E1      1058      CALL      SCANHL      ;SKIP "SE"
E5A8      DD 21 4F E3      1059      JP      Z,ERRPAR
E5AC      DD BE 00      1060      LD      IX,SETTBL      ;POINT SET TABLE
E5AF      28 11      1061 SET1:      CP      (IX)      ;IS IT?
E5B1      DD 23      1062      JR      Z,SET2      ;YES-GO SET UP
E5B3      DD 23      1063      INC      IX      ;NO-
E5B5      DD 23      1064      INC      IX      ; POINT
E5B7      F5      1065      INC      IX      ; NEXT
E5B8      DD 7E 00      1066      PUSH     AF      ;SAVE CHAR
E5BB      B7      1067      LD      A,(IX)      ;IS IT
E5BC      CA DE E1      1068      OR      A      ; END?
E5BF      F1      1069      JP      Z,ERRPAR      ;YES-INVALID
E5C0      18 EA      1070      POP      AF      ;RESTORE
E5C2      23      1071      JR      SET1      ;CONTINUE
E5C3      CD 25 E2      1072 SET2:      INC      HL      ;SKIP CHAR
E5C6      FE 3D      1073      CALL     SCAN      ;TO NEXT
E5C8      C2 DE E1      1074      CP      '='      ;?
E5CB      23      1075      JP      NZ,ERRPAR      ;NO-INVALID
E5CC      CD 25 E2      1076      INC      HL      ;SKIP "="
E5CF      CA DE E1      1077      CALL     SCAN      ;AND DELIMS
E5D2      FE 47      1078      JP      Z,ERRPAR      ;BAD END
E5D4      30 03      1079      CP      'G'
E5D6      CD 3D E2      1080      JR      NC,SET3
E5D9      DD 23      1081      CALL     CONV      ;MAKE FOR SET
E5DB      C3 1C E1      1082 SET3:      EQU      $
E5D9      DD 23      1083      INC      IX      ;FOR MAIN3
E5DB      C3 1C E1      1084      JP      MAIN3      ;JUMP FROM TBL
    
```

```

E5DE      1086 ;
E5DE      1087 ;
E5DE      1088 ;      SET VALUE ROUTINES
E5DE      1089 ;
E5DE      1090 ;
E5DE      1091 ;
E5DE      1092 ;      SET TAPE RATE
E5DE      1093 ;
      E5DE      1094 TAPE: EQU $
E5DE      7B      1095 LD A,E
E5DF      B7      1096 OR A ;TEST IF ZERO
E5E0      3E 00    1097 LD A,0 ;SET IN CASE 300 BAUD
E5E2      20 02    1098 JR NZ,TAPE1 ;GO DO 300 BAUD
E5E4      3E 40    1099 LD A,40H ;MAKE 1200 BAUD
E5E6      FD 77 3D 1100 TAPE1: LD (IY+TAPES),A;PUT AWAY
E5E9      C9      1101 RET
E5EA      1102 ;
E5EA      1103 ;      SET DISPLAY SPEED
E5EA      1104 ;
      E5EA      1105 SPEED: EQU $
E5EA      FD 73 3E 1106 LD (IY+SPEEDS),E
E5ED      C9      1107 RET
E5EE      1108 ;
E5EE      1109 ;      SET CASSETTE FILE TYPE
E5EE      1110 ;
      E5EE      1111 SETFIL: EQU $
E5EE      FD 73 4D 1112 LD (IY+CHEAD+HTYPE),E
E5F1      C9      1113 RET
E5F2      1114 ;
E5F2      1115 ;      SET XEQ ADDRESS
E5F2      1116 ;
      E5F2      1117 XEQSET: EQU $
E5F2      FD 73 52 1118 LD (IY+CHEAD+HXEQ),E
E5F5      FD 72 53 1119 LD (IY+CHEAD+HXEQ+1),D
E5F8      C9      1120 RET
E5F9      1121 ;
E5F9      1122 ;      SET OUTPUT ADDRESS
E5F9      1123 ;
E5F9      FE 56    1124 SETOUT: CP 'V'
E5FB      20 03    1125 JR NZ,SETOT1
E5FD      11 1B E0 1126 LD DE,VIDEO E01B 27,229
E600      FE 50    1127 SETOT1: CP 'P'
E602      20 03    1128 JR NZ,SETOT2
E604      11 21 E0 1129 LD DE,PARLOT E021 33,229
E607      FE 53    1130 SETOT2: CP 'S'
E609      20 03    1131 JR NZ,SETOT3
E60B      11 12 E0 1132 LD DE,OUTAPE E012 18,224
E60E      FE 4C    1133 SETOT3: CP 'L' ;IS IT CENTRONICS
E610      20 03    1134 JR NZ,SETOT4 ;NO
E612      11 93 E9 1135 LD DE,CENDRV E993 147,233
E615      FD 73 3F 1136 SETOT4: LD (IY+OUTADD),E
E618      FD 72 40 1137 LD (IY+OUTADD+1),D
E61B      C9      1138 RET
E61C      1139 ;
E61C      1140 ;      SET INPUT ADDRESS
E61C      1141 ;
      E61C      1142 SETIN: EQU $
E61C      FE 4B    1143 CP 'K'

```

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

E61E	20 03	1144	JR	NZ,SETIN1		
E620	11 18 E0	1145	LD	DE,KEYBRD	E018	24,224
E623	FE 50	1146	SETIN1: CP	'P'		
E625	20 03	1147	JR	NZ,SETIN2		
E627	11 1E E0	1148	LD	DE,PARLIN	E01E	30,224
E62A	FE 53	1149	SETIN2: CP	'S'		
E62C	20 03	1150	JR	NZ,SETIN3		
E62E	11 0F E0	1151	LD	DE,INTAPE	E00F.	15,224
E631	FD 73 41	1152	SETIN3: LD	(IY+INADD),E		
E634	FD 72 42	1153	LD	(IY+INADD+1),D		
E637	C9	1154	RET			


```

E638      1156 ;
E638      1157 ;
E638      1158 ;
E638      1159 ;      SAVE COMMAND
E638      1160 ;
E638      1161 ;
E638      1162 ;
E638      1163 SAVE: EQU $
E638      1164 CALL NAMFND ;GET NAME
E638      1165 JP Z,ERRPAR ;NO NAME
E638      1166 JP C,ERRPAR ;BAD NAME
E641      1167 CALL SCANLT ;SKIP NAME
E644      1168 JP Z,ERRPAR ;EOL
E647      1169 CALL CONV ;GET BEG ADD
E64A      1170 PUSH DE ;SAVE
E64B      1171 LD (IY+CHEAD+HADDR),E
E64E      1172 LD (IY+CHEAD+HADDR+1),D
E651      1173 CALL SCAN ;NEXT
E654      1174 JP Z,ERRPAR ;NO END ADD
E657      1175 CALL CONV
E65A      1176 SAVBAS: EX DE,HL ;SAVE HL
E65B      1177 POP BC ;GET BEG
E65C      1178 PUSH BC ;RESAVE
E65D      1179 SCF ;CLEAR ARRY
E65E      1180 CCF
E65F      1181 SBC HL,BC
E661      1182 INC HL ;ADJUST
E662      1183 PUSH HL ;SAVE BLK
E663      1184 LD (IY+CHEAD+HSIZE),L
E666      1185 LD (IY+CHEAD+HSIZE+1),H
E669      1186 LD (IY+CHEAD+5),55H;MAKE AN EXIDY FILE
E66D      1187 EX DE,HL
E66E      1188 LD B,1 ;DEFAULT
E670      1189 CALL SCAN ;SKIP TO EOL
E673      1190 JR Z,SAVE1
E675      1191 CALL CONV ;GET UNIT
E678      1192 LD B,E ; IN B
E679      1193 SAVE1: CALL MOTRON ;TURN ON CAS.
E67C      1194 CALL NULL ;& NULL IT
E67F      1195 PUSH IY ;MOVE IY
E681      1196 POP IX ; TO IX
E683      1197 LD B,HEADLN ;HEADER LENGTH
E685      1198 SAVE2: LD A,(IX+CHEAD);GET
E688      1199 CALL TAPOUT ;SEND
E68B      1200 INC IX ;NEXT
E68D      1201 DJNZ SAVE2 ;LOOP FOR HEADER
E68F      1202 CALL WRCRC ;WRITE CRC
E692      1203 CALL NULL ;WRITE NULLS AFTER HEADER
E695      1204 POP DE ;GET BLOCK SIZE
E696      1205 POP HL ;GET BEGGINNING ADDRESS
E697      1206 SAVE3: CALL BLKADJ ;DO BLOCK ADJUST
E69A      1207 JP Z,MTROFF ;GO TURN OFF IF THRU
E69D      1208 SAVE4: LD A,(HL) ;GET BYTE
E69E      1209 CALL TAPOUT ;SEND IT
E6A1      1210 INC HL ;NEXT
E6A2      1211 DJNZ SAVE4 ;LOOP FOR BLOCK
E6A4      1212 CALL WRCRC ;WRITE CRC
E6A7      1213 JR SAVE3 ;KEEP GOIN'

```

```

E6A9          1214 ;
E6A9          1215 ; BLOCK ADJUST ROUTIN
E6A9          1216 ;
E6A9          1217 BLKADJ: EQU    $
E6A9 AF        1218          XOR    A          ;CLEAR A
E6AA FD 77 46  1219          LD     (IY+CRCBYT),A ;CLEAR CRC
E6AD 47        1220          LD     B,A          ;ALSO B
E6AE B2        1221          OR     D          ;IS D ZERO?
E6AF 20 05     1222          JR     NZ,BLKAJ2 ;NO-NORMAL RETURN
E6B1 B3        1223          OR     E          ;IS E ZERO?
E6B2 C8        1224          RET    Z          ;YES-WE'RE THRU!
E6B3 43        1225          LD     B,E          ;DO ADJUSTMENT ON DE
E6B4 5A        1226          LD     E,D
E6B5 C9        1227          RET
E6B6 15        1228 BLKAJ2: DEC    D          ;ONE LESS BLOCK
E6B7 B7        1229          OR     A          ;RESET ZERO FLAG
E6B8 C9        1230          RET          ;BYE BYE

```

```

E6B9          1232 ;
E6B9          1233 ;
E6B9          1234 ;   FILES COMMAND
E6B9          1235 ;
E6B9          1236 ;   LISTS FILES FROM CASSETTE TO
E6B9          1237 ;   TERMINAL.
E6B9          1238 ;
E6B9          1239 FILES: EQU   $
E6B9 CD 2F E2  1240          CALL  SCANHL   ;SKIP "FI"
E6BC 06 01    1241          LD     B,1     ;UNIT DEFAULT
E6BE 28 04    1242          JR     Z,FILES1
E6C0 CD 3D E2  1243          CALL  CONV    ;GET UNIT
E6C3 43       1244          LD     B,E     ; IN B
E6C4 21 53 E4  1245 FILES1: LD     HL,FILHD
E6C7 CD BA E1  1246          CALL  MSGOUT   ;SEND HEADING
E6CA CD 8A E2  1247          CALL  MOTRON   ;TURN ON!
E6CD CD 1B E7  1248 FILES2: CALL  GETHED
E6D0 CD DE E6  1249          CALL  HEDPRT   ;PRINT HEADER
E6D3 FD 7E 5C  1250          LD     A,(IY+THEAD+5);GET EXIDY FILE CHECK
E6D6 B7       1251          OR     A       ;SET FLAGS
E6D7 28 F4    1252          JR     Z,FILES2 ;DO PROC TECH SKIP
E6D9 CD 34 E7  1253          CALL  SKIPFL   ;NEXT FILE
E6DC 18 EF    1254          JR     FILES2
E6DE          1255 ;
E6DE          1256 ;-----
E6DE          1257 ;
E6DE          1258 ;   PRINTS HEADER ON TERMINAL
E6DE          1259 ;
E6DE          1260 ;
E6DE FD E5    1261 HEDPRT: PUSH  IY
E6E0 DD E1    1262          POP   IX     ;MOVE IY>IX
E6E2 06 05    1263          LD     B,5     ;NAME
E6E4 DD 7E 57  1264 FILES3: LD     A,(IX+THEAD);GET
E6E7 CD 45 E0  1265          CALL  CHRROUT  ;SEND
E6EA DD 23    1266          INC   IX     ;NEXT
E6EC 10 F6    1267          DJNZ  FILES3   ;LOOP FOR 5
E6EE 06 03    1268          LD     B,3
E6F0 CD D2 E2  1269          CALL  SPACES   ;3 SPACES
E6F3 DD 23    1270          INC   IX     ;SKIP OVER ZERO IN HEADER
E6F5 DD 7E 57  1271          LD     A,(IX+THEAD)
E6F8 CD 45 E0  1272          CALL  CHRROUT  ;SEND FILE TYPE
E6FB 06 03    1273          LD     B,3
E6FD CD D2 E2  1274          CALL  SPACES   ;3 SPACES
E700 DD 23    1275          INC   IX     ;NEXT
E702 06 03    1276          LD     B,3     ;THREE ADDRESS'
E704 DD 5E 57  1277 FILES4: LD     E,(IX+THEAD)
E707 DD 56 58  1278          LD     D,(IX+THEAD+1);GET ADD
E70A DD 23    1279          INC   IX
E70C DD 23    1280          INC   IX     ;SKIP THIS 1
E70E CD E8 E1  1281          CALL  ADROUT   ;PRINT IT
E711 3E 20    1282          LD     A,SPACE
E713 CD 45 E0  1283          CALL  CHRROUT  ;1 SPACE
E716 10 EC    1284          DJNZ  FILES4   ;LOOP FOR 3
E718 C3 05 E2  1285          JF     CRLF     ;NEW LINE

```

```

E71B      1287 ;
E71B      1288 ;
E71B      1289 ;
E71B      1290 ;      CASSETTE UTILITY ROUTINES
E71B      1291 ;
E71B      1292 ;
E71B      1293 ; -----
E71B      1294 ;
E71B      1295 ;      GET HEADER
E71B      1296 ;
E71B      1297 ;      LOADS HEADER FROM TAPE TO BUFFER
E71B      1298 ;
E71B      1299 GETHED: EQU      $
E71B      1300      CALL      TAPWT      ;SKIP NULLS
E71E      1301      PUSH      IY          ;MOVE IY
E720      1302      POP       IX          ; TO IX
E722      1303      LD        B,HEADLN  ;GET LENGTH
E724      1304 GETHD1: CALL      TAPEIN  ;GET BYTE
E727      1305      JP        Z,FINISH  ;USER WANTS US
E72A      1306      LD        (IX+THEAD),A ;MOVE IT
E72D      1307      INC       IX          ;NEXT
E72F      1308      DJNZ     GETHD1     ;LOOP
E731      1309      JP        CKCRC     ;CHECK CRC & RETURN
E734      1310 ;
E734      1311 ;
E734      1312 ; -----
E734      1313 ;
E734      1314 ;      SKIP A CASSETTE FILE
E734      1315 ;
E734      1316 ;      THIS ROUTINE SKIPS A FILE ON TAPE
E734      1317 ;      WITHOUT LOADING IT INTO MEMORY.
E734      1318 ;
E734      1319 ;
E734      1320 SKIPFL: EQU      $
E734      1321      CALL      TAPWT      ;WAIT FOR THE NULLS
E737      1322      LD        E,(IY+THEAD+HSIZE) ;GET BLK SIZE
E73A      1323      LD        D,(IY+THEAD+HSIZE+1)
E73D      1324 SKIPF1: CALL      BLKADJ  ;GO ADJUST BLOCK
E740      1325      RET        Z          ;THAT ' S ALL!
E741      1326 SKIPF2: CALL      TAPEIN  ;GET FROM TAPE
E744      1327      JP        Z,FINISH  ;
E747      1328      DJNZ     SKIPF2     ;FOR ENTIRE BLOCK
E749      1329      CALL      CKCRC     ;CHECK CRC
E74C      1330      JR        SKIPF1    ;MORE-
E74E      1331 ;
E74E      1332 ;      CHECK CRC ON TAPE
E74E      1333 ;
E74E      1334 CKCRC: EQU      $
E74E      1335      LD        B,(IY+CRCBYT)
E751      1336      CALL      TAPEIN
E754      1337      CF        B
E755      1338      JP        NZ,ERRCRC
E758      1339      RET

```

```

E759          1341 ;
E759          1342 ;
E759          1343 ;
E759          1344 ;      TAPE WAIT ROUTINE
E759          1345 ;
E759          1346 ;      THIS ROUTINE WAITS FOR TEN NULLS
E759          1347 ;      FOLLOWED BY OTHER NULLS TILL A 1
E759          1348 ;
      E759          1349 TAPWT: EQU   $
E759  C5          1350          PUSH  BC           ;WE DESTROY
E75A  06 0A      1351 TAPWT1: LD    B,10
E75C  CD DA E2  1352 TAPWT2: CALL  TAPEIN
E75F  CA D4 E1  1353          JP    Z,FINISH
E762  B7          1354          OR    A           ;IS IT A NULL?
E763  20 F5      1355          JR    NZ,TAPWT1 ;NO-START OVER
E765  10 F5      1356          DJNZ TAPWT2     ;LOOP FOR 10
E767  CD DA E2  1357 TAPWT3: CALL  TAPEIN
E76A  CA D4 E1  1358          JP    Z,FINISH
E76D  FE 01      1359          CP    1           ;A ONE?
E76F  20 F6      1360          JR    NZ,TAPWT3
E771  FD 70 46  1361          LD    (IY+CRCBYT),B ;CLEAR CRC
E774  C1          1362          POP   BC
E775  C9          1363          RET
E776          1364 ;
E776          1365 ;-----
E776          1366 ;
E776          1367 ;
E776          1368 ;      PARALLEL I/O ROUTINES
E776          1369 ;
E776          1370 ;
      E776          1371 PARIN: EQU   $
E776  DB FE      1372          IN    A,0FEH
E778  CB 7F      1373          BIT   7,A
E77A  28 FA      1374          JR    Z,PARIN
E77C  DB FF      1375          IN    A,0FFH
E77E  C9          1376          RET
E77F          1377 ;
      E77F          1378 PAROUT: EQU   $
E77F  F5          1379          PUSH AF
E780  DB FE      1380 PAROT1: IN    A,0FEH
E782  CB 77      1381          BIT   6,A
E784  28 FA      1382          JR    Z,PAROT1
E786  F1          1383          POP   AF
E787  D3 FF      1384          OUT  OFFH,A
E789  C9          1385          RET

```

```

E78A      1387 ;
E78A      1388 ;
E78A      1389 ;
E78A      1390 ;      LOAD COMMAND
E78A      1391 ;
E78A      1392 ;
E78A      1393 ;
E78A      1394 LOAD:   EQU    $
E78A      1395      CALL  SCANHL    ;SKIP "L0"
E78D      2B      1396 LOAD1:  DEC    HL      ;CHK FOR "G"
E78E      7E      1397      LD     A,(HL)
E78F      FE 30   1398      CP     '0'
E791      38 FA   1399      JR     C,LOAD1    ;SKIP DELIMS
E793      FE 47   1400      CP     'G'      ;IS IT A "G"
E795      F5      1401      PUSH   AF      ;SAVE TEST FLGS
E796      CD 64 E2 1402      CALL  NAMFND    ;GET NAME
E799      F5      1403 LODBAS: PUSH   AF      ;SAVE ALSO
E79A      06 01   1404      LD     B,1      ;DEFAULT UNIT
E79C      F5      1405      PUSH   AF      ;FOR LATER
E79D      28 19   1406      JR     Z,LOAD3    ;GO LOAD
E79F      F1      1407      POP    AF      ;DON'T NEED
E7A0      38 07   1408      JR     C,LOAD2
E7A2      CD 32 E2 1409      CALL  SCANLT    ;SKIP NAME
E7A5      F5      1410      PUSH   AF
E7A6      28 10   1411      JR     Z,LOAD3    ;GO LOAD
E7A8      F1      1412      POP    AF
E7A9      CD 3D E2 1413 LOAD2:  CALL  CONV      ;MAKE UNIT
E7AC      43      1414      LD     B,E      ; IN B
E7AD      CD 25 E2 1415      CALL  SCAN      ;SKIP OVER
E7B0      F5      1416      PUSH   AF      ;SAVE FLAGS
E7B1      28 05   1417      JR     Z,LOAD3    ;GO LOAD IF EOL
E7B3      C5      1418      PUSH   BC
E7B4      CD 3D E2 1419      CALL  CONV
E7B7      C1      1420      POP    BC      ;RESTORE
E7B8      CD 05 E2 1421 LOAD3:  CALL  CRLF      ;START WITH FRESH LINE
E7BB      CD 8A E2 1422      CALL  MOTRON    ;WHAT A TURN ON!
E7BE      D5      1423 LOAD3A: PUSH   DE      ;LOAD ADDRESS
E7BF      CD 1B E7 1424      CALL  GETHEAD   ;GET HEADER
E7C2      FD 7E 5C 1425      LD     A,(IY+THEAD+5);GET EXIDY FILE CHECK
E7C5      B7      1426      OR     A      ;SET FLAGS
E7C6      28 0B   1427      JR     Z,LOAD3B   ;NO PRINTING FOR PT
E7C8      E5      1428      PUSH   HL      ;WE NEED RIGHT NOW!
E7C9      21 CA E4 1429      LD     HL,FNDMSG ;POINT TO "FOUND --"
E7CC      CD BA E1 1430      CALL  MSGOUT    ;PRINT IT
E7CF      CD DE E6 1431      CALL  HEDPRT    ;PRINT TAPE HEADER
E7D2      E1      1432      POP    HL      ;GET BACK
E7D3      D1      1433 LOAD3B: POP    DE      ;RESTORE ADD
E7D4      F1      1434      POP    AF      ;FLAGS
E7D5      F5      1435      PUSH   AF
E7D6      20 06   1436      JR     NZ,LOAD5   ;ADD IN HEADER
E7D8      FD 5E 60 1437      LD     E,(IY+THEAD+HADDR);GET ADD
E7DB      FD 56 61 1438      LD     D,(IY+THEAD+HADDR+1)
E7DE      E1      1439 LOAD5:  POP    HL
E7DF      F1      1440      POP    AF      ;NAME?
E7E0      F5      1441      PUSH   AF      ;PUT BACK
E7E1      E5      1442      PUSH   HL      ;DITTO
E7E2      28 14   1443      JR     Z,LOAD7    ;NOPE-GO LOAD
E7E4      38 12   1444      JR     C,LOAD7

```

E7E6	FD E5	1445	PUSH	IY	;	PUT IY	
E7E8	DD E1	1446	POP	IX	;	IN IX	
E7EA	06 05	1447	LD	B,5	;	NAME LENGH	
E7EC	DD 7E 47	1448	LOAD6:	LD	A,(IX+CHEAD);	GET	
E7EF	DD BE 57	1449		CP	(IX+THEAD);	SAME?	
E7F2	DD 23	1450		INC	IX	;	NEXT
E7F4	20 49	1451		JR	NZ,LOADSK	;	GO SKIP
E7F6	10 F4	1452		DJNZ	LOAD6	;	KEEP GOIN
E7F8	FD 7E 5C	1453	LOAD7:	LD	A,(IY+THEAD+5);	GET EXIDY FILE CH	
E7FB	B7	1454		OR	A	;	SET FLAGS
E7FC	28 09	1455		JR	Z,LOAD7A	;	NO PRINTING FOR. PT
E7FE	21 BF E4	1456		LD	HL,LDGMSG	;	POINT TO "LOADING -"
E801	CD BA E1	1457		CALL	MSGOUT	;	PRINT IT
E804	CD 59 E7	1458		CALL	TAPWT	;	WAIT FOR NULLS
E807	EB	1459	LOAD7A:	EX	DE,HL	;	FLIP 'EM
E808	FD 5E 5E	1460		LD	E,(IY+THEAD+HSIZE);	GET BLK	
E80B	FD 56 5F	1461		LD	D,(IY+THEAD+HSIZE+1)		
E80E	CD A9 E6	1462	LOAD8:	CALL	BLKADJ	;	ADJUST BLOCK
E811	28 0F	1463		JR	Z,LOAD10	;	THRU
E813	CD DA E2	1464	LOAD9:	CALL	TAPEIN	;	GET BYTE
E816	CA D4 E1	1465		JP	Z,FINISH	;	USER WANTS US
E819	77	1466		LD	(HL),A	;	PUT AWAY
E81A	23	1467		INC	HL	;	NEXT
E81B	10 F6	1468		DJNZ	LOAD9	;	DO ALL BLOCKS
E81D	CD 4E E7	1469		CALL	CKCRC	;	CHECK CRC
E820	18 EC	1470		JR	LOAD8	;	LOOP FOR ALL BLOCKS
E822	CD AF E2	1471	LOAD10:	CALL	MTROFF	;	SHUT UP
E825	21 53 E4	1472		LD	HL,FILHD	;	POINT TO HEADING
E828	CD BA E1	1473		CALL	MSGOUT	;	PRINT IT
E82B	CD DE E6	1474		CALL	HEDPRT	;	GO PRINT HEADER
E82E	F1	1475		POP	AF		
E82F	F1	1476		POP	AF		
E830	F1	1477		POP	AF		
E831	C0	1478		RET	NZ	;	WE'RE THRU
E832	FD 7E 5D	1479		LD	A,(IY+THEAD+HTYPE);	GET FILE TYPE	
E835	E6 80	1480		AND	80H	;	DATA FILE?
E837	C0	1481		RET	NZ	;	YES! GO BACK
E838	FD 6E 62	1482		LD	L,(IY+THEAD+HXEQ);	GET XEQ ADDR	
E83B	FD 66 63	1483		LD	H,(IY+THEAD+HXEQ+1)		
E83E	E9	1484		JP	(HL)	;	GO DO IT!!
E83F	CD 34 E7	1485	LOADSK:	CALL	SKIFFL	;	GO OVER IT!
E842	C3 BE E7	1486		JP	LOAD3A		

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

```

E845      1488 ;
E845      1489 ;
E845      1490 ;
E845      1491 ;      CHANGE PROMPT CHARACTER COMMAND
E845      1492 ;
E845      1493 ;
E845      1494 ;
E845      1495 PRMPTC: EQU    $
E845      1496      PUSH   IY
E847      E1      1497      POP    HL
E848      7E      1498 PRMP1: LD    A,(HL)
E849      FE 0D   1499      CP    CR
E84B      CA DE E1 1500      JP    Z,ERRPAR
E84E      FE 3D   1501      CP    '='
E850      23      1502      INC   HL
E851      20 F5   1503      JR    NZ,PRMP1
E853      7E      1504      LD    A,(HL)
E854      FD 77 44 1505      LD    (IY+PROMPT),A
E857      C9      1506      RET
E858      1507 ;
E858      1508 ;-----
E858      1509 ;
E858      1510 ;
E858      1511 ;
E858      1512 ;      BATCH COMMAND
E858      1513 ;
E858      1514 ;
E858      1515 BATCH: EQU    $
E858      FD 70 43 1516      LD    (IY+BATCHF),B;SET FLAG
E85B      C9      1517      RET
    
```



```

E85C          1519 ;
E85C          1520 ;
E85C          1521 ;
E85C          1522 ;          CREAT BATCH FILE COMMAND
E85C          1523 ;
E85C          1524 ;
E85C          1525 ;
E85C          E85C          1526 CREAT: EQU $
E85C          3E 2A          1527          LD A,'*'
E85E          CD 45 E0      1528          CALL CHROUT
E861          CD 3A E1      1529          CALL LINEIN ;GET A LINE
E864          FD E5         1530          PUSH IY ;MOVE IY
E866          E1           1531          POP HL ; TO HL
E867          7E           1532          LD A,(HL)
E868          FE 0D        1533          CP CR ;SEE IF END
E86A          C8           1534          RET Z ;YES!
E86B          06 01        1535          LD B,1
E86D          CD 8A E2      1536          CALL MOTRON ;TURN ON
E870          CD C2 E2      1537          CALL NULL ;SEND NULLS
E873          7E           1538 CREAT1: LD A,(HL) ;GET
E874          23           1539          INC HL ;NEXT
E875          CD EE E2      1540          CALL TAPOUT ;SEND
E878          FE 0D        1541          CP CR ;END?
E87A          20 F7        1542          JR NZ,CREAT1 ;NO
E87C          CD 9B E8      1543          CALL WRCRC ;WRITE CRC
E87F          CD AF E2      1544          CALL MTROFF ;OFF
E882          18 D8        1545          JR CREAT ;CONTINUE
E884          1546 ;
E884          1547 ;-----
E884          1548 ;
E884          1549 ;
E884          1550 ;          LIST BATCH FILE COMMAND
E884          1551 ;
E884          1552 ;
E884          1553 ;
E884          E884          1554 LIST: EQU $
E884          06 01        1555          LD B,1
E886          CD 8A E2      1556          CALL MOTRON ;TURN ON
E889          CD 05 E2      1557 LIST1: CALL CRLF ;NEW LINE
E88C          CD 59 E7      1558          CALL TAPWT ;WAIT FOR NULLS
E88F          CD DA E2      1559 LIST3: CALL TAPEIN ;GET
E892          FE 0D        1560          CP CR ;IS IT?
E894          28 F3        1561          JR Z,LIST1 ;YES!
E896          CD 45 E0      1562          CALL CHROUT ;PRINT IT
E899          18 F4        1563          JR LIST3 ;CONTINUE
E89B          1564 ;
E89B          1565 ;          WRITE CRC TO TAPE
E89B          1566 ;
E89B          E89B          1567 WRCRC: EQU $
E89B          FD 7E 46      1568          LD A,(IY+CRCBYT)
E89E          C3 EE E2      1569          JP TAPOUT ;GO WRITE & RETURN

```

```

E8A1      1571 ;
E8A1      1572 ;
E8A1      1573 ;
E8A1      1574 ;      MEMORY TEST COMMAND
E8A1      1575 ;
E8A1      1576 ;
E8A1      1577 ;
E8A1      E8A1      1578 TEST: EQU $
E8A1      CD 2F E2 1579      CALL SCANHL ;SKIP 'TE'
E8A4      CA DE E1 1580      JF Z,ERRPAR
E8A7      CD 3D E2 1581      CALL CONV ;GET FROM
E8AA      D5 1582      PUSH DE ;AND SAVE IT
E8AB      CD 25 E2 1583      CALL SCAN ;SKIP DELIMS
E8AE      CA DE E1 1584      JF Z,ERRPAR
E8B1      CD 3D E2 1585      CALL CONV ;GET TO
E8B4      D5 1586      PUSH DE ;SAVE TO
E8B5      CD 25 E2 1587      CALL SCAN ;SEE IF CONTINUOUS
E8B8      D1 1588      POP DE
E8B9      E1 1589      POP HL ;GET FROM STACK
E8BA      01 01 00 1590      LD BC,1 ;SET PASS COUNTER
E8BD      FE 43 1591 TEST1: CP 'C' ;SET CONTINUOUS FLAGS
E8BF      F5 1592      PUSH AF ; IN STACK
E8C0      D5 1593      PUSH DE ;PUT BACK TO & FROM
E8C1      E5 1594      PUSH HL
E8C2      C5 1595      PUSH BC
E8C3      06 00 1596      LD B,0 ;CREAT MASK
E8C5      08 1597      EX AF,AF'
E8C6      AF 1598      XOR A
E8C7      08 1599      EX AF,AF'
E8C8      CD 2F E9 1600 TEST2: CALL REGRST
E8CB      70 1601 STUFF1: LD (HL),B ;PUT MASK IN MEM
E8CC      23 1602      INC HL ;NEXT MEMORY
E8CD      CD 3C E9 1603      CALL ENDCK ;SEE IF THRU
E8D0      20 F9 1604      JR NZ,STUFF1 ;GO ON IF NOT!
E8D2      CD D1 EA 1605      CALL QUIK ;SEE IF USER WANTS US
E8D5      CD 81 E9 1606      CALL STARPT ;PRINT "*"
E8D8      C2 D4 E1 1607      JF NZ,FINISH ;GO TO HIM IF SO
E8DB      CD 2F E9 1608      CALL REGRST ;GET TO & FROM
E8DE      78 1609 CHECK1: LD A,B
E8DF      BE 1610      CP (HL) ;IS IT OK?
E8E0      C4 42 E9 1611      CALL NZ,BADBYT ;NO-GO SAY SO!
E8E3      23 1612      INC HL ;NEXT ONE
E8E4      CD 3C E9 1613      CALL ENDCK ;END?
E8E7      20 F5 1614      JR NZ,CHECK1 ;NO!
E8E9      CD 85 E9 1615      CALL STARP2 ;ERASE "*"
E8EC      04 1616      INC B ;NEW MASK
E8ED      20 D9 1617      JR NZ,TEST2 ;CONTINUE FOR 255
E8EF      0E 00 1618      LD C,0 ;CREATE MASK
E8F1      41 1619 TEST3: LD B,C ;PUT IN PROPER PLACE
E8F2      CD 2F E9 1620      CALL REGRST
E8F5      70 1621 STUFF3: LD (HL),B
E8F6      23 1622      INC HL ;NEXT
E8F7      04 1623      INC B ;SHIFT MASK
E8F8      CD 3C E9 1624      CALL ENDCK ;END?
E8FB      20 F8 1625      JR NZ,STUFF3 ;NO
E8FD      41 1626      LD B,C ;RESET
E8FE      CD D1 EA 1627      CALL QUIK ;IS HE THERE?
E901      CD 81 E9 1628      CALL STARPT ;PRINT "*"

```

```

E904 C2 D4 E1      1629      JP      NZ,FINISH ;YES-GO TO HIM!
E907 CD 2F E9      1630      CALL    REGRST
E90A 78             1631 CHECK3: LD      A,B
E90B BE             1632      CP      (HL) ;IS IT OK?
E90C C4 42 E9      1633      CALL    NZ,BADBYT ;NO!
E90F 23             1634      INC     HL ;NEXT
E910 04             1635      INC     B ;MASK TOO
E911 CD 3C E9      1636      CALL    ENDCK ;THRU?
E914 20 F4          1637      JR      NZ,CHECK3 ;NO
E916 CD 85 E9      1638      CALL    STARP2 ;ERASE "*"
E919 0C             1639      INC     C
E91A 20 D5          1640      JR      NZ,TEST3
E91C             1641 ;
E91C D1             1642      POP     DE ;GET PASS COUNT
E91D D5             1643      PUSH    DE ;NOW-MOVE IT TO BC
E91E C1             1644      POP     BC
E91F CD 0F E2      1645      CALL    ADDCOL ;PRINT PASS #
E922 21 AB E4      1646      LD      HL,PSCMSG ;PRINT PASS MESSAGE
E925 CD BA E1      1647      CALL    MSGOUT
E928 E1             1648      POP     HL ;GET EVERYTHING OFF ST
E929 D1             1649      POP     DE
E92A F1             1650      POP     AF
E92B C0             1651      RET     NZ ;NOT CONTINUOUS
E92C 03             1652      INC     BC ;NEW PASS
E92D 18 BE          1653      JR      TEST1 ;GO START OVER
E92F             1654 ;
E92F             1655 ; TEST PROGRAM UTILITIES
E92F             1656 ;
E92F             1657 ;
E92F E92F          1658 REGRST: EQU    $
E92F D9             1659      EXX ;SAVE REGISTERS.
E930 E1             1660      POP     HL ;GET RET ADDRESS
E931 D1             1661      POP     DE ;TWICE
E932 D9             1662      EXX ;POINT OUR REGS
E933 E1             1663      POP     HL
E934 D1             1664      POP     DE
E935 D5             1665      PUSH    DE ;PUT BACK
E936 E5             1666      PUSH    HL
E937 D9             1667      EXX
E938 D5             1668      PUSH    DE ;PUT BACK RETURNS
E939 E5             1669      PUSH    HL
E93A D9             1670      EXX
E93B C9             1671      RET
E93C             1672 ;
E93C E93C          1673 ENDCK: EQU    $
E93C 7A             1674      LD      A,D
E93D BC             1675      CP      H
E93E C0             1676      RET     NZ
E93F 7B             1677      LD      A,E
E940 BD             1678      CP      L
E941 C9             1679      RET
E942             1680 ;
E942 E942          1681 BADBYT: EQU    $
E942 08             1682      EX      AF,AF' ;GET FHEADING FLAGS
E943 20 0B          1683      JR      NZ,BADB2 ;GO AROUND HEADING
E945 E5             1684      PUSH    HL ;WE NEED
E946 21 75 E4      1685      LD      HL,TESTHD ;POINT HEADING
E949 CD BA E1      1686      CALL    MSGOUT ;PRINT IT

```

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

E94C	E1	1687	POP	HL	
E94D	3E 55	1688	LD	A,55H	;SET HEADING FLAGS
E94F	B7	1689	OR	A	;SET THOSE FLAGS!
E950	08	1690	BADB2: EX	AF,AF'	;PUT IT BACK!
E951	C5	1691	PUSH	BC	
E952	D5	1692	PUSH	DE	;I NEED DE
E953	EB	1693	EX	DE,HL	; FOR HL
E954	CD D1 EA	1694	CALL	QUIK	;SEE IF HE'S THERE
E957	C2 D4 E1	1695	JP	NZ,FINISH	;YEP-GO TO HIM
E95A	CD 0F E2	1696	CALL	ADDCOL	;PRINT ADDRESS
E95D	06 05	1697	LD	B,5	;PRINT 5 SPACES
E95F	CD D2 E2	1698	CALL	SPACES	
E962	EB	1699	EX	DE,HL	
E963	D1	1700	POP	DE	;RESTORE EVERYTHING
64	0E 01	1701	LD	C,1	;CREATE MASK
66	7E	1702	BADBY2: LD	A,(HL)	
E967	AB	1703	XOR	B	;SET ERROR BITS
E968	A1	1704	AND	C	;PEEL OFF CURRENT BITS
E969	E5	1705	PUSH	HL	;I NEED
E96A	20 10	1706	JR	NZ,BADBIT	
E96C	21 A6 E4	1707	LD	HL,OKMSG	
E96F	CD BA E1	1708	BADBY3: CALL	MSGOUT	;PRINT MESSAGE
E972	E1	1709	POP	HL	;RESTORE
E973	CB 21	1710	SLA	C	;ROTATE MASK
E975	30 EF	1711	JR	NC,BADBY2	;LOOP TILL ROTATE THRU
E977	C1	1712	POP	BC	;RESTORE "C"
E978	CD 05 E2	1713	CALL	CRLF	;NEW LINE!
E97B	C9	1714	RET		
E97C	21 A1 E4	1715	BADBIT: LD	HL,BADMSG	;POINT BAD MSG
E97F	18 EE	1716	JR	BADBY3	;PRINT IT UP THERE!
E981		1717	STARPT: EQU	*	
E981	3E 2A	1718	LD	A,'*	
E983	18 02	1719	JR	STARP3	;GO PRINT IT
E985	3E 08	1720	STARP2: LD	A,CNTRLH	;FORM BACKSPACE
E987	C3 0C E0	1721	STARP3: JP	SEND	;GO PRINT IT & RET

```

E98A      1723 ;
E98A      1724 ;
E98A      1725 ;
E98A      1726 ;      PROM PACK COMMAND
E98A      1727 ;
E98A      1728 ;
E98A      1729 ;
E98A      E98A      1730 PROMPK: EQU      $
E98A      CD 2F E2  1731          CALL  SCANHL      ;SKIP "PP"
E98D      C2 FD DF  1732 PROMP1: JF      NZ,PCOLD  ;COLD START
E990      C3 FA DF  1733          JF      PWARM      ;WARM START
E993      1734 ;
E993      1735 ;      PROM PACK EQUATES
E993      1736 ;
E993      DFFD      1737 PCOLD: EQU      0DFFDH
E993      DFFA      1738 PWARM: EQU     0DFFAH
E993      1739 ;
E993      1740 ;
E993      1741 ;
E993      1742 ;
E993      1743 ;
E993      1744 ;      CENTRONICS PRINTER DRIVER
E993      1745 ;
E993      1746 ;
E993      E993      1747 CENDRV: EQU     $
E993      1748 ;
E993      F5          1749          PUSH  AF
E994      CD 1B E0  1750          CALL  VIDEO
E997      FE 0A      1751          CP    LF
E999      28 14      1752          JR    Z,CENGBK
E99B      F5          1753          PUSH  AF
E99C      DB FF      1754 CENBSY: IN   A,OFFH
E99E      CB 7F      1755          BIT   7,A
E9A0      20 FA      1756          JR    NZ,CENBSY
E9A2      F1          1757          POP   AF
E9A3      F6 80      1758          OR    80H
E9A5      D3 FF      1759          OUT  OFFH,A
E9A7      E6 7F      1760          AND  7FH
E9A9      D3 FF      1761          OUT  OFFH,A
E9AB      F6 80      1762          OR    80H
E9AD      D3 FF      1763          OUT  OFFH,A
E9AF      F1          1764 CENGBK: POP   AF
E9B0      C9          1765          RET

```

```

E9B1          1767 ;
E9B1          1768 ;
E9B1          1769 ;
E9B1          1770 ;      VIDEO DRIVER ROUTINES
E9B1          1771 ;
E9B1          1772 ;
E9B1          1773 ;
E9B1          1774 ;      INITIALIZE VIDEO BOARD
E9B1          1775 ;
E9B1          1776 VIDINT: EQU  $
E9B1 21 80 F0 1777          LD  HL,VID
E9B4 3E F8    1778          LD  A,TOPHRG
E9B6 36 20    1779 CLR1:  LD  (HL),SPACE
E9B8 23       1780          INC  HL
E9B9 BC       1781          CP   H
E9BA 20 FA    1782          JR   NZ,CLR1
E9BC 65       1783          LD  H,L
E9BD FD 75 68 1784          LD  (IY+LINE),L
E9C0 FD 74 69 1785          LD  (IY+LINE+1),H
E9C3 FD 75 6A 1786          LD  (IY+CHR),L
E9C6 FD 74 6B 1787          LD  (IY+CHR+1),H
E9C9 CD 10 EB 1788          CALL WCSET      ;MOVE USER CHR SET
E9CC          1789 ;
E9CC          1790 ;      WRITE CURSOR ROUTINE
E9CC          1791 ;
E9CC          1792 WCUR:  EQU  $
E9CC CD D6 E9 1793          CALL PTRSET
E9CF 7E       1794          LD  A,(HL)
E9D0 FD 77 67 1795          LD  (IY+VDHLD),A
E9D3 36 5F    1796          LD  (HL),05FH
E9D5 C9       1797          RET
E9D6          1798 ;
E9D6          1799 ;      SET CURSOR POINTER ROUTINE
E9D6          1800 ;
E9D6          1801 PTRSET: EQU  $
E9D6 21 80 F0 1802          LD  HL,VID
E9D9 FD 5E 68 1803          LD  E,(IY+LINE)
E9DC FD 56 69 1804          LD  D,(IY+LINE+1)
E9DF 19       1805          ADD  HL,DE
E9E0 FD 5E 6A 1806          LD  E,(IY+CHR)
E9E3 FD 56 6B 1807          LD  D,(IY+CHR+1)
E9E6 19       1808          ADD  HL,DE
E9E7 C9       1809          RET
E9E8          1810 ;
E9E8          1811 ;      REPLACE CHARACTER UNDER CURSOR
E9E8          1812 ;
E9E8          1813 REC:  EQU  $
E9E8 CD D6 E9 1814          CALL PTRSET
E9EB FD 7E 67 1815          LD  A,(IY+VDHLD)
E9EE 77       1816          LD  (HL),A
E9EF C9       1817          RET

```

```

E9F0          1819 ;
E9F0          1820 ;
E9F0          1821 ;
E9F0          1822 ;      VIDEO DRIVER ENTRY POINT
E9F0          1823 ;
E9F0          1824 ;
E9F0          1825 ;
E9F0          1826 CHROT1: EQU    $
E9F0 FD E5    1827          PUSH  IY
E9F2 CD A2 E1 1828          CALL  GETIY
E9F5 F5       1829          PUSH  AF
E9F6 C5       1830          PUSH  BC
E9F7 D5       1831          PUSH  DE
E9F8 E5       1832          PUSH  HL
E9F9 4F       1833          LD    C,A
E9FA CD E8 E9 1834          CALL  REC      ;REPLACE CURSOR
E9FD 79       1835          LD    A,C
E9FE FE 0C    1836          CP    0CH      ;FORM FEED
EA00 28 43    1837          JR    Z,FRMFED
EA02 FE 0D    1838          CP    CR      ;CAR RET
EA04 28 44    1839          JR    Z,CARRET
EA06 FE 0A    1840          CP    LF      ;LINE FEED
EA08 28 45    1841          JR    Z,LINFED
EA0A FE 17    1842          CP    CNTRLW
EA0C CA A3 EA 1843          JP    Z,CURUP
EA0F FE 1A    1844          CP    CNTRLZ
EA11 28 3C    1845          JR    Z,LINFED
EA13 FE 01    1846          CP    CNTRLA
EA15 CA BA EA 1847          JP    Z,CURLFT
EA18 FE 13    1848          CP    CNTRLS
EA1A 28 18    1849          JR    Z,CURRGT
EA1C FE 08    1850          CP    CNTRLH      ;BACKSPACE?
EA1E 28 72    1851          JR    Z,BAKSPC
EA20 FE 11    1852          CP    CNTRLQ      ;HOME?
EA22 CA C3 EA 1853          JP    Z,HOMEUCU
EA25 FE 20    1854          CP    SPACE
EA27 30 0A    1855          JR    NC,OKDATA
EA29 CD CC E9 1856          CALL  WCUR
EA2C          1857 ;
EA2C          1858 RETURN: EQU    $
EA2C E1       1859          POP  HL
EA2D D1       1860          POP  DE
EA2E C1       1861          POP  BC
EA2F F1       1862          POP  AF
EA30 FD E1    1863          POP  IY
EA32 C9       1864          RET
EA33          1865 ;
EA33          1866 ; DATA OK FOR DISPLAY
EA33          1867 ;
EA33          1868 OKDATA: EQU    $
EA33 71       1869          LD    (HL),C
EA33          1870 CURRGT: EQU    $
EA34 13       1871          INC  DE
EA35 7B       1872          LD    A,E
EA36 E6 3F    1873          AND  3FH
EA38 28 06    1874          JR    Z,NXLOC
EA3A FD 73 6A 1875 OKDAT1: LD    (IY+CHR),E
EA3D FD 72 6B 1876          LD    (IY+CHR+1),D

```

EA40	CD CC E9	1877	NXLOC: CALL	WCUR
EA43	18 E7	1878	JR	RETURN
EA45		1879	;	
EA45		1880	;	FORM FEED
EA45		1881	;	
	EA45	1882	FRMFED: EQU	\$
EA45	CD B1 E9	1883	CALL	VIDINT
EA48	18 E2	1884	JR	RETURN
EA4A		1885	;	
EA4A		1886	;	CARRIAGE RETURN
EA4A		1887	;	
	EA4A	1888	CARRET: EQU	\$
EA4A	11 00 00	1889	LD	DE,0
EA4D	18 EB	1890	JR	OKDAT1
EA4F		1891	;	
EA4F		1892	;	LINE FEED ROUTINE
EA4F		1893	;	
	EA4F	1894	LINFED: EQU	\$
EA4F	FD 5E 68	1895	LD	E,(IY+LINE)
EA52	FD 56 69	1896	LD	D,(IY+LINE+1)
EA55	7B	1897	LD	A,E
EA56	E6 C0	1898	AND	0COH
EA58	CB 07	1899	RLC	A
EA5A	CB 07	1900	RLC	A
EA5C	CB 22	1901	SLA	D
EA5E	CB 22	1902	SLA	D
EA60	B2	1903	OR	D
EA61	FE 1D	1904	CP	1DH
EA63	28 15	1905	JR	Z,LLN
EA65	FD 6E 68	1906	LD	L,(IY+LINE)
EA68	FD 66 69	1907	LD	H,(IY+LINE+1)
EA6B	11 40 00	1908	LD	DE,64
EA6E	19	1909	ADD	HL,DE
EA6F	FD 75 68	1910	LD	(IY+LINE),L
EA72	FD 74 69	1911	LD	(IY+LINE+1),H
EA75	CD CC E9	1912	CALL	WCUR
EA78	18 B2	1913	JR	RETURN
EA7A	11 80 F0	1914	LLN: LD	DE,VID
EA7D	21 C0 F0	1915	LD	HL,VID+64
EA80	01 40 07	1916	LD	BC,2048-192
EA83	ED B0	1917	LDIR	
EA85	3E BF	1918	LLN1: LD	A,0BFH
EA87	36 20	1919	LD	(HL),SPACE
EA89	2B	1920	DEC	HL
EA8A	BD	1921	CP	L
EA8B	20 F8	1922	JR	NZ,LLN1
EA8D	CD CC E9	1923	CALL	WCUR
EA90	18 9A	1924	JR	RETURN
EA92		1925	;	
EA92		1926	;	BACKSPACE ROUTINE
EA92		1927	;	
	EA92	1928	BAKSPC: EQU	\$
EA92	3E 01	1929	LD	A,CNTRLA
EA94	CD 45 E0	1930	CALL	CHROUT
EA97	3E 20	1931	LD	A,SPACE
EA99	CD 45 E0	1932	CALL	CHROUT
EA9C	3E 01	1933	LD	A,CNTRLA
EA9E	CD 45 E0	1934	CALL	CHROUT


```

EAA1 18 89          1935          JR      RETURN
EAA3          1936 ;
EAA3          1937 ; CURSOR UP ROUTINE
EAA3          1938 ;
EAA3          EAA3          1939 CURUP: EQU      $
EAA3 FD 5E 68      1940          LD      E,(IY+LINE)
EAA6 FD 56 69      1941          LD      D,(IY+LINE+1)
EAA9 7B           1942          LD      A,E
EAAA B2           1943          OR      D
EAAB 28 E3        1944          JR      Z,BAKSPC-2
EAAD EB           1945          EX      DE,HL
EAAE 11 C0 FF     1946          LD      DE,-64
EAB1 19           1947          ADD     HL,DE
EAB2 FD 75 68     1948          LD      (IY+LINE),L
EAB5 FD 74 69     1949          LD      (IY+LINE+1),H
EAB8 18 86        1950          JR      NXLOC
EABA          1951 ;
EABA          1952 ; CURSOR LEFT ROUTINE
EABA          1953 ;
EABA          EABA          1954 CURLFT: EQU     $
EABA 7A           1955          LD      A,D
EABB B3           1956          OR      E
EABC CA 2C EA     1957          JP      Z,RETURN
EABF 1B           1958          DEC     DE
EAC0 C3 3A EA     1959          JP      OKDAT1
EAC3          1960 ;
EAC3          1961 ; HOME UP CURSOR ROUTINE
EAC3          1962 ;
EAC3          EAC3          1963 HOMECU: EQU     $
EAC3 FD 36 68 00  1964          LD      (IY+LINE),0
EAC7 FD 36 69 00  1965          LD      (IY+LINE+1),0;HOME UP LINE COUNT
EACB 11 00 00     1966          LD      DE,0
EACE C3 3A EA     1967          JP      OKDAT1 ;GO HOME UP CHR AND RE
    
```

```

EAD1          1969 ;
EAD1          1970 ;
EAD1          1971 ;
EAD1          1972 ;      KEYBOARD QUICK CHECK
EAD1          1973 ;
EAD1          1974 ;      SCANS FOR :   CONTROL C
EAD1          1975 ;                      ESCAPE
EAD1          1976 ;                      RUN / STOP
EAD1          1977 ;
EAD1          1978 ;
          EAD1 1979 QUIK: EQU $
          EAD1 1980 ESCCHK: EQU $          ;FOR PREVIOUS ROUTINES
EAD1 FD E5    1981      PUSH IY
EAD3 CD A2 E1 1982      CALL GETIY
EAD6 FD 7E 45 1983      LD A,(IY+CMTRFG);GET MOTOR FLAG
EAD9 F6 01    1984      OR 1          ;SET MASK
EADB D3 FE    1985      OUT KYPORT,A
EADD DB FE    1986      IN A,KYPORT
EADF CB 67    1987      BIT 4,A
EAE1 28 13    1988      JR Z,QUIK1
EAE3 FD 7E 45 1989      LD A,(IY+CMTRFG);GET FLAGS
EAE6 E6 F0    1990      AND OFOH      ;MASK FOR ZERO
EAE8 D3 FE    1991      OUT KYPORT,A
EAEA DB FE    1992      IN A,KYPORT
EAEC CB 47    1993      BIT 0,A
EAE E 28 06   1994      JR Z,QUIK1
EAF0 CB 57    1995      BIT 2,A
EAF2 28 06    1996      JR Z,QUIK3
EAF4 18 11    1997      JR QUKRT1
EAF6 3E 1B    1998 QUIK1: LD A,ESC      ;FORM ESCAPE
EAF8 18 12    1999      JR QUKRET
EAF A FD 7E 45 2000 QUIK3: LD A,(IY+CMTRFG);GET MOTOR FLAGS
EAFD F6 03    2001      OR 3          ;SET MASK BITS
EAF F D3 FE   2002      OUT KYPORT,A
B01 DB FE    2003      IN A,KYPORT
EB03 CB 47    2004      BIT 0,A
EB05 28 03    2005      JR Z,QUIK4
EB07 AF      2006 QUKRT1: XOR A
EB08 18 02    2007      JR QUKRET
EBOA 3E 03    2008 QUIK4: LD A,CNTRLC
EBOC B7      2009 QUKRET: OR A
EB0D FD E1    2010      POP IY
EB0F C9      2011      RET

```

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

```

EB10          2013 ;
EB10          2014 ;
EB10          2015 ;
EB10          2016 ;      WRITE USER CHARACTER SET
EB10          2017 ;
EB10          2018 ;
EB10          2019 ;
EB10          2020 WCSET: EQU $
EB10 21 FE ED 2021      LD HL,CHRSET
EB13 11 00 FC 2022      LD DE,0FC00H
EB16 01 00 02 2023      LD BC,512
EB19 ED B0    2024      LDIR
EB1B C9      2025      RET
    
```

```

EB1C      2027 ;
EB1C      2028 ;
EB1C      2029 ;
EB1C      2030 ;      KEYBOARD INPUT ROUTINE
EB1C      2031 ;
EB1C      2032 ;
EB1C      2033 ;
EB1C      EB1C      2034 CHRIN1: EQU $
EB1C      2035 ;*****
EB1C      2036 ;KEYBOARD INPUT ROUTINE
EB1C      2037 ;VERSION 1.0      4/17/78
EB1C      00FE      2038 KYPORT: EQU OFEH      ;ON EXIDY COMPUTER
EB1C      0100      2039 DTIME: EQU 100H      ;TO BE DETERMINED
EB1C      2040 ;*****
EB1C      2041 ;
EB1C      2042 ;
EB1C      2043 ;INITIALIZATION
EB1C      2044 ;
EB1C      FD E5      2045 KEYBD:  PUSH  IY
EB1E      CD A2 E1   2046                CALL  GETIY
EB21      C5         2047                PUSH  BC      ;PUSH REGS ON STACK
EB22      D5         2048                PUSH  DE
EB23      E5         2049                PUSH  HL
EB24      DD E5      2050                PUSH  IX
EB26      3E 01      2051                LD    A,1      ;LOOK FOR REPEAT KEY
EB28      D3 FE      2052                OUT   KYPORT,A ;SEND MASK
EB2A      DB FE      2053                IN    A,KYPORT
EB2C      CB 4F      2054                BIT   1,A      ;REPEAT?
EB2E      20 0E      2055                JR    NZ,NORPT ;NO-GO ON
EB30      01 88 13   2056                LD    BC,5000 ;DELAY FOR REPEAT
EB33      0B         2057 REPET:  DEC   BC
EB34      78         2058                LD    A,B
EB35      B1         2059                OR    C      ;DONE?
EB36      20 FB      2060                JR    NZ,REPET ;NO-
EB38      FD 7E 6C   2061                LD    A,(IY+LSTKEY);GET LAST KEY
EB3B      C3 10 EC   2062                JP    FINEND  ;GO BACK
EB3E      AF         2063 NORPT:  XOR   A      ;CLEAR A
EB3F      0E FE      2064                LD    C,KYPORT ;LOAD KEYBOARD PORT NO.
EB41      5F         2065                LD    E,A      ;CLEAR E
EB42      CB FB      2066                SET   7,E      ;SET SCAN ONCE FLAG
EB44      16 00      2067 MLOOP:  LD    D,0      ;CLEAR SPECIAL KEY FLAGS
EB46      42         2068                LD    B,D      ;CLEAR NEW FLAGS REG
EB47      26 00      2069                LD    H,0      ;CLEAR SECTION COUNTER
EB49      DD 21 1E EC 2070                LD    IX,INSTBL ;LOAD INSTRUCTION TABLE POINTER
EB4D      ED 61      2071 SLOOP:  OUT   (C),H    ;OUTPUT SECTION NO.
EB4F      2E 01      2072                LD    L,1      ;LOAD BIT POSITION REG
EB51      ED 78      2073 BLOOP:  IN    A,(C)    ;INPUT SECTION BYTE
EB53      A5         2074                AND   L      ;TEST BIT
EB54      C2 E2 EB   2075                JP    NZ,ABIT1 ;JUMP IF BIT=1
EB57      E5         2076                PUSH HL      ;LOAD DEBOUNCE TIMER
EB58      21 00 01   2077                LD    HL,DTIME ;LOAD TIME
EB5B      2D         2078 DEBOUN: DEC   L      ;COUNT DOWN
EB5C      20 FD      2079                JR    NZ,DEBOUN
EB5E      25         2080                DEC   H
EB5F      20 FA      2081                JR    NZ,DEBOUN
EB61      E1         2082                POP   HL      ;RESTORE HL
EB62      ED 78      2083                IN    A,(C)    ;INPUT SECTION BYTE
EB64      A5         2084                AND   L      ;TEST BIT

```

EB65	C2 E2 EB	2085	JP	NZ,ABIT1	;JUMP IF BIT=1
EB68	DD 56 00	2086	LD	D,(IX+0)	;LOAD SPECIAL KEY FLAGS
EB6B	CB 7A	2087	BIT	7,D	;TEST FOR CODED KEY
EB6D	28 1A	2088	JR	Z,CODED	;JUMP IF CODED KEY
EB6F	CB 62	2089	BIT	4,D	;TEST FOR GRAPHIC KEY
EB71	28 02	2090	JR	Z,NONGRA	;JUMP IF NOT GRAPHIC KEY
EB73	CB F0	2091	SET	6,B	;SET GRAPHIC FLAG
EB75	CB 5A	2092	NONGRA: BIT	3,D	;TEST FOR CONTROL KEY
EB77	28 02	2093	JR	Z,NONCON	;JUMP IF NOT CONTROL KEY
EB79	CB E8	2094	SET	5,B	;SET CONTROL FLAG
EB7B	CB 52	2095	NONCON: BIT	2,D	;TEST FOR SHIFT KEY
EB7D	28 02	2096	JR	Z,NSHIFT	;JUMP IF NOT SHIFT KEY
EB7F	CB E0	2097	SET	4,B	;SET SHIFT FLAG
EB81	CB 4A	2098	NSHIFT: BIT	1,D	;TEST FOR SHIFT/LOCK KEY
EB83	28 5D	2099	JR	Z,ABIT1	;JUMP IF NOT SHIFT/LOCK KE
EB85	CB D8	2100	SET	3,B	;SET SHIFT/LOCK FLAG
EB87	18 59	2101	JR	ABIT1	
EB89	E5	2102	CODED: PUSH	HL	;CALCULATE TABLE POSITION
EB8A	D5	2103	PUSH	DE	
EB8B	DD E5	2104	PUSH	IX	
EB8D	E1	2105	POP	HL	
EB8E	11 1E EC	2106	LD	DE,INSTBL	
EB91	B7	2107	OR	A	;CLEAR CARRY
EB92	ED 52	2108	SBC	HL,DE	
EB94		2109	;DECIDE WHICH	TABLE TO USE	
EB94	D1	2110	POP	DE	
EB95	CB 70	2111	BIT	6,B	;TEST FOR GRAPHIC KEY
EB97	28 15	2112	JR	Z,NOGRAP	;JUMP IF NO GRAPHIC KEY
EB99	CB 72	2113	BIT	6,D	;TEST FOR NONGRAPHIC CHAR.
EB9B	28 11	2114	JR	Z,NOGRAP	;JUMP IF NOT GRAPHIC CHAR.
EB9D	D5	2115	PUSH	DE	;CALCULATE TABLE POINTER
EB9E	11 6E EC	2116	LD	DE,GRATBL	;LOAD GRAPHIC TABLE START
EBA1	19	2117	ADD	HL,DE	
EBA2	7E	2118	LD	A,(HL)	;LOAD A WITH CODE
EBA3	CB FF	2119	SET	7,A	;SET GRAPHIC BIT
EBA5	D1	2120	POP	DE	;TEST FOR SHIFT
EBA6	CB 60	2121	BIT	4,B	
EBA8	28 26	2122	JR	Z,FINOP	;JUMP IF NO SHIFT
EBAA	CB F7	2123	SET	6,A	;SET SHIFT BIT
EBAC	18 22	2124	JR	FINOP	;JUMP TO FINISH OP.
EBAE	D5	2125	NOGRAP: PUSH	DE	
EBAF	CB 68	2126	BIT	5,B	;TEST FOR CONTROL KEY
EBB1	28 05	2127	JR	Z,SKIP1	;SKIP IF NOT CONTROL KEY
EBB3	11 BE EC	2128	LD	DE,CONTRL	;LOAD CONTROL TABLE START
EBB6	18 15	2129	JR	SKIP4	
EBB8	CB 60	2130	SKIP1: BIT	4,B	;TEST FOR SHIFT KEY
EBBA	28 05	2131	JR	Z,SKIP2	;SKIP IF NOT SHIFT KEY
EBBC	11 0E ED	2132	LD	DE,SHITBL	;LOAD SHIFT TABLE START
EBBF	18 0C	2133	JR	SKIP4	
EBC1	CB 58	2134	SKIP2: BIT	3,B	;TEST FOR SHIFT/LOCK KEY
EBC3	28 05	2135	JR	Z,SKIP3	;SKIP IF NOT SHIFT/LOCK KE
EBC5	11 5E ED	2136	LD	DE,SLOTBL	;LOAD SHIFT/LOCK TABLE STAP
EBC8	18 03	2137	JR	SKIP4	
EBCA	11 AE ED	2138	SKIP3: LD	DE,UNSTBL	;LOAD UNSHIFT TABLE START
EBCD	19	2139	SKIP4: ADD	HL,DE	;SETUP POINTER
EBCE	D1	2140	POP	DE	
EBCF	7E	2141	LD	A,(HL)	;LOAD A WITH CODE
EBD0	CB E3	2142	FINOP: SET	4,E	;SET END OF SCAN FLAG

```

EBD2 CB DB          2143 SET 3,E      ;SET SECTION FLAG
EBD4 CB D3          2144 SET 2,E      ;SET BIT POSITION FLAG
EBD6 CB BB          2145 RES 7,E      ;RESET SCAN ONCE FLAG
EBD8 E1             2146 POP HL       ;WAIT FOR KEY TO BE RELEASED
EBD9 F5             2147 PUSH AF
EBDA ED 78          2148 WAITK: IN A,(C)    ;INPUT SECTION BYTE
EBDC A5             2149 AND L
EBDD 28 FB          2150 JR Z,WAITK
EBDF F1             2151 POP AF
EBE0 18 0B          2152 JR BITEND
EBE2 CB 05          2153 ARBIT1: RLC L      ;SHIFT L
EBE4 3E 20          2154 LD A,20H     ;TEST FOR LAST BIT POSITION
EBE6 BD             2155 CP L
EBE7 20 02          2156 JR NZ,SKIP5 ;SKIP IF NOT END
EBE9 CB D3          2157 SET 2,E      ;SET BIT POSITION FLAG
EBEB DD 23          2158 SKIP5: INC IX    ;INCREMENT TABLE POINTER
EBED CB 53          2159 BITEND: BIT 2,E   ;TEST FOR BIT END
EBEF CA 51 EB      2160 JP Z,BLOOP
EBF2 CB 93          2161 RES 2,E      ;RESET BIT FLAG
EBF4 CB 5B          2162 BIT 3,E      ;TEST FOR SECTION FLAG
EBF6 20 07          2163 JR NZ,SECEND ;JUMP TO SECTION END
EBF8 24             2164 INC H        ;INCREMENT SECTION
EBF9 3E 10          2165 LD A,16     ;TEST FOR END
EBFB BC             2166 CP H
EBFC C2 4D EB      2167 JP NZ,SLOOP ;STAY IN LOOP
EBFF CB 9B          2168 SECEND: RES 3,E   ;RESET SECTION FLAG
EC01 37             2169 SCF         ;SET CARRY
EC02 CB 7B          2170 BIT 7,E      ;TEST SCAN ONCE FLAG
EC04 28 03          2171 JR Z,SKIP6
EC06 AF             2172 XOR A       ;CLEAR A AND CARRY
EC07 CB E3          2173 SET 4,E      ;SET END OF SCAN
EC09 CB 63          2174 SKIP6: BIT 4,E   ;TEST FOR END OF SCAN
EC0B 20 03          2175 JR NZ,FINEND ;JUMP TO FINISH TEST
EC0D C3 44 EB      2176 JP MLOOP
EC10 DD E1          2177 FINEND: POP IX   ;RESTORE REGISTERS
EC12 E1             2178 POP HL
EC13 D1             2179 POP DE
EC14 C1             2180 POP BC
EC15 B7             2181 OR A
EC16 28 03          2182 JR Z,KEYRET ;NO CHAR TODAY
EC18 FD 77 6C      2183 LD (IY+LSTKEY),A ;SAVE IN CASE REPEAT
EC1B FD E1          2184 KEYRET: POP IY
EC1D C9             2185 RET         ;RETURN FROM SUBROUTINE
EC1E               2186 ;
EC1E 00 90 88 82   2187 INSTBL: DB 0,90H,88H,82H,84H ;INSTRUCTION TABLE(0)
      84
EC23               2188 ;
EC23 40 80 00 40   2189 DB 40H,80H,0,40H,0 ;(1)
      00
EC28 40 40 40 40   2190 DB 40H,40H,40H,40H,40H ;(2)
      40
EC2D 40 40 40 40   2191 DB 40H,40H,40H,40H,40H ;(3)
      40
EC32 40 40 40 40   2192 DB 40H,40H,40H,40H,40H ;(4)
      40
EC37 40 40 40 40   2193 DB 40H,40H,40H,40H,40H ;(5)
      40
EC3C 40 40 40 40   2194 DB 40H,40H,40H,40H,40H ;(6)

```

EC41	40 40 40 40 40	2195	DB	40H,40H,40H,40H,40H ;(7)
EC46	40 40 40 40 40	2196	DB	40H,40H,40H,40H,40H ;(8)
EC4B	40 40 40 40 40	2197	DB	40H,40H,40H,40H,40H ;(9)
EC50	40 40 40 40 40	2198	DB	40H,40H,40H,40H,40H ;(A)
EC55	40 40 00 00 40	2199	DB	40H,0,0,40H,40H ;(B)
EC5A	40 40 40 40 40	2200	DB	40H,40H,40H,40H,0 ;(C)
EC5F	00 40 40 40 40	2201	DB	40H,40H,40H,40H,40H ;(D)
EC64	40 40 40 00 40	2202	DB	40H,40H,0,40H,40H ;(E)
EC69	40 00 00 00 40	2203	DB	0,0,0,40H,40H ;(F)
EC6E	00 00 00 00 00	2204	GRATBL: DB	0,0,0,0,0 ;GRAPHIC TABLE(0)
EC73	00 0C 00 00 0D	2205	DB	0CH,0,0,0DH,0 ;(1)
EC78	00 28 27 1A 0E	2206	DB	28H,27H,1AH,0EH,0 ;(2)
EC7D	00 29 1C 1B 0F	2207	DB	29H,1CH,1BH,0FH,1 ;(3)
EC82	01 1D 11 10 03	2208	DB	1DH,11H,10H,3,2 ;(4)
EC87	02 2B 2A 1E 12	2209	DB	2BH,2AH,1EH,12H,4 ;(5)
EC8C	04 2D 2C 1F 13	2210	DB	2DH,2CH,1FH,13H,5 ;(6)
EC91	05 21 15 20 14	2211	DB	21H,15H,20H,14H,6 ;(7)
EC96	06 2E 22 16 08	2212	DB	2EH,22H,16H,8,7 ;(8)
EC9B	07 30 2F 23 17	2213	DB	30H,2FH,23H,17H,9 ;(9)
ECA0	09 25 24 19 18	2214	DB	25H,24H,19H,18H,0AH ;(A)
ECA5	0A 26 00 00 0C	2215	DB	26H,0,0,0CH,0BH ;(B)
ECAA	0B 3C 38 35 31	2216	DB	3CH,38H,35H,31H,0 ;(C)
ECAF	00 3D 39 36 33	2217	DB	3DH,39H,36H,33H,32H ;(D)
ECB4	32 3E 3A 00 37	2218	DB	3EH,3AH,0,37H,34H ;(E)
ECB9	34 00 00 00 3F	2219	DB	0,0,0,3FH,3BH ;(F)
ECBE	3B 03 00 00 00	2220	CONTRL: DB	3,0,0,0,0 ;CONTROL TABLE(0)
ECC3	00 0C 00 20 0B	2221	DB	0CH,0,20H,0BH,1BH ;(1)
ECC8	1B 18 1A 01 11	2222	DB	18H,1AH,1,11H,31H ;(2)
ECCD	31 03 04 13 17	2223	DB	3,4,13H,17H,32H ;(3)

ECD2	32 06 12 05 34	2224	DB	6,12H,5,34H,33H ;(4)
ECD7	33 02 16 07 14	2225	DB	2,16H,7,14H,35H ;(5)
ECDC	35 0D 0E 08 19	2226	DB	0DH,0EH,8,19H,36H ;(6)
ECE1	36 0B 09 0A 15	2227	DB	0BH,9,0AH,15H,37H ;(7)
ECE6	37 2C 0C 0F 39	2228	DB	2CH,0CH,0FH,39H,38H ;(8)
ECEB	38 2F 2E 3B 10	2229	DB	2FH,2EH,3BH,10H,30H ;(9)
ECF0	30 1C 00 1D 1B	2230	DB	1CH,0,1DH,1BH,3AH ;(A)
ECF5	3A 1F 0D 0A 1E	2231	DB	1FH,0DH,0AH,1EH,2DH ;(B)
ECFA	2D 2B 2A 2F 2D	2232	DB	2BH,2AH,2FH,2DH,20H ;(C)
ECFF	20 30 31 01 17	2233	DB	30H,31H,01H,17H,37H ;(D)
ED04	37 2E 1A 11 13	2234	DB	2EH,1AH,11H,13H,39H ;(E)
ED09	39 00 00 00 3D	2235	DB	0,0,0,3DH,33H ;(F)
ED0E	33 03 00 00 00	2236	SHITBL: DB	3,0,0,0,0 ;SHIFT TABLE(0)
ED13	00 0C 00 20 09	2237	DB	0CH,0,20H,9,1BH ;(1)
ED18	1B 58 5A 41 51	2238	DB	58H,5AH,41H,51H,21H ;(2)
ED1D	21 43 44 53 57	2239	DB	43H,44H,53H,57H,22H ;(3)
ED22	22 46 52 45 24	2240	DB	46H,52H,45H,24H,23H ;(4)
ED27	23 42 56 47 54	2241	DB	42H,56H,47H,54H,25H ;(5)
ED2C	25 4D 4E 48 59	2242	DB	4DH,4EH,48H,59H,26H ;(6)
ED31	26 4B 49 4A 55	2243	DB	4BH,49H,4AH,55H,27H ;(7)
ED36	27 3C 4C 4F 29	2244	DB	3CH,4CH,4FH,29H,28H ;(8)
ED3B	28 3F 3E 2B 50	2245	DB	3FH,3EH,2BH,50H,30H ;(9)
ED40	30 7C 60 7D 7B	2246	DB	7CH,60H,7DH,7BH,2AH ;(A)
ED45	2A 7F 0D 0A 7E	2247	DB	7FH,0DH,0AH,7EH,3DH ;(B)
ED4A	3D 2B 2A 2F 2D	2248	DB	2BH,2AH,2FH,2DH,20H ;(C)
ED4F	20 30 31 01 17	2249	DB	30H,31H,01H,17H,37H ;(D)
ED54	37 2E 1A 11 13	2250	DB	2EH,1AH,11H,13H,39H ;(E)
ED59	39 00 00 00 3D	2251	DB	0,0,0,3DH,33H ;(F)
ED5E	33 1B 00 00 00	2252	SLOTBL: DB	1BH,0,0,0,0 ;SHIFT/LOCK TABLE(0)

	00								
ED63	0C 00 20 0B	2253	DB	0CH,0,20H,0BH,1BH ;(1)					
	1B								
ED68	58 5A 41 51	2254	DB	58H,5AH,41H,51H,31H ;(2)					
	31								
ED6D	43 44 53 57	2255	DB	43H,44H,53H,57H,32H ;(3)					
	32								
ED72	46 52 45 34	2256	DB	46H,52H,45H,34H,33H ;(4)					
	33								
ED77	42 56 47 54	2257	DB	42H,56H,47H,54H,35H ;(5)					
	35								
ED7C	4D 4E 48 59	2258	DB	4DH,4EH,48H,59H,36H ;(6)					
	36								
ED81	4B 49 4A 55	2259	DB	4BH,49H,4AH,55H,37H ;(7)					
	37								
ED86	2C 4C 4F 39	2260	DB	2CH,4CH,4FH,39H,38H ;(8)					
	38								
ED8B	2F 2E 3B 50	2261	DB	2FH,2EH,3BH,50H,30H ;(9)					
	30								
ED90	5C 40 5D 5B	2262	DB	5CH,40H,5DH,5BH,3AH ;(A)					
	3A								
ED95	5F 0D 0A 5E	2263	DB	5FH,0DH,0AH,5EH,2DH ;(B)					
	2D								
ED9A	2B 2A 2F 2D	2264	DB	2BH,2AH,2FH,2DH,20H ;(C)					
	20								
ED9F	30 31 34 38	2265	DB	30H,31H,34H,38H,37H ;(D)					
	37								
EDA4	2E 32 35 36	2266	DB	2EH,32H,35H,36H,39H ;(E)					
	39								
EDA9	00 00 00 3D	2267	DB	0,0,0,3DH,33H ;(F)					
	33								
EDAE	1B 00 00 00	2268	UNSTBL: DB	1BH,0,0,0,0 ;UNSHIFTED TABLE(0)					
	00								
EDB3	0C 00 20 0B	2269	DB	0CH,0,20H,0BH,1BH ;(1)					
	1B								
EDB8	78 7A 61 71	2270	DB	78H,7AH,61H,71H,31H ;(2)					
	31								
EDBD	63 64 73 77	2271	DB	63H,64H,73H,77H,32H ;(3)					
	32								
EDC2	66 72 65 34	2272	DB	66H,72H,65H,34H,33H ;(4)					
	33								
EDC7	62 76 67 74	2273	DB	62H,76H,67H,74H,35H ;(5)					
	35								
EDCC	6D 6E 68 79	2274	DB	6DH,6EH,68H,79H,36H ;(6)					
	36								
EDD1	6B 69 6A 75	2275	DB	6BH,69H,6AH,75H,37H ;(7)					
	37								
EDD6	2C 6C 6F 39	2276	DB	2CH,6CH,6FH,39H,38H ;(8)					
	38								
EDDB	2F 2E 3B 70	2277	DB	2FH,2EH,3BH,70H,30H ;(9)					
	30								
EDE0	5C 40 5D 5B	2278	DB	5CH,40H,5DH,5BH,3AH ;(A)					
	3A								
EDE5	5F 0D 0A 5E	2279	DB	5FH,0DH,0AH,5EH,2DH ;(B)					
	2D								
EDEA	2B 2A 2F 2D	2280	DB	2BH,2AH,2FH,2DH,20H ;(C)					
	20								
EDEF	30 31 34 38	2281	DB	30H,31H,34H,38H,37H ;(D)					

EDF4	37 2E 32 35 36	2282	DB	2EH,32H,35H,36H,39H ;(E)
EDF9	39 00 00 00 3D	2283	DB	0,0,0,3DH,33H ;(F)
	33			

EDFE		2285 ;		
EDFE		2286 ;		
EDFE		2287 ;		
EDFE		2288 ;	USER DEFINABLE CHARACTER SET	
EDFE		2289 ;		
EDFE		2290 ;		
EDFE		2291 ;		
	EDFE	2292	CHRSET: EQU	\$
EDFE	80 80 80 80	2293	DB	80H,80H,80H,80H,80H,80H,80H,80H
	80 80 80 80			
EE06	40 40 40 40	2294	DB	40H,40H,40H,40H,40H,40H,40H,40H
	40 40 40 40			
EE0E	20 20 20 20	2295	DB	20H,20H,20H,20H,20H,20H,20H,20H
	20 20 20 20			
EE16	10 10 10 10	2296	DB	10H,10H,10H,10H,10H,10H,10H,10H
	10 10 10 10			
EE1E	00 3C 7E FF	2297	DB	00H,3CH,7EH,0FFH,0FFH,7EH,3CH,00H
	FF 7E 3C 00			
EE26	04 04 04 04	2298	DB	4,4,4,4,4,4,4,4
	04 04 04 04			
EE2E	02 02 02 02	2299	DB	2,2,2,2,2,2,2,2
	02 02 02 02			
EE36	01 01 01 01	2300	DB	1,1,1,1,1,1,1,1
	01 01 01 01			
EE3E	00 3C 42 81	2301	DB	0,3CH,42H,81H,81H,42H,3CH,0
	81 42 3C 00			
EE46	FF 00 00 00	2302	DB	0FFH,0,0,0,0,0,0,0
	00 00 00 00			
EE4E	00 FF 00 00	2303	DB	0,0FFH,0,0,0,0,0,0
	00 00 00 00			
EE56	00 00 FF 00	2304	DB	0,0,0FFH,0,0,0,0,0
	00 00 00 00			
EE5E	00 00 00 FF	2305	DB	0,0,0,0FFH,0,0,0,0
	00 00 00 00			
EE66	00 00 00 71	2306	DB	0,0,0,71H,0BEH,24H,24H,24H
	BE 24 24 24			
EE6E	81 42 24 18	2307	DB	81H,42H,24H,18H,18H,24H,42H,81H
	18 24 42 81			
EE76	00 00 00 00	2308	DB	0,0,0,0,1,6,8,8
	01 06 08 08			
EE7E	00 00 00 00	2309	DB	0,0,0,0,0C0H,30H,8,8
	C0 30 08 08			
EE86	FF 80 80 80	2310	DB	0FFH,80H,80H,80H,80H,80H,80H,80H
	80 80 80 80			
EE8E	FF 01 01 01	2311	DB	0FFH,1,1,1,1,1,1,1
	01 01 01 01			
EE96	FF FE FC FB	2312	DB	0FFH,0FEH,0FCH,0FBH,0FOH,0EOH,0COH,80H
	F0 E0 C0 80			
EE9E	FF 7F 3F 1F	2313	DB	0FFH,7FH,3FH,1FH,0FH,7,3,1
	0F 07 03 01			
EEA6	00 00 00 00	2314	DB	0,0,0,0,0FH,0FH,0FH,0FH
	0F 0F 0F 0F			
EEAE	00 00 00 00	2315	DB	0,0,0,0,0F0H,0F0H,0F0H,0F0H
	F0 F0 F0 F0			
EEB6	00 00 00 00	2316	DB	0,0,0,0,0FFH,0,0,0
	FF 00 00 00			
EEBE	10 38 7C FE	2317	DB	10H,38H,7CH,0FEH,0FEH,7CH,10H,38H
	FE 7C 10 38			

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

EEC6	00 66 FF FF	2318	DB	0,66H,0FFH,0FFH,7EH,3CH,18H,0
	7E 3C 18 00			
EECE	08 08 08 06	2319	DB	8,8,8,6,1,0,0,0
	01 00 00 00			
EED6	08 08 08 30	2320	DB	8,8,8,30H,0COH,0,0,0
	C0 00 00 00			
EEDE	80 80 80 80	2321	DB	80H,80H,80H,80H,80H,80H,80H,0FFH
	80 80 80 FF			
EEE6	01 01 01 01	2322	DB	1,1,1,1,1,1,1,0FFH
	01 01 01 FF			
EEEE	80 C0 E0 F0	2323	DB	80H,0COH,0EOH,0FOH,0FBH,0FCH,0FEH,0FFH
	F8 FC FE FF			
EEF6	01 03 07 0F	2324	DB	1,3,7,0FH,1FH,3FH,7FH,0FFH
	1F 3F 7F FF			
EEFE	0F 0F 0F 0F	2325	DB	0FH,0FH,0FH,0FH,0,0,0,0
	00 00 00 00			
EF06	F0 F0 F0 F0	2326	DB	0F0H,0F0H,0F0H,0F0H,0,0,0,0
	00 00 00 00			
EF0E	08 08 08 08	2327	DB	8,8,8,8,8,8,8,8
	08 08 08 08			
EF16	18 3C 7E FF	2328	DB	18H,3CH,7EH,0FFH,7EH,3CH,18H,0
	7E 3C 18 00			
EF1E	1C 1C 6B 7F	2329	DB	1CH,1CH,6BH,7FH,6BH,8,8,1CH
	6B 08 08 1C			
EF26	F0 F0 F0 F0	2330	DB	0F0H,0F0H,0F0H,0F0H,0FH,0FH,0FH,0FH
	0F 0F 0F 0F			
EF2E	0F 0F 0F 0F	2331	DB	0FH,0FH,0FH,0FH,0F0H,0F0H,0F0H,0F0H
	F0 F0 F0 F0			
EF36	F0 F0 F0 F0	2332	DB	0F0H,0F0H,0F0H,0F0H,0F0H,0F0H,0F0H,0F0H
	F0 F0 F0 F0			
EF3E	0F 0F 0F 0F	2333	DB	0FH,0FH,0FH,0FH,0FH,0FH,0FH,0FH
	0F 0F 0F 0F			
EF46	FF FF FF FF	2334	DB	0FFH,0FFH,0FFH,0FFH,0,0,0,0
	00 00 00 00			
EF4E	00 00 00 00	2335	DB	0,0,0,0,0FFH,0FFH,0FFH,0FFH
	FF FF FF FF			
EF56	01 02 04 08	2336	DB	1,2,4,8,10H,20H,40H,80H
	10 20 40 80			
EF5E	80 40 20 10	2337	DB	80H,40H,20H,10H,8,4,2,1
	08 04 02 01			
EF66	08 08 08 08	2338	DB	8,8,8,8,0FFH,8,8,8
	FF 08 08 08			
EF6E	00 00 00 00	2339	DB	0,0,0,0,0,0FFH,0,0
	00 FF 00 00			
EF76	00 00 00 00	2340	DB	0,0,0,0,0,0,0FFH,0
	00 00 FF 00			
EF7E	00 00 00 00	2341	DB	0,0,0,0,0,0,0,0FFH
	00 00 00 FF			
EF86	55 AA 55 AA	2342	DB	55H,0AAH,55H,0AAH,55H,0AAH,55H,0AAH
	55 AA 55 AA			
EF8E	08 08 08 08	2343	DB	8,8,8,8,0FFH,0,0,0
	FF 00 00 00			
EF96	FF FF 00 00	2344	DB	0FFH,0FFH,0,0,0,0,0,0
	00 00 00 00			
EF9E	08 08 08 08	2345	DB	8,8,8,8,0FH,8,8,8
	0F 08 08 08			
EFA6	50 A0 50 A0	2346	DB	50H,0A0H,50H,0A0H,50H,0A0H,50H,0A0H
	50 A0 50 A0			

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

EFAE	C0 C0 C0 C0	2347	DB	0C0H,0C0H,0C0H,0C0H,0C0H,0C0H,0C0H,0C0H
	C0 C0 C0 C0			
EFB6	03 03 03 03	2348	DB	3,3,3,3,3,3,3,3
	03 03 03 03			
EFBE	00 00 00 00	2349	DB	0,0,0,0,55H,0AAH,55H,0AAH
	55 AA 55 AA			
EFC6	08 08 08 08	2350	DB	8,8,8,8,0F8H,8,8,8
	F8 08 08 08			
EFCE	00 00 00 00	2351	DB	0,0,0,0,0,0,0,0,0FFH,0FFH
	00 00 FF FF			
EFD6	00 00 00 00	2352	DB	0,0,0,0,0,0,0,0,0FFH,8,8,8
	FF 08 08 08			
EFDE	00 00 00 00	2353	DB	0,0,0,0,0,0,0,0,0FH,8,8,8
	0F 08 08 08			
EFE6	00 00 00 00	2354	DB	0,0,0,0,0,0,0,0,0F8H,8,8,8
	F8 08 08 08			
EFEE	08 08 08 08	2355	DB	8,8,8,8,0FH,0,0,0
	0F 00 00 00			
EFF6	08 08 08 08	2356	DB	8,8,8,8,0F8H,0,0,0
	F8 00 00 00			

EXIDY STANDARD MONITOR SOFTWARE

07/26/78

```
EFFE      2358 ;  
EFFE      2359 ;  
EFFE      2360 ; -- END OF PROGRAM!!!!  
EFFE      2361 ;  
EFFE      2362 ;  
EFFE      2363      END
```